

Electronics Division
Box 1246
1501 Webster Street
Dayton, Ohio 45401
Telephone (513) 223-8161

## **Operating Instructions**

For Model\_

284B, 265C

SKY RAIDER

ATARI

	SL2			START 2				SR 2			5 V		5 V
LLP	SL1	x SL5	SL3	LAP	×	X START 1	RLP	SR1	x SR5	- SR 3	RRP	ON	OFF
×	· <b>x</b>	× SL4	<b>x</b>	x	×	<b>x</b>	×	x	x SR4	×	×		
•	SL6	x	SL7	-		COIN		SR 6	, <b>x</b>	SR 7		PO	WER
	x		<b>X</b> .			x		×		×	x	ÓN	OFF

- 1. Insert the 284B card into the program B connector, number side up.
- 2. Connect a speaker to the speaker leads.
- 3. Insert the 265C card into the test fixture, number side up.
- 4. Insert the Sky Raider game board into the 265C card.
- 5. Slide the POWER switch to "ON".
- 6. Push COIN or SR-6 to coin the game.
- 7. Push START 1 to start the game.
- 8. LLP AIM
  LRP SPEED
  SL-5 FIRE
- 9. START 2 is the slam switch