



ELIPHERS.COM

PARTS CATALOG


for

WURLITZER


Model **1800**

PHONOGRAPH




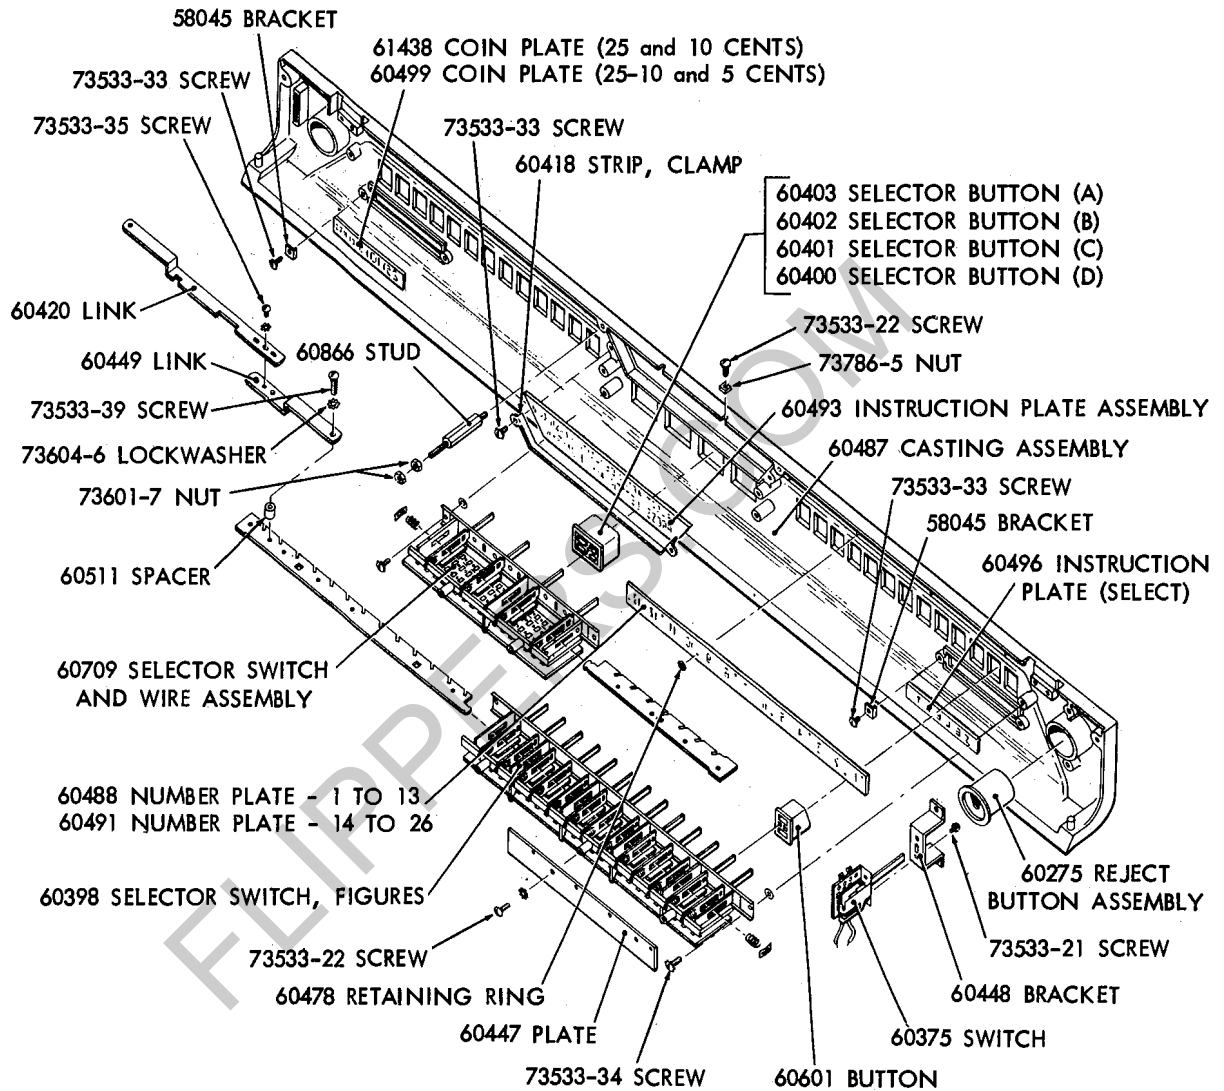


Selector Switch Assembly (Part 1)

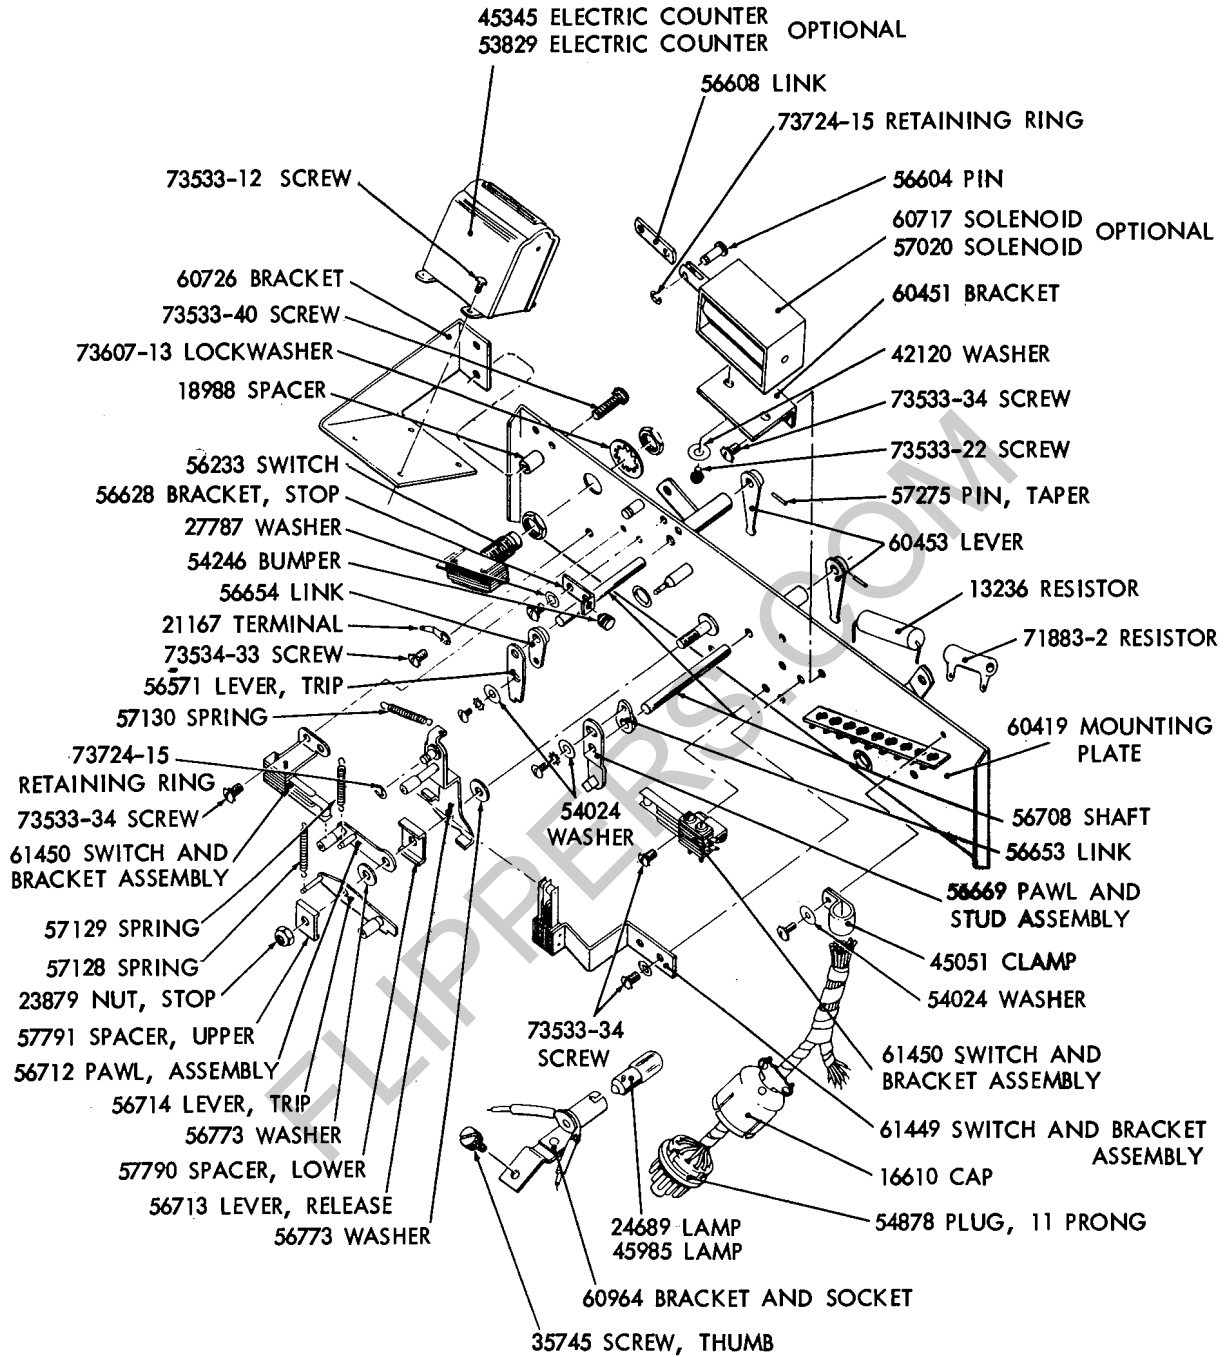


Selector Switch Assembly (Part 2)

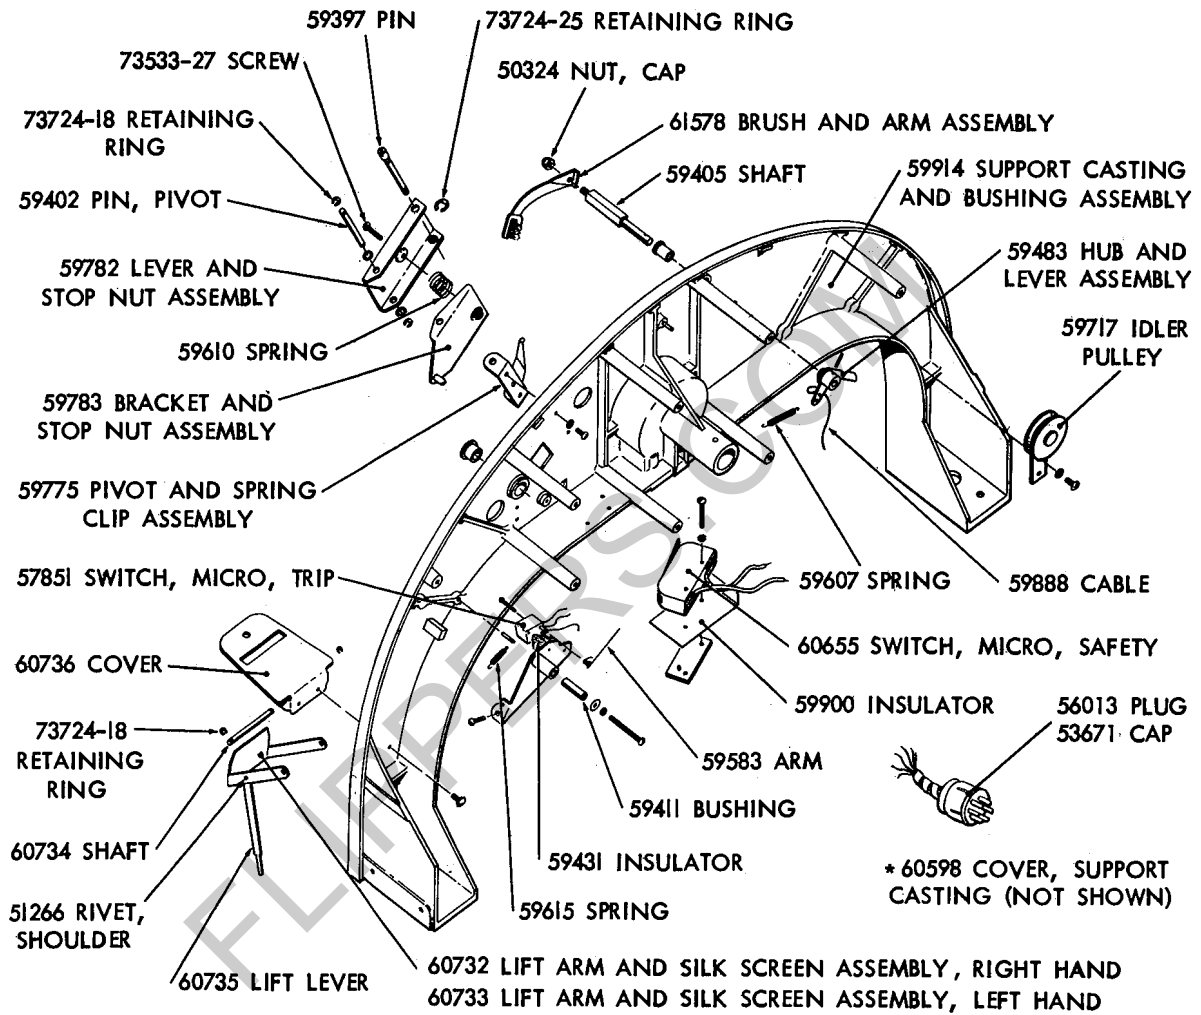


Top Support Casting Assembly

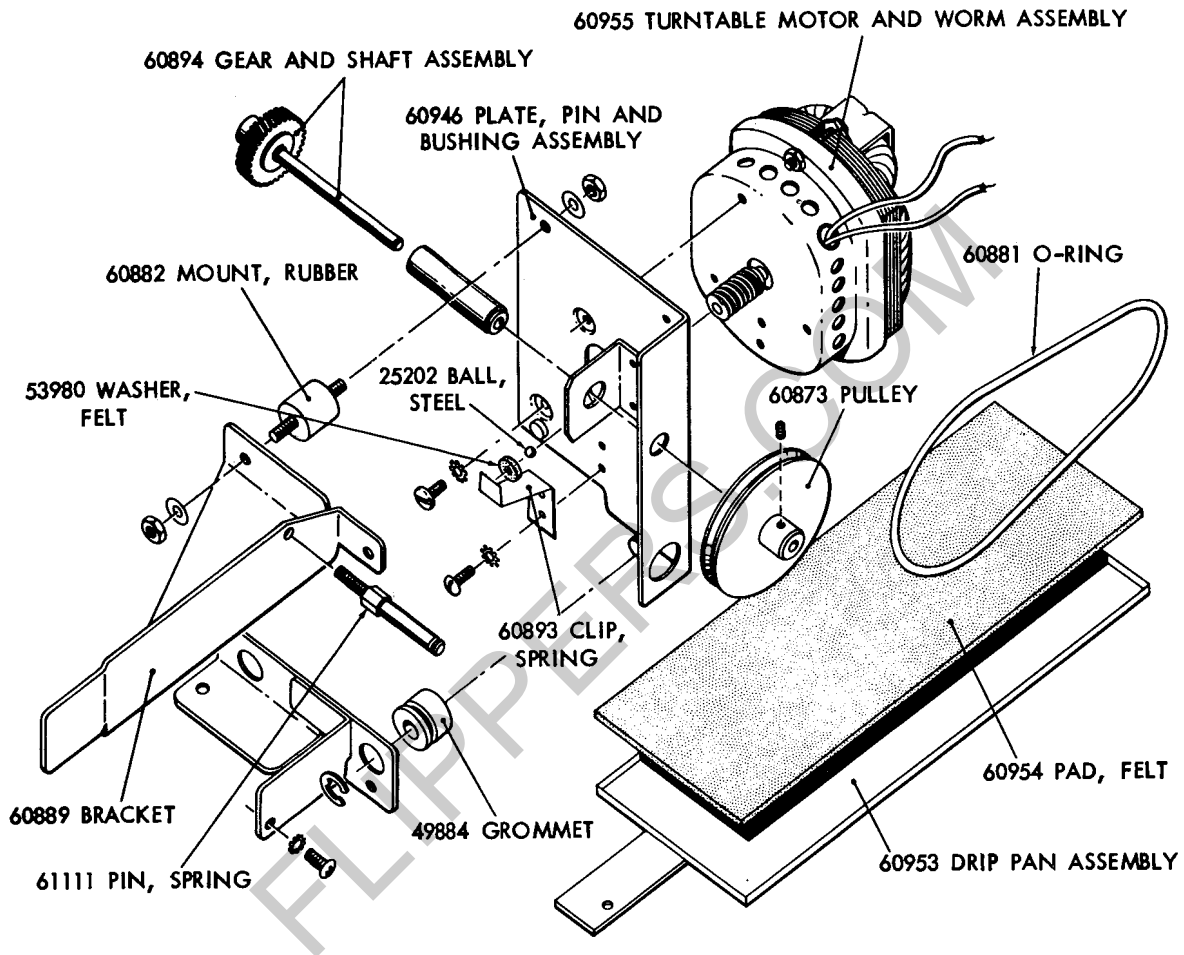


Turntable Motor and Gear and Shaft Assembly

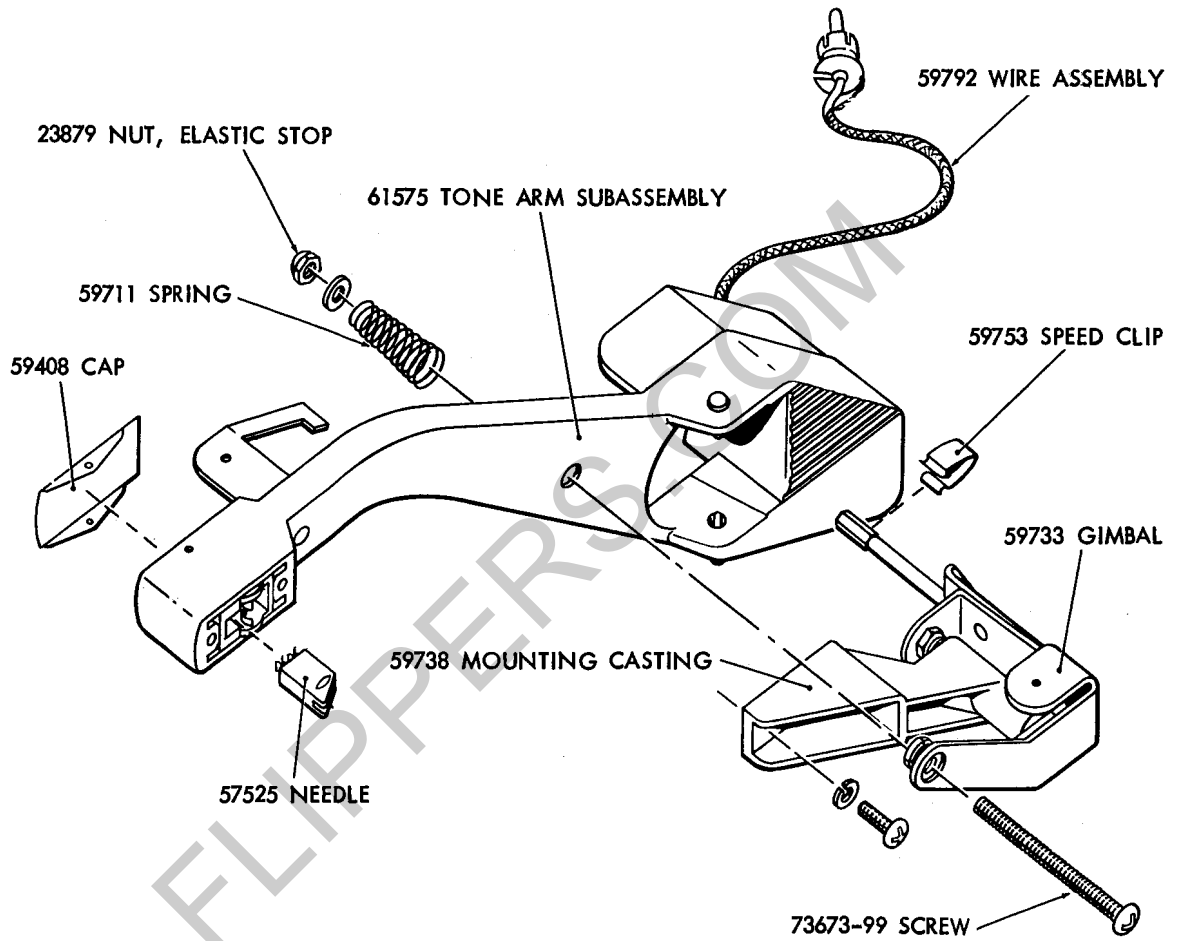


Tone Arm Assembly

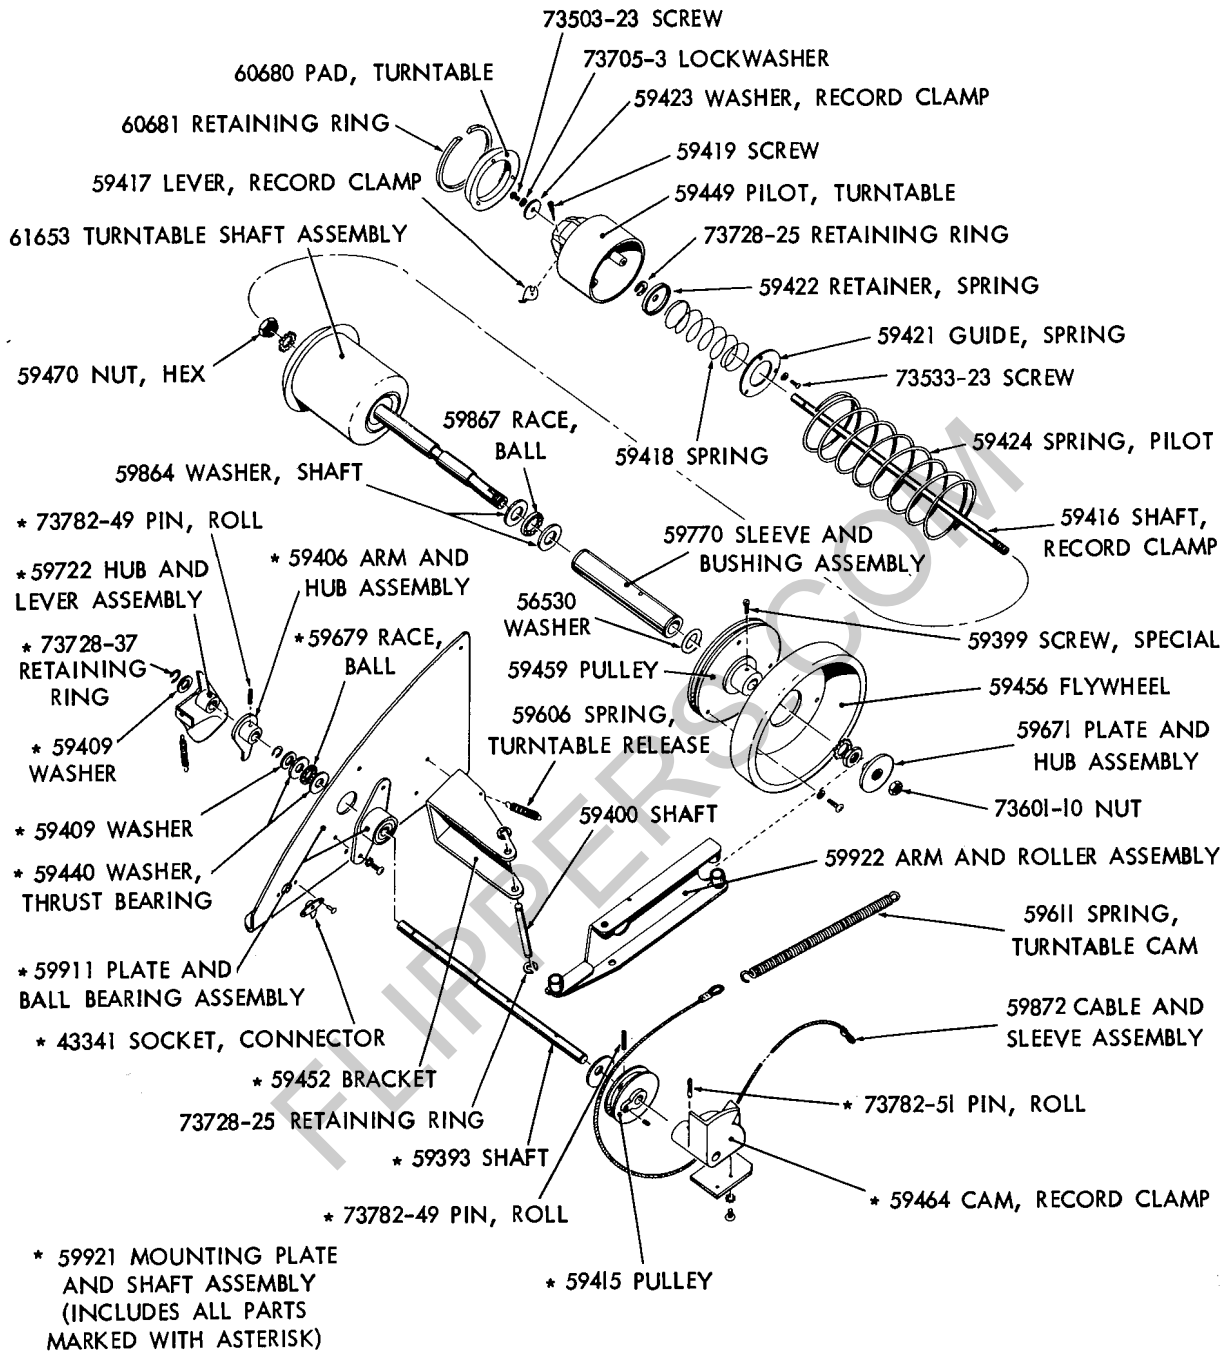


Turntable Shaft Assembly, Record Clamp Shaft, and Mounting Plate and Ball Bearing Assembly

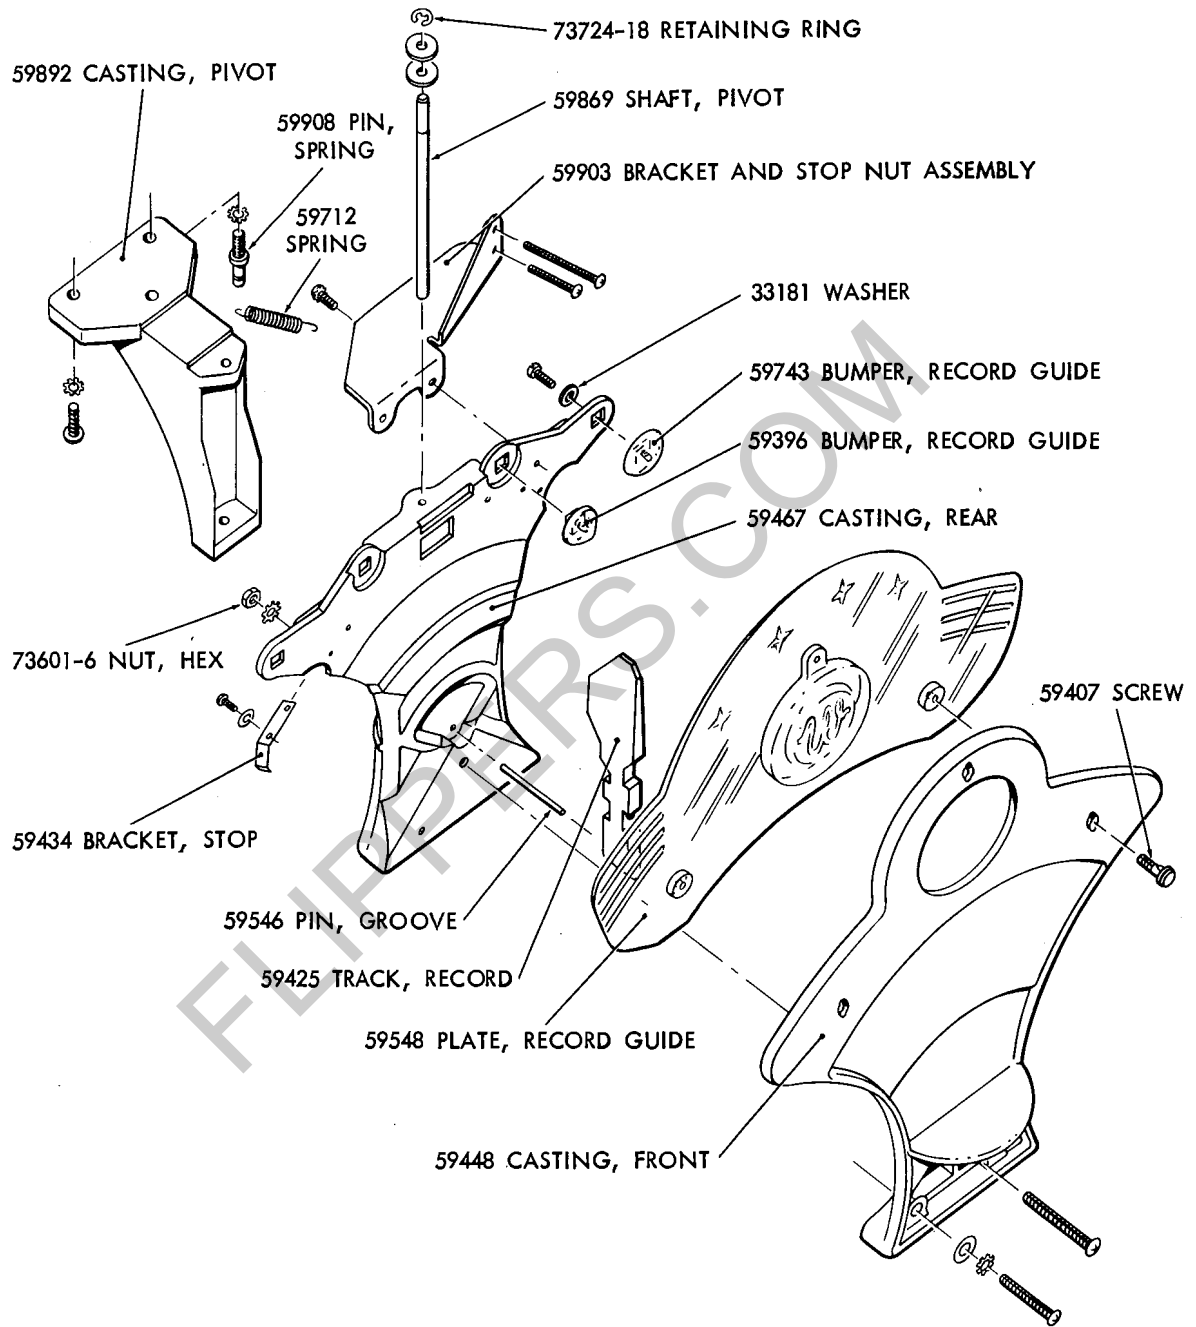


Record Guide Assembly

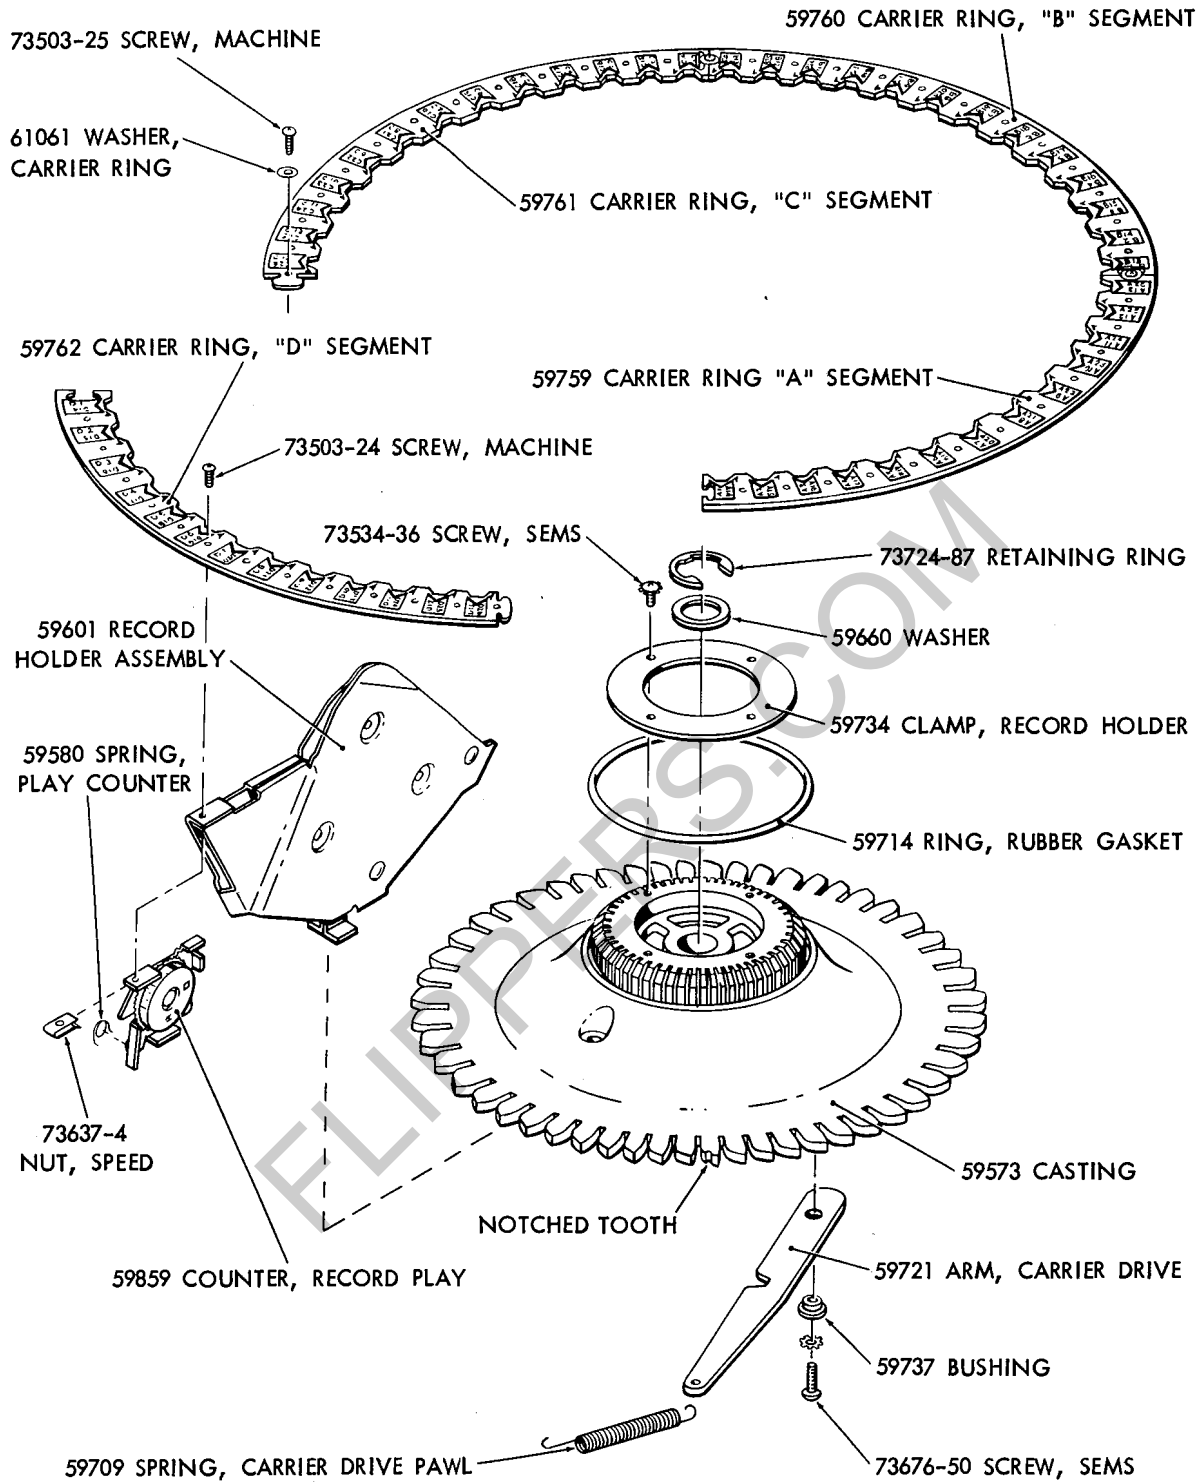


Record Carrier Assembly

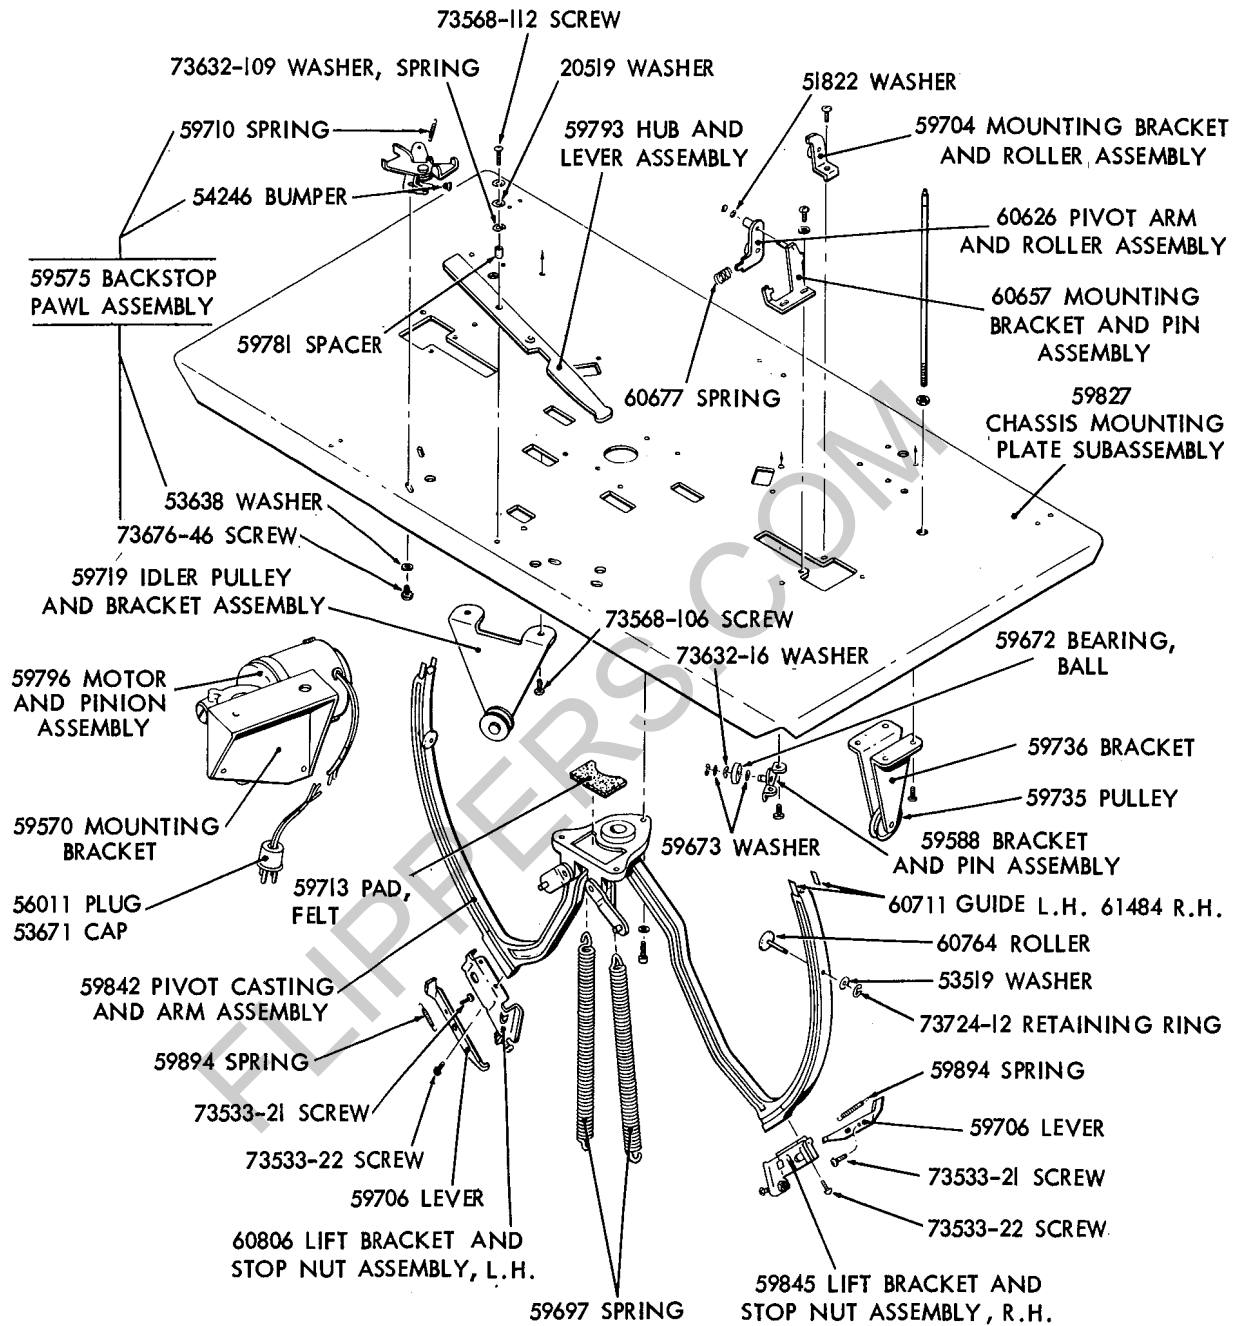


Chassis Mounting Plate and Pivot Casting and Arm Assembly

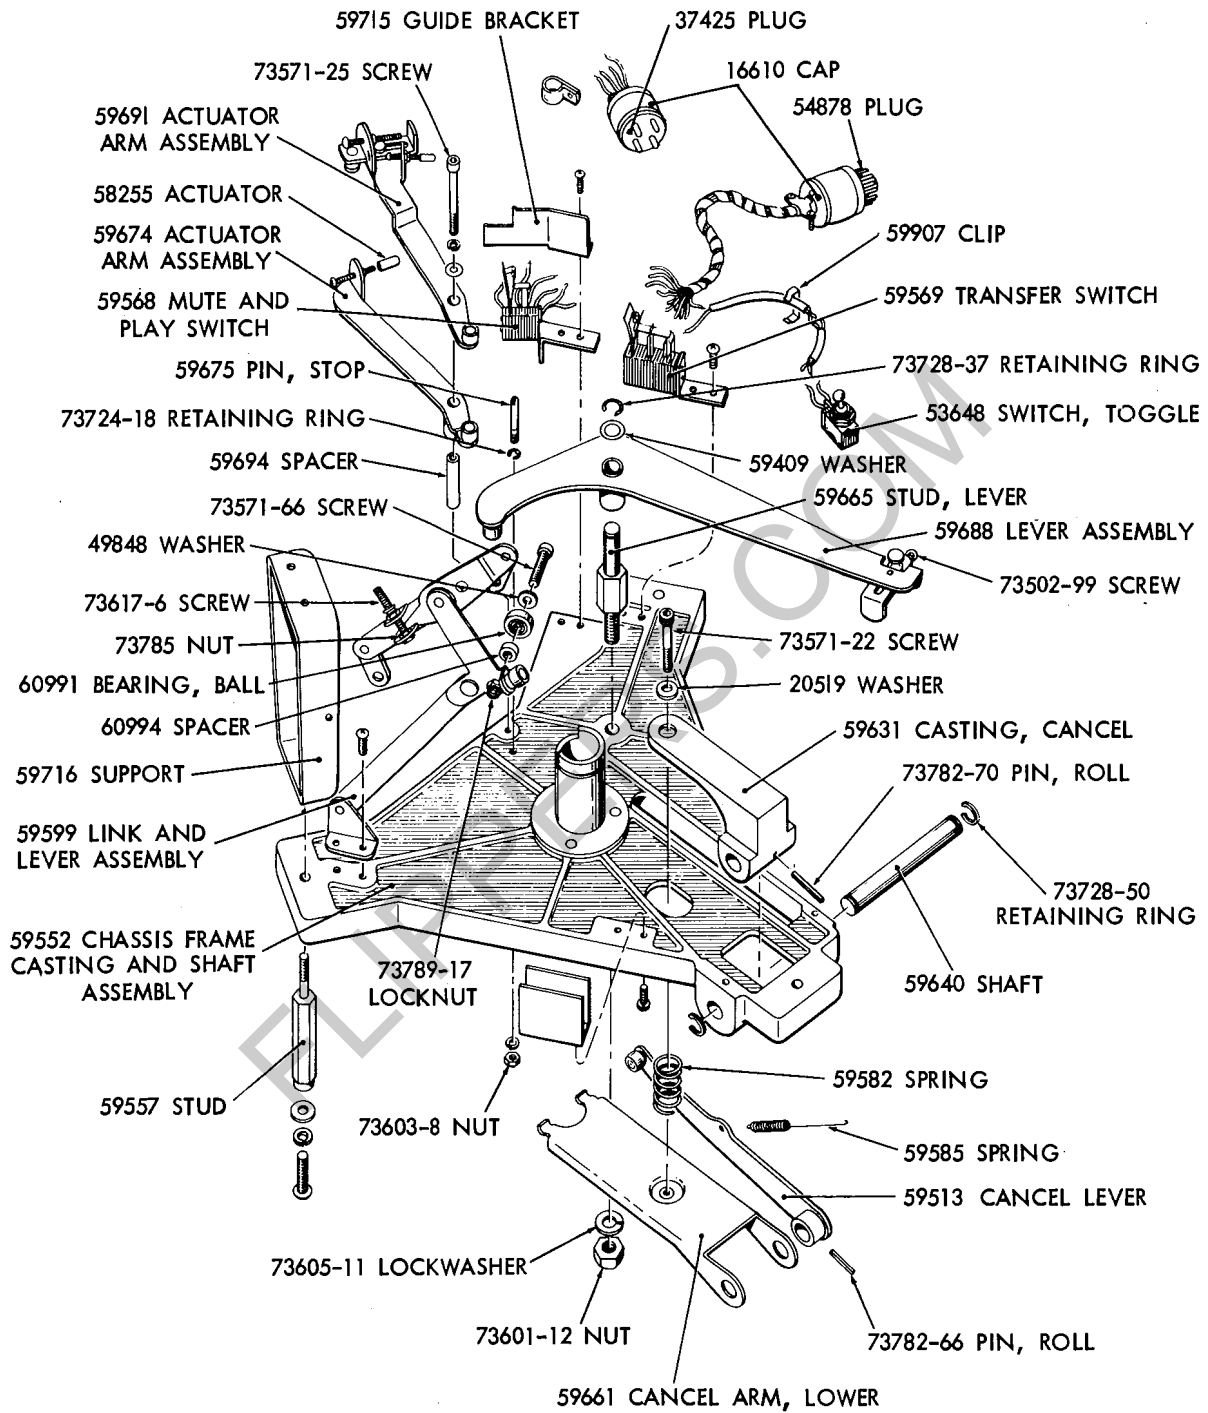


Chassis Frame Casting and Shaft Assembly

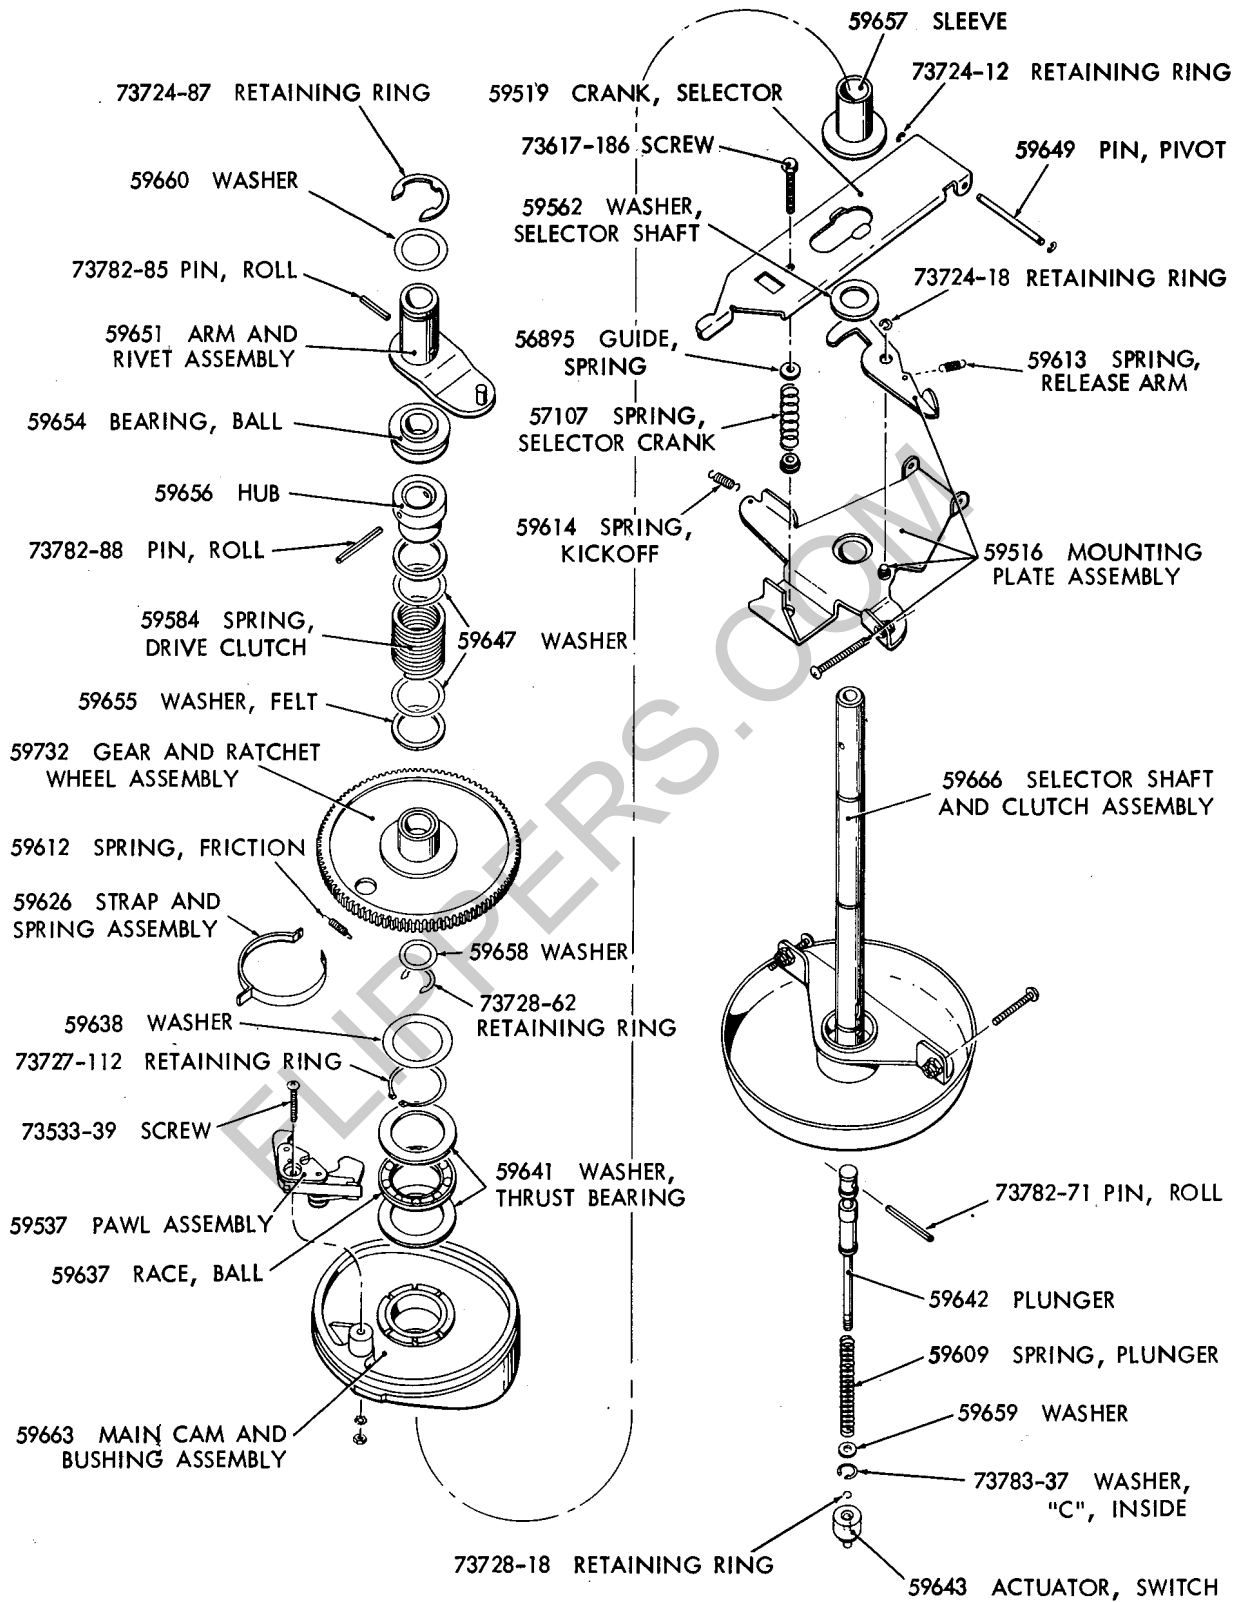


Selector Shaft Assembly and Main Cam and Bushing Assembly

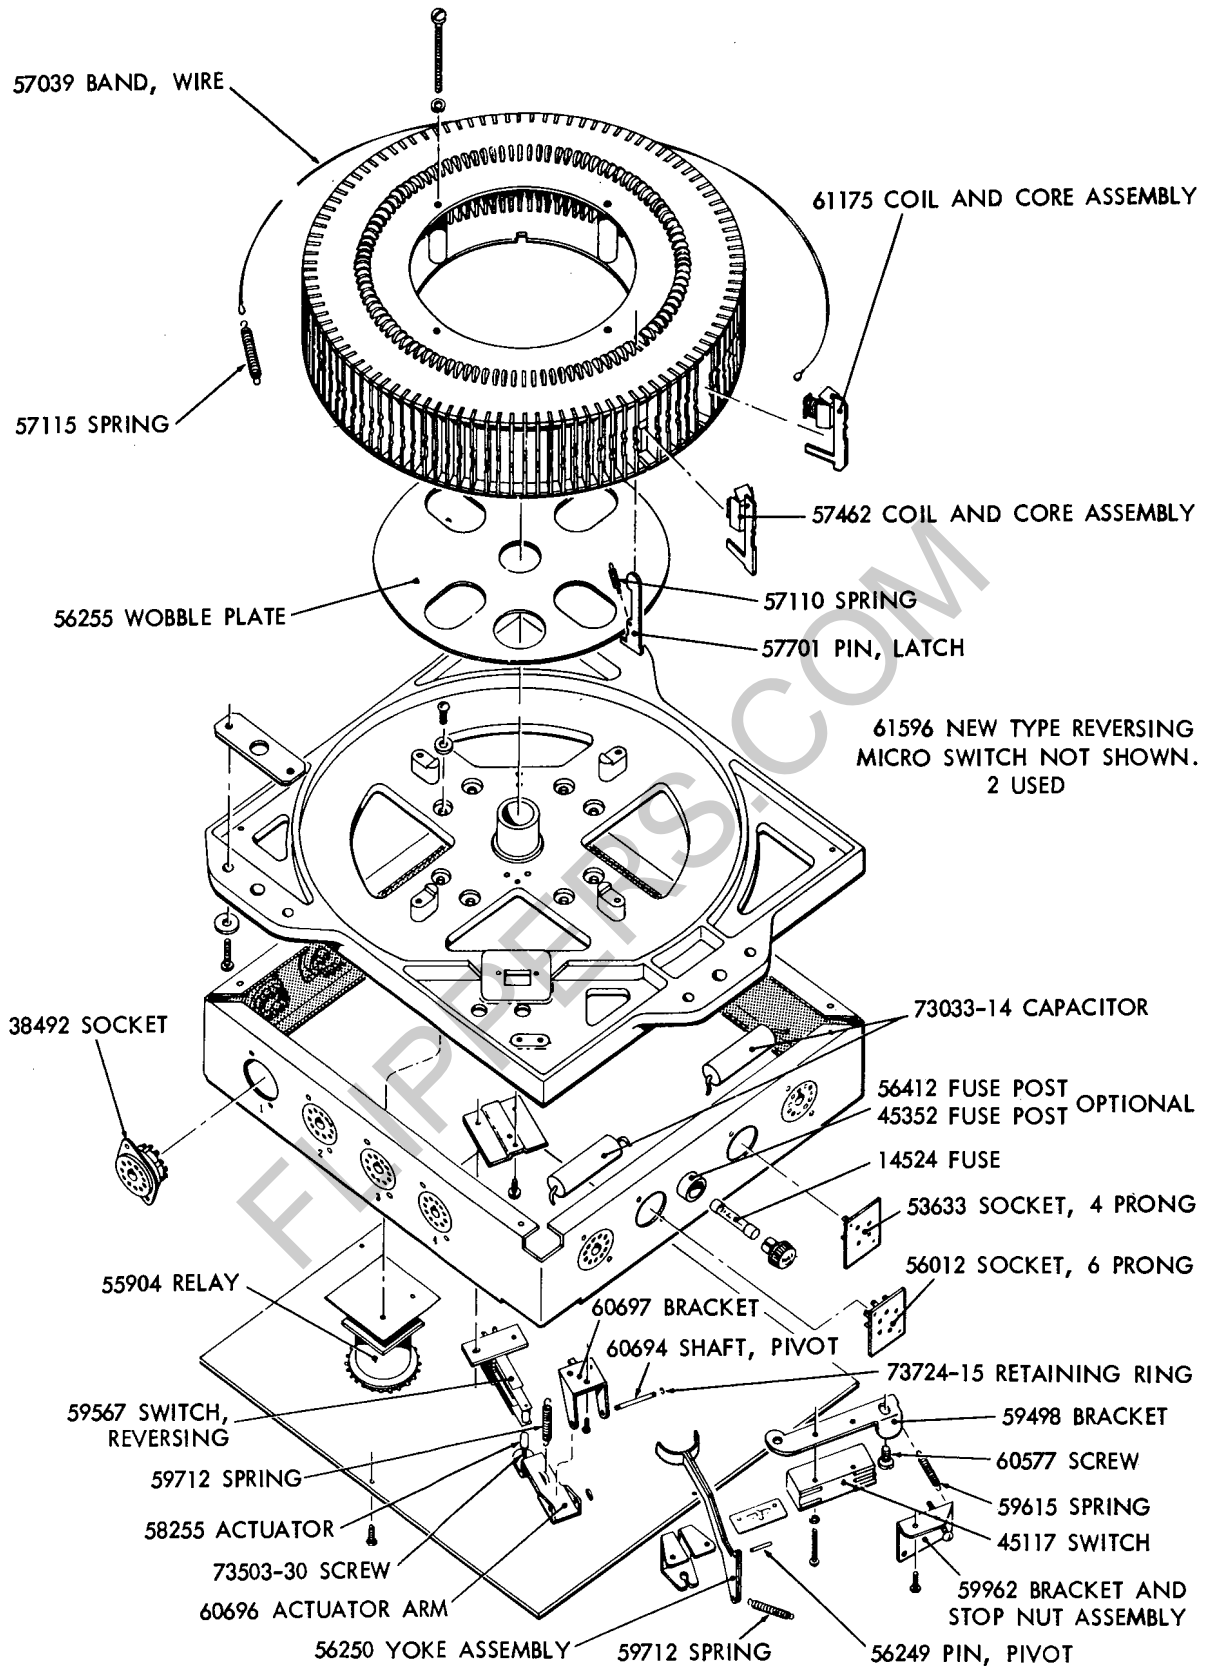

Electric Selector and Junction Box Assembly

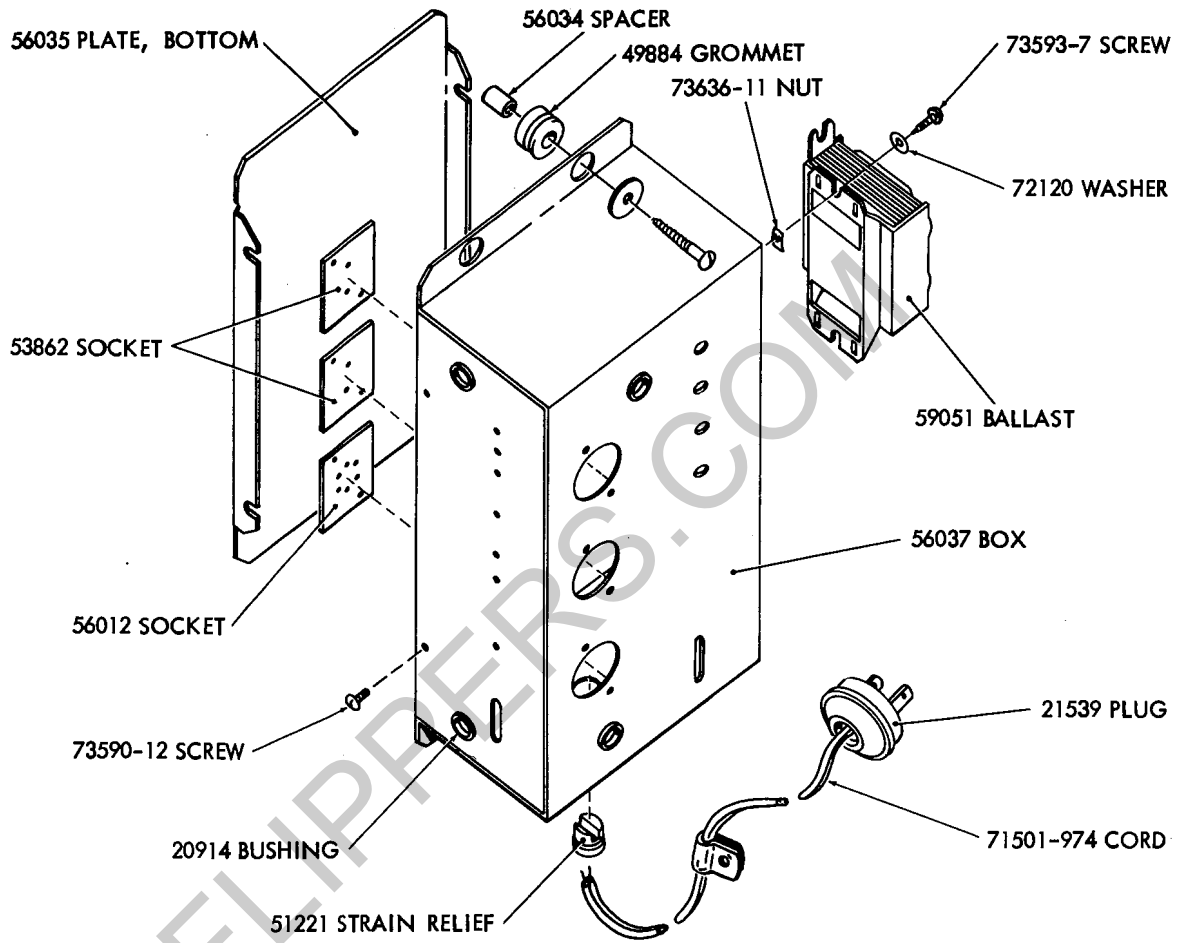

59838 Light Ballast Assembly

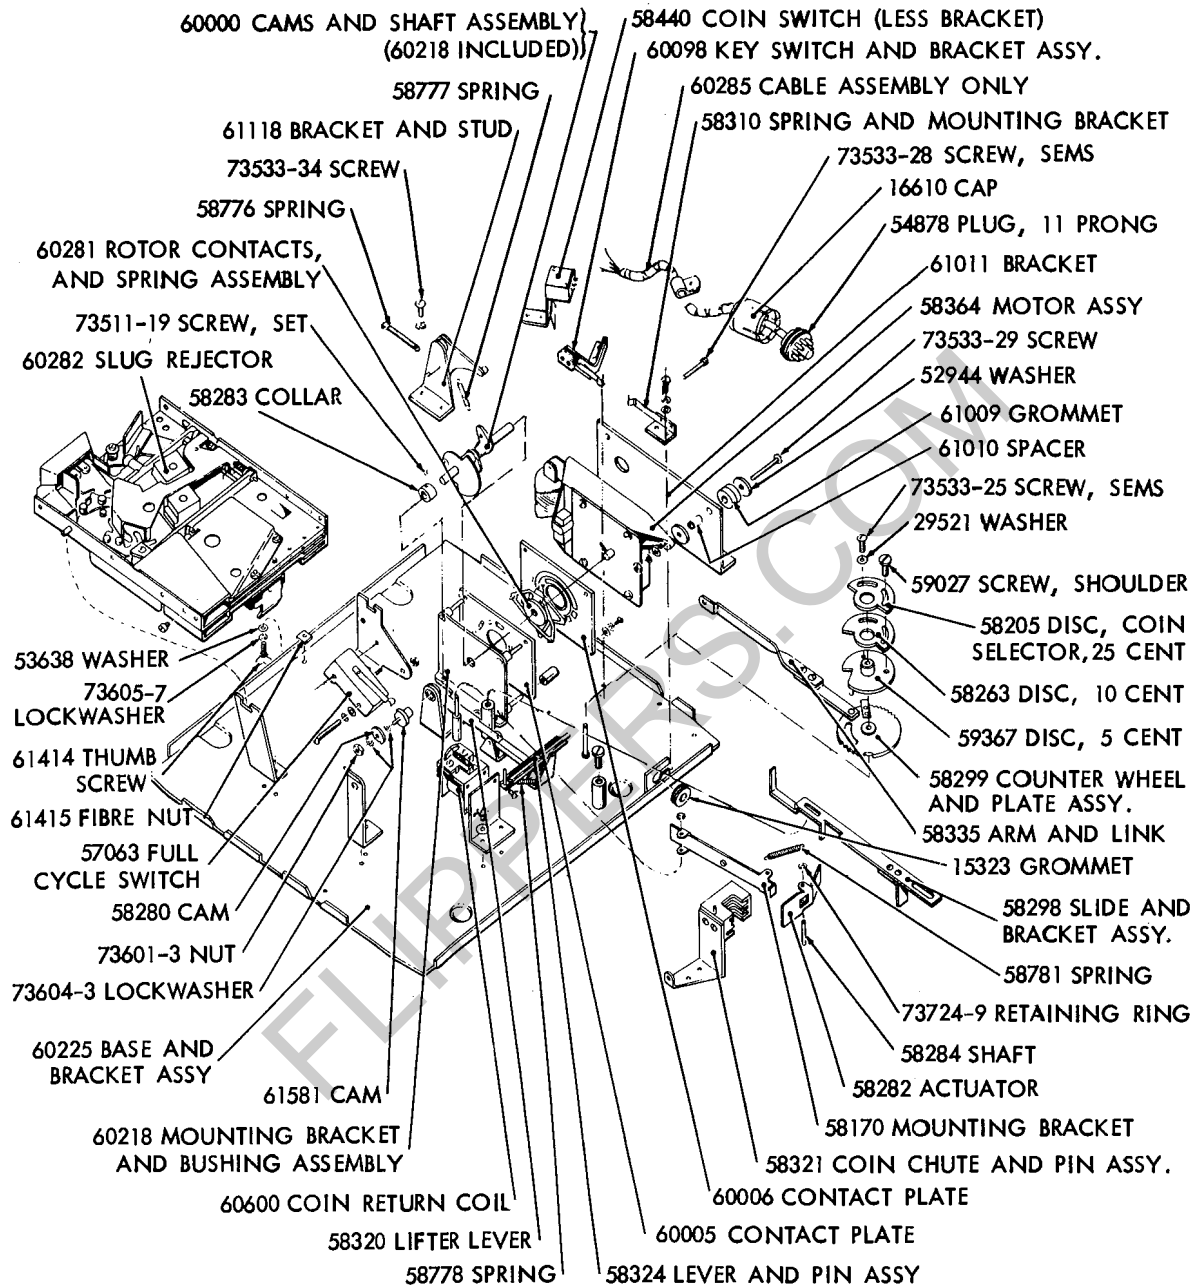


Coin Register Mechanism


ALPHABETICAL LIST OF ILLUSTRATIONS

TITLE	PAGE	TITLE	PAGE
Actuator Arm Assembly Mute and Play Switch	141	Fluorescent Lamp	135
Actuator Arm, Mute and Play Switch . . .	141	Front Grille	132
Amplifier	138, 139 & 140	Grille Plate Assembly	132
Arm and Brush Assembly	141	Inside Trim	134
Bottom Trim Plate and Rails	132	Instruction Escutcheons	136
Cam and Shaft Assembly	137	Light Ballast	97
Cancel Solenoid	137	Lock	133
Casters	133	Lower Back	131
Cheek Castings R. and L.	132	Main Cam	141
Classification Strips	136	Motor	98
Coin Bag	133	Mounting Brackets	137
Coin Box	133	Mounting Rails and Brackets	133 & 135
Coin Box Door	132	Mute and Play Switch Cam	141
Coin Counter Arm and Link Assembly . .	98	Pilaster R. and L.	132
Coin Counter Arm and Link Assembly, Yielding Member	98	Pivot, Arm and Paul Assembly	137
Coin Counter Disc Assembly	98	Plug and Switch Assembly	141
Coin Register	98 & 137	Program Castings Title Strip Holders	134
Coin Return Coil	137	Program Light	135
Coin Return Cup	132	Program Slips	133
Coin Selector Lever	137	Pulse Relay	137
Coin Selector Lifter Lever	98	Record Carrier Rings	141
Coin Switch, Actuator and Coin Paddle . .	137	Record Guide Assembly	141
Color Shields, R. and L.	132	Selector Switch Assembly	136
Contact Plate Assembly	137	Set-up Relay	137
Coupling, Insulator, and Spring Assembly	137	Shield and Dome Assembly	134
Cover Assembly	141	Slug Rejector	137
Decorative Shelf	141	Speakers and Cross-over	133
Dome and Door	134	Tone Arm Assembly	141
Dome Windows, R. and L.	134	Trim Moulding	132 & 134
Electric Selector and Junction Box	141	Trim Moulding, R. and L.	132
		Turntable Shaft Assembly	141
		Upper Back	131

Model 1800 - Key Illustrations

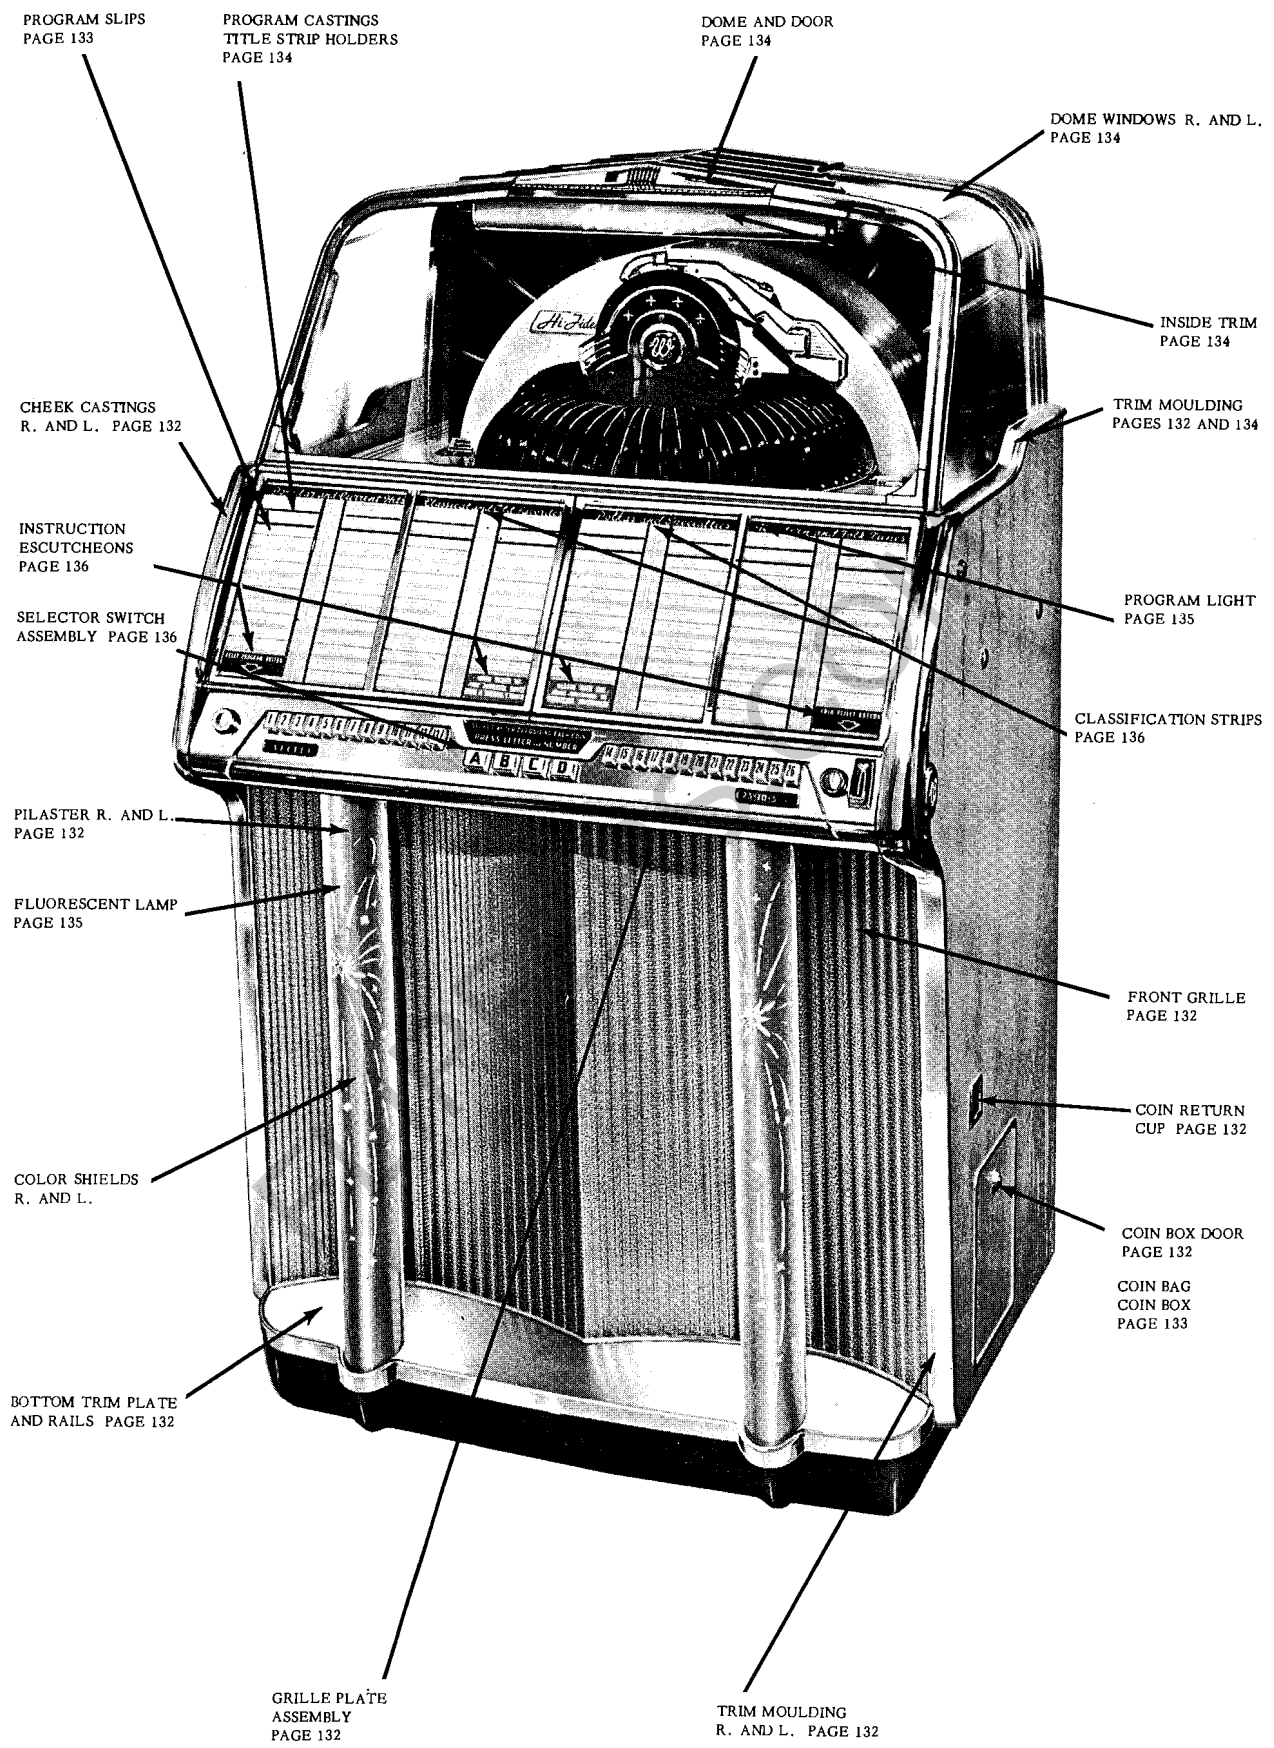

Model 1800 - Key Illustrations

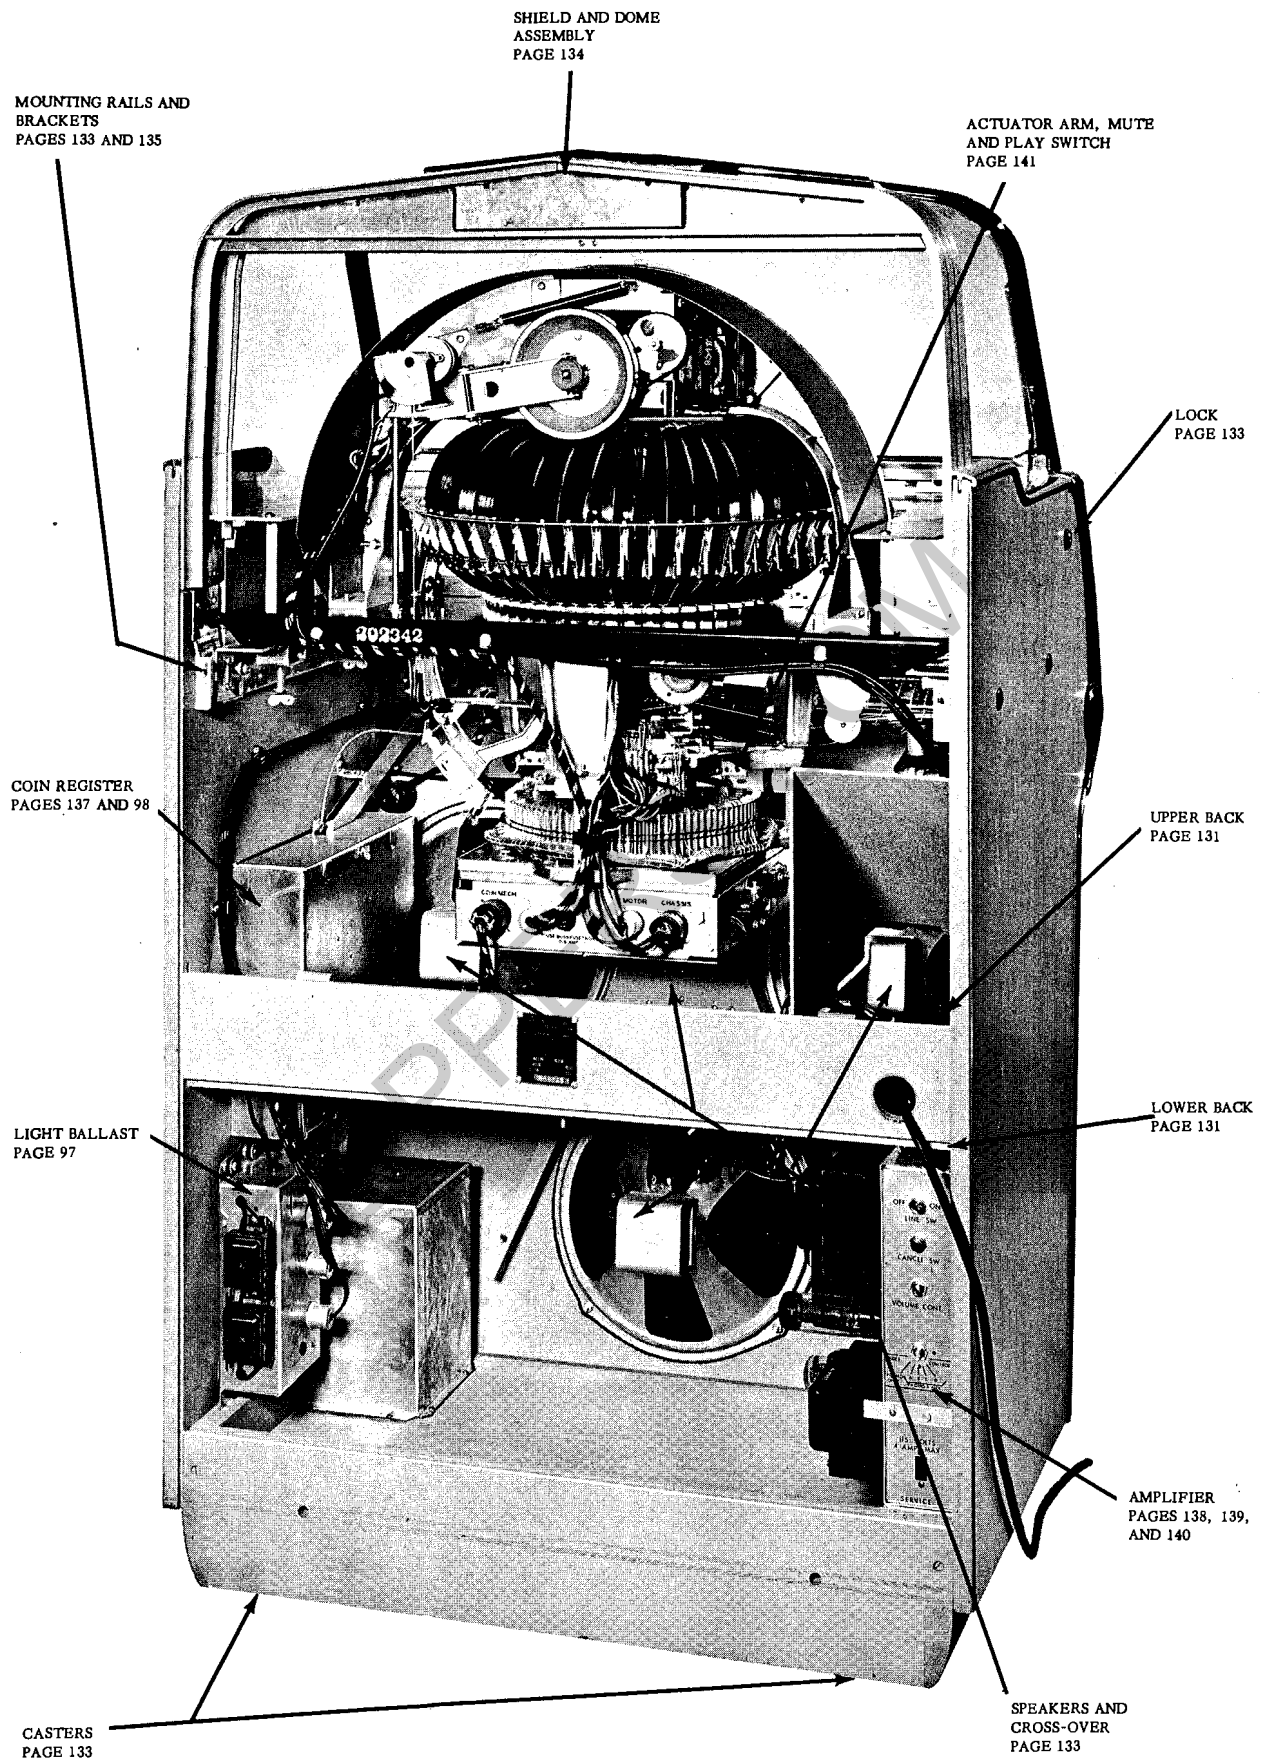

SHIELD AND DOME
ASSEMBLY
PAGE 134

MOUNTING RAILS AND
BRACKETS
PAGES 133 AND 135

ACTUATOR ARM, MUTE
AND PLAY SWITCH
PAGE 141

LOCK
PAGE 133

COIN REGISTER
PAGES 137 AND 98

UPPER BACK
PAGE 131


LIGHT BALLAST
PAGE 97

LOWER BACK
PAGE 131


AMPLIFIER
PAGES 138, 139,
AND 140


CASTERS
PAGE 133

SPEAKERS AND
CROSS-OVER
PAGE 133

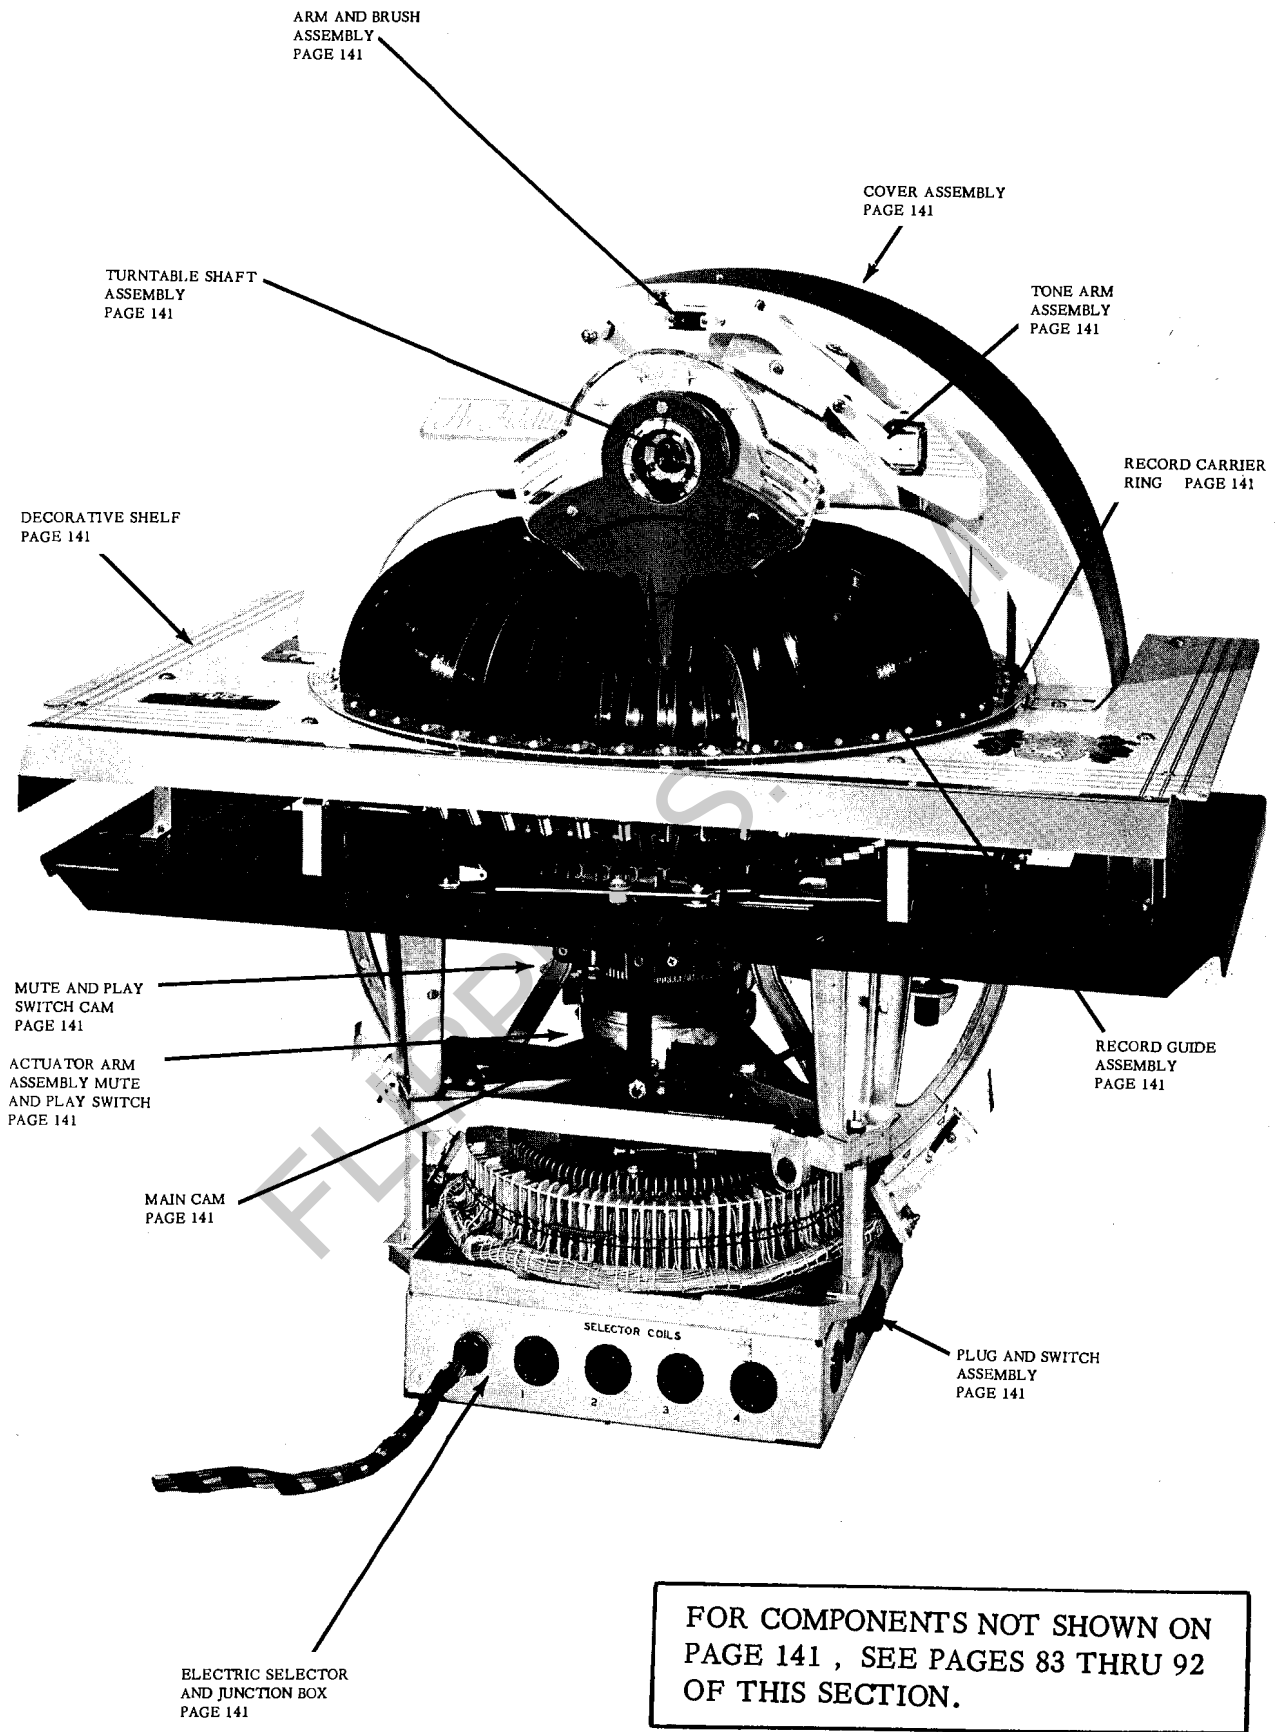



Model 1800 - Key Illustrations

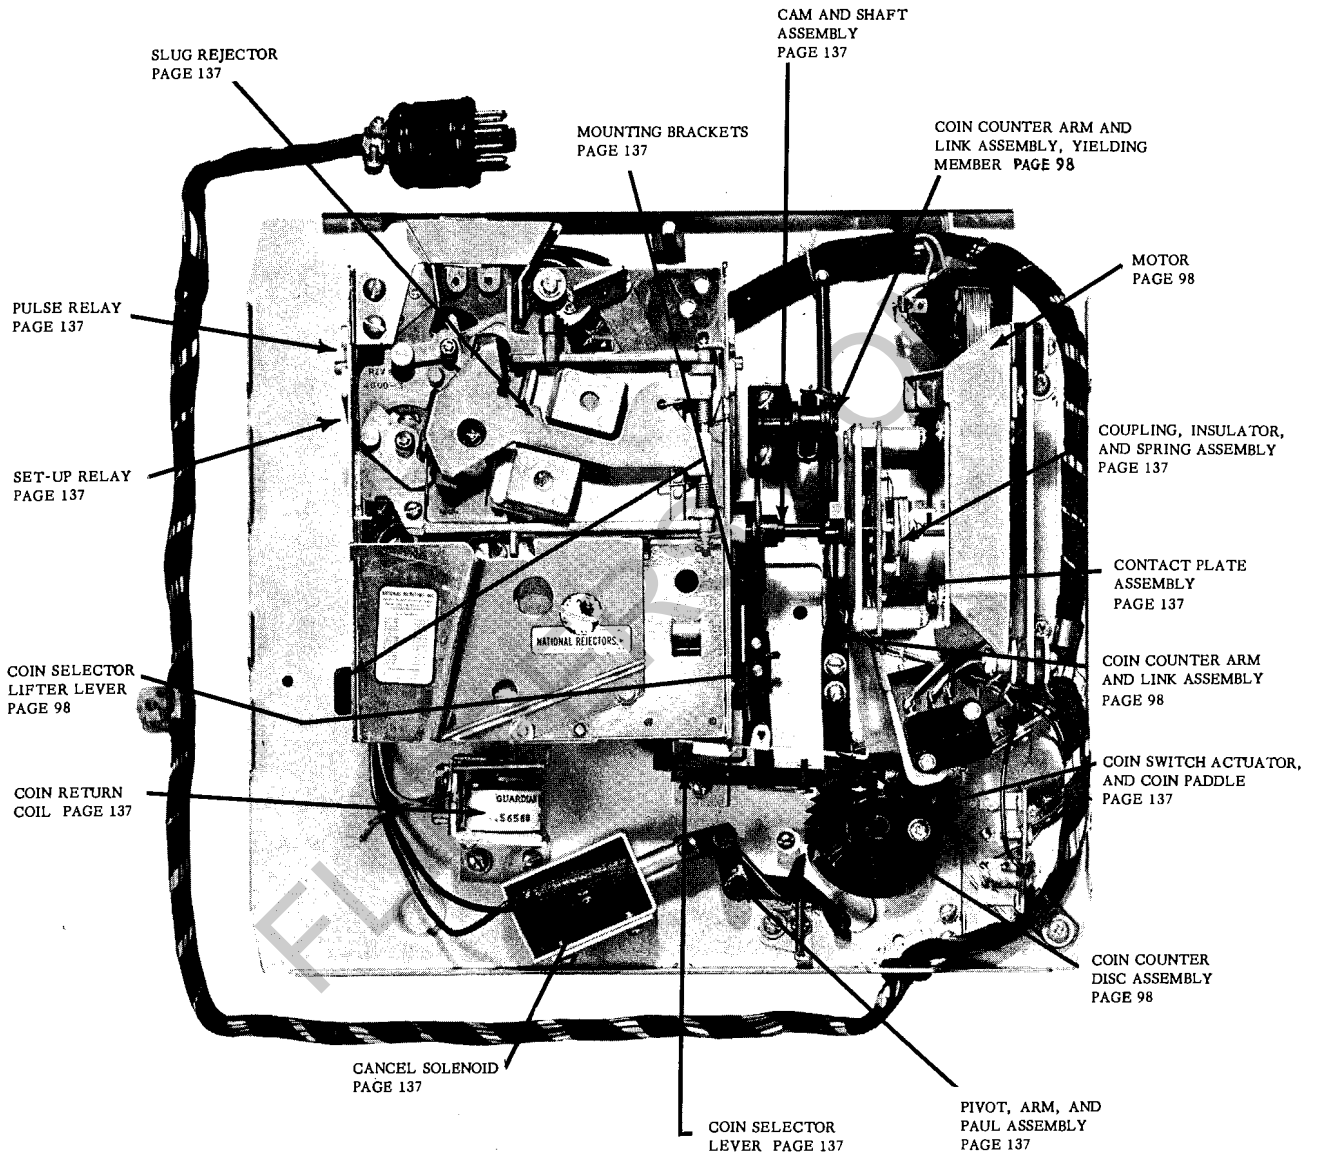

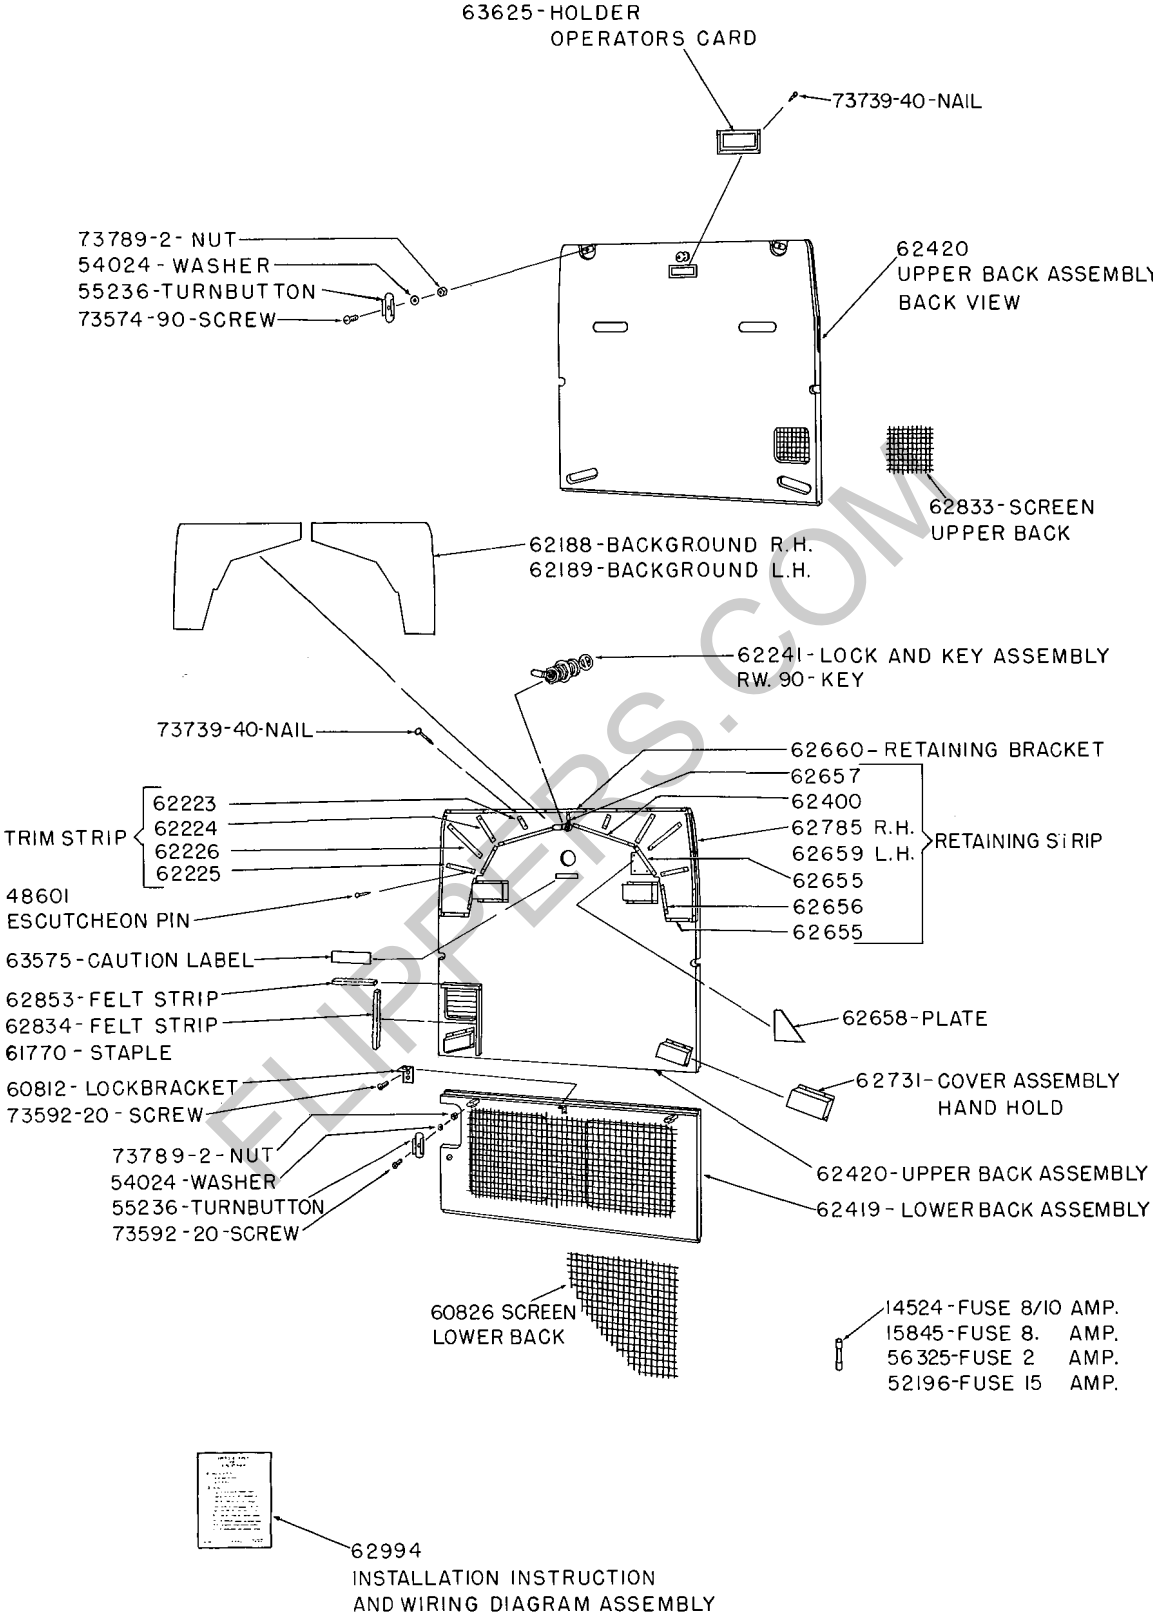



Model 1800 - Trim Assembly - Front

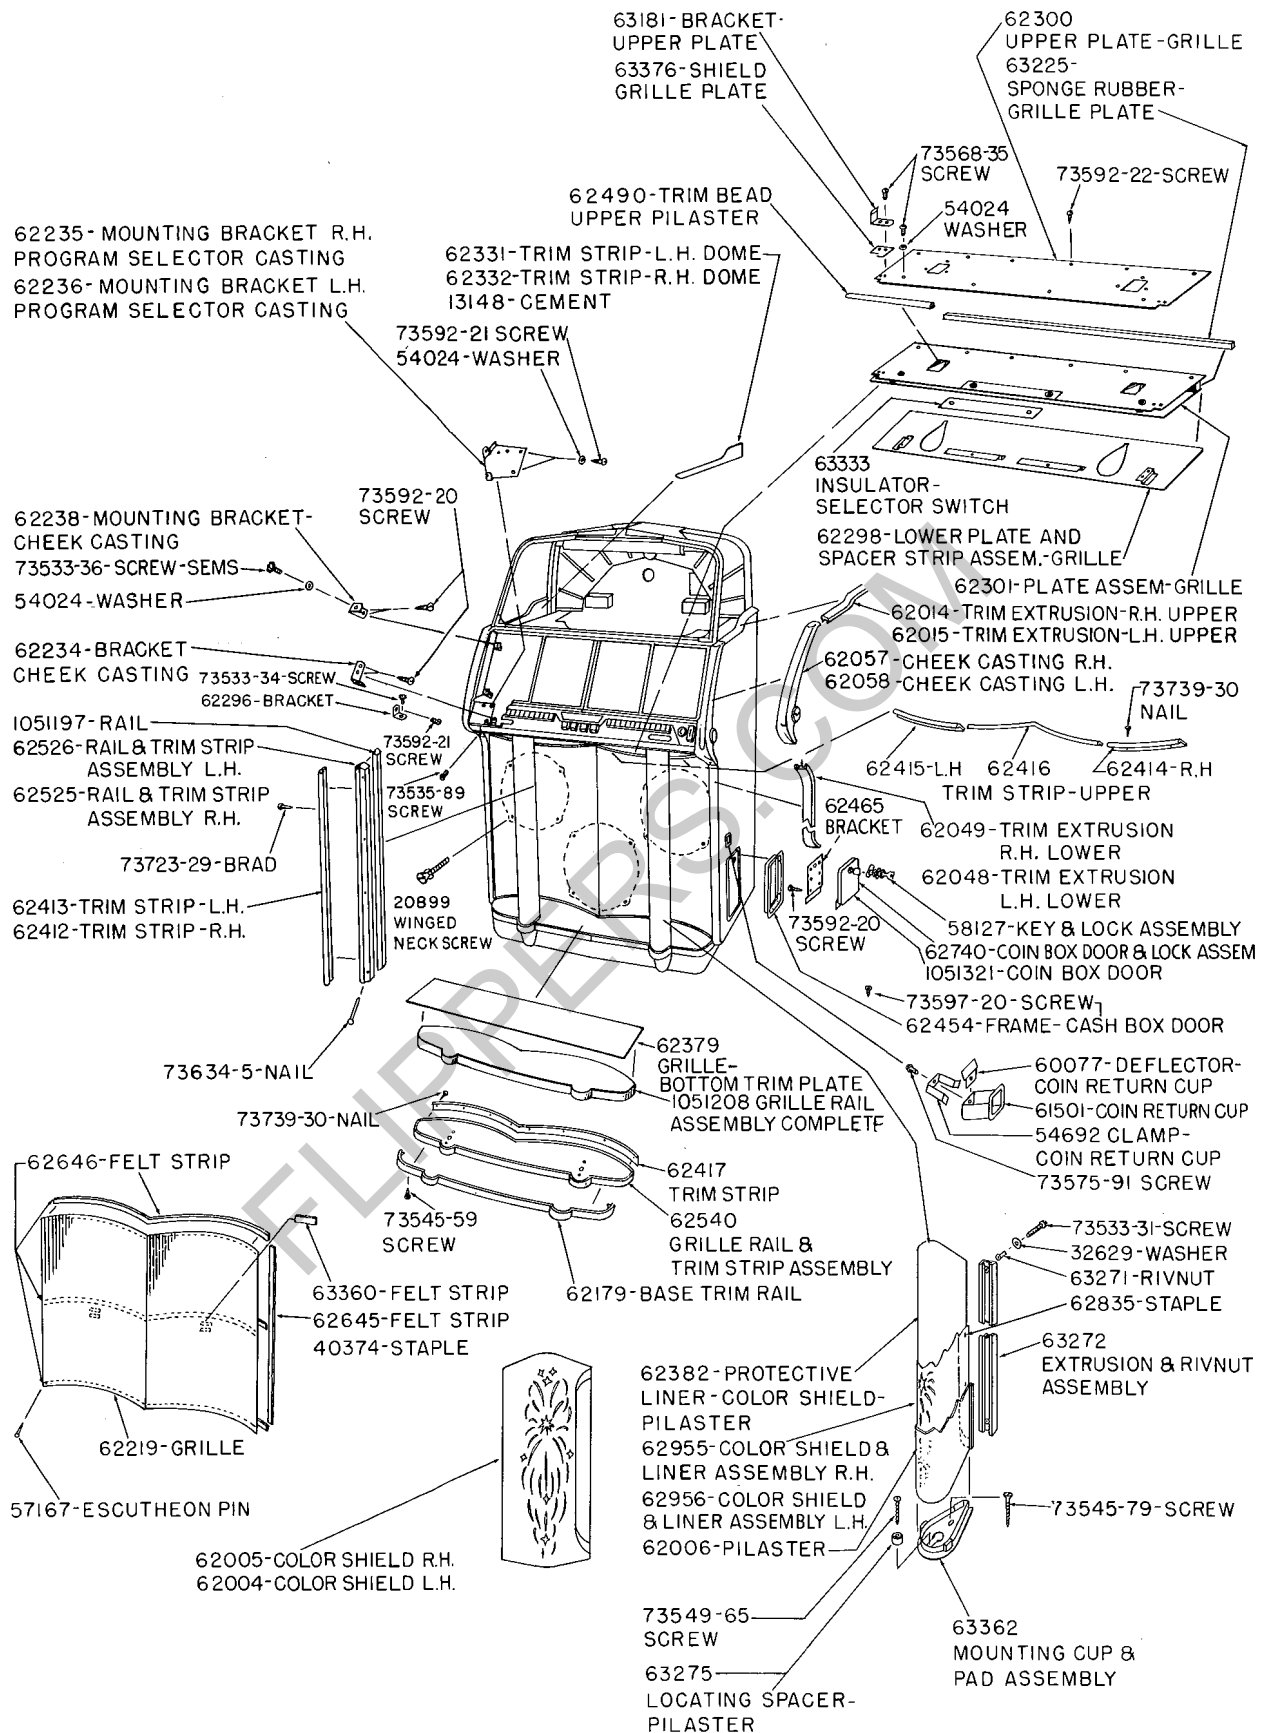

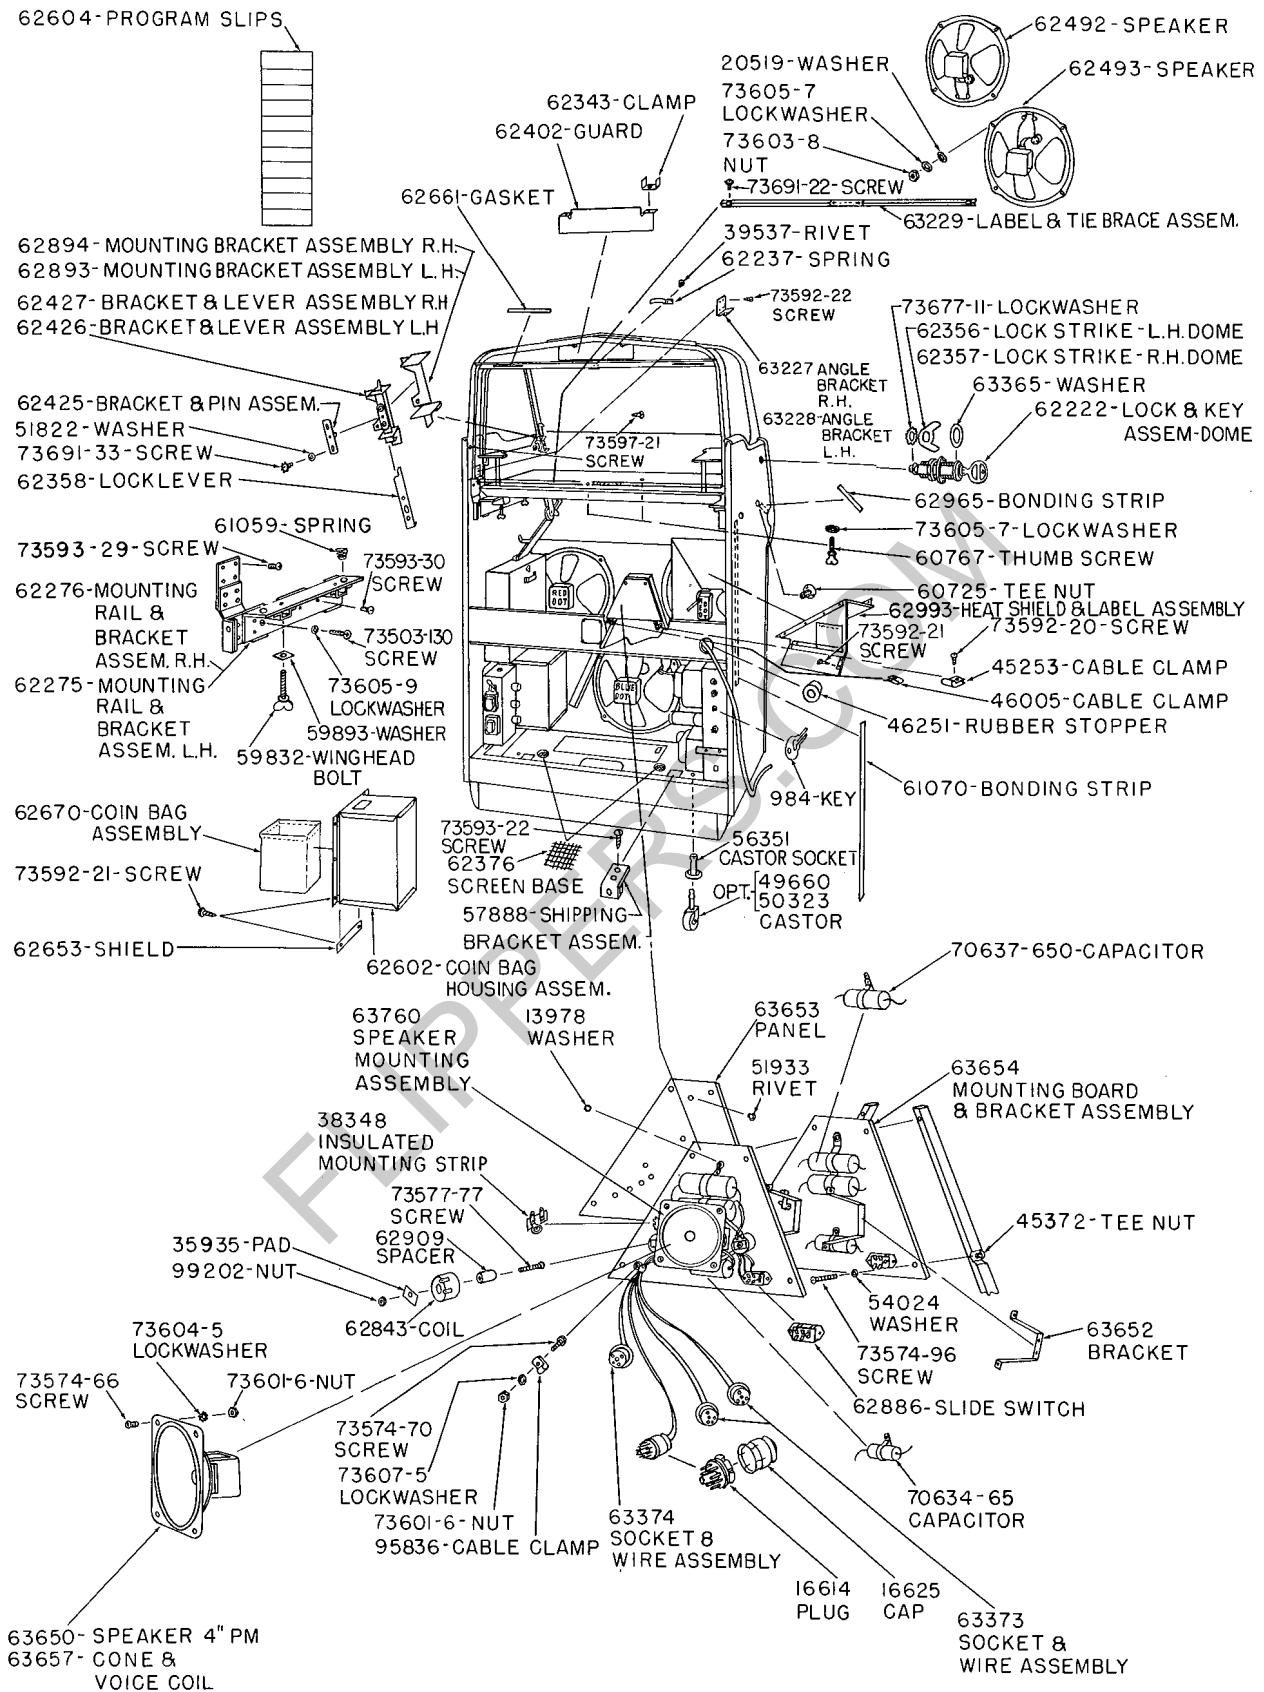



Model 1800 - Trim Assembly - Dome

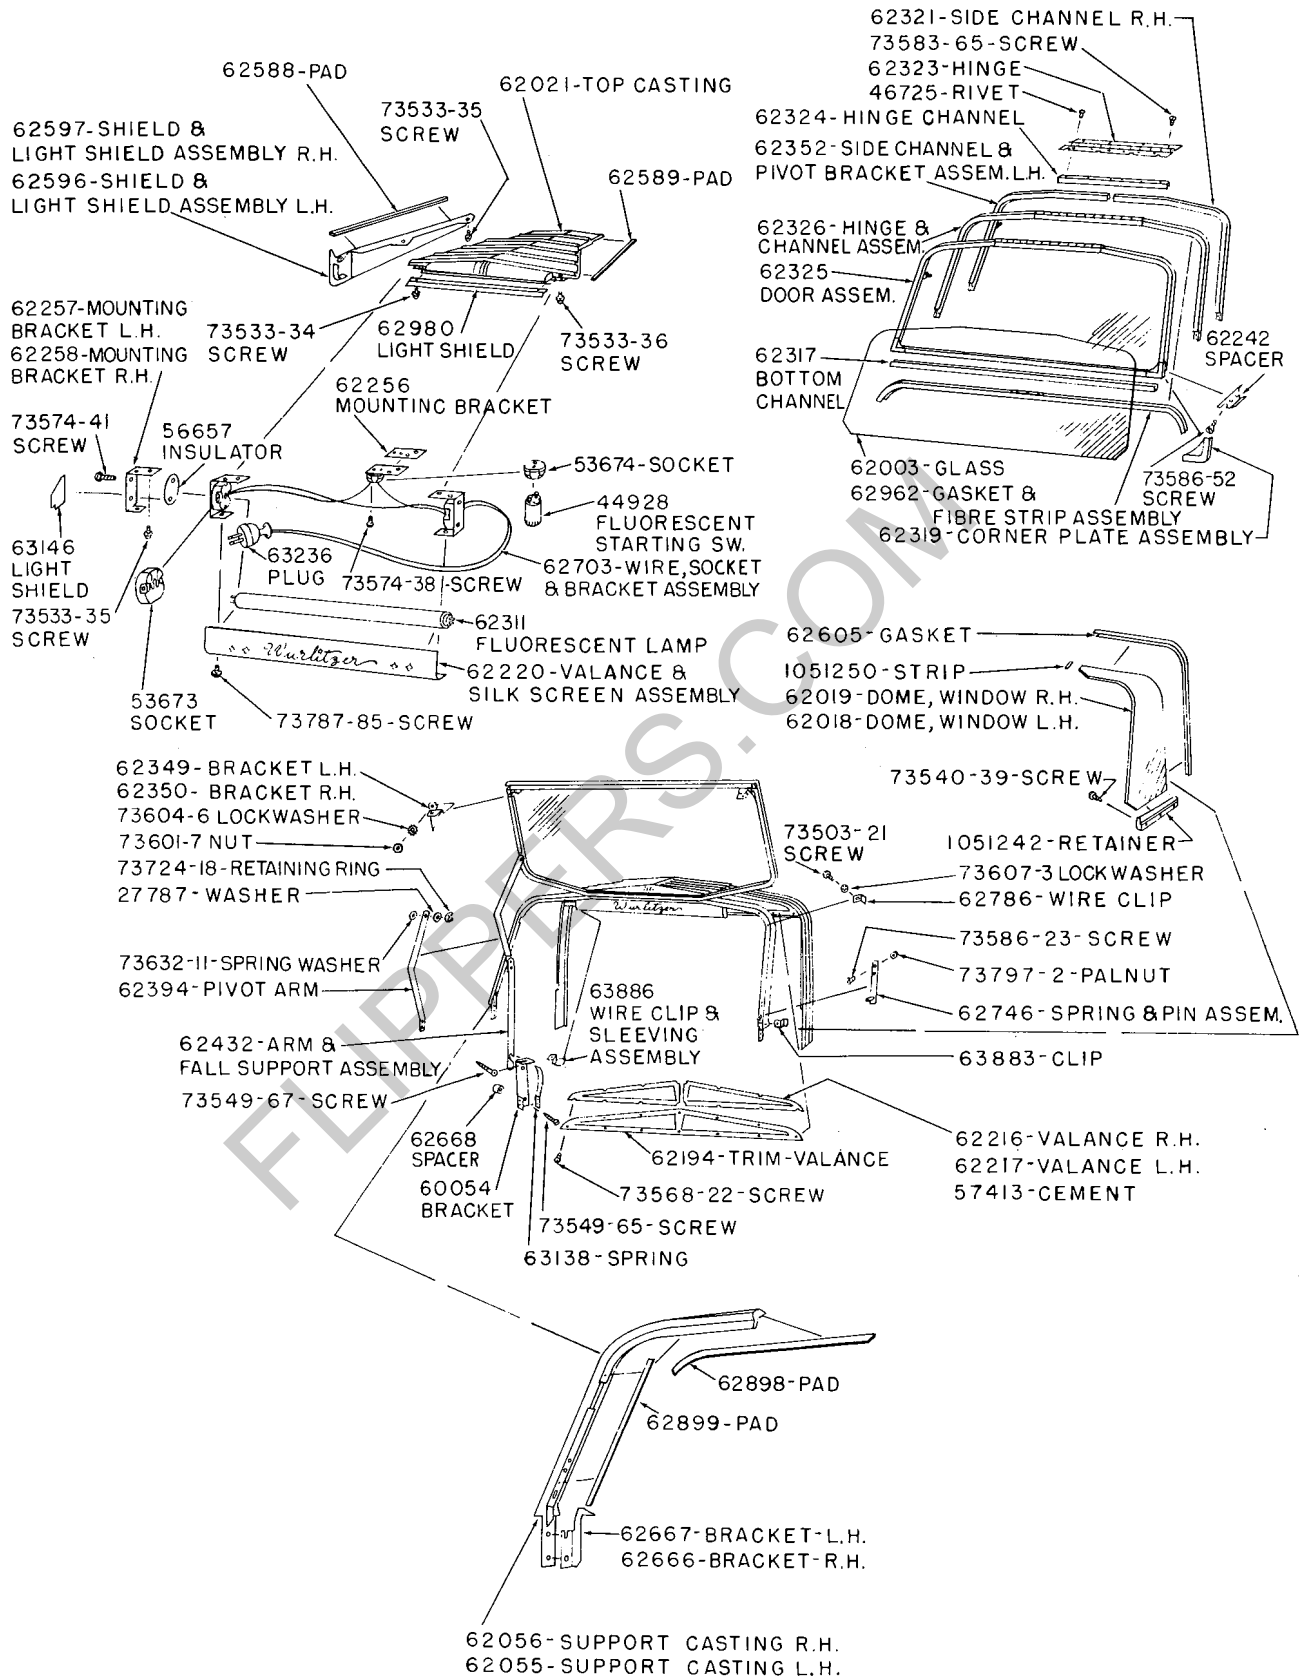

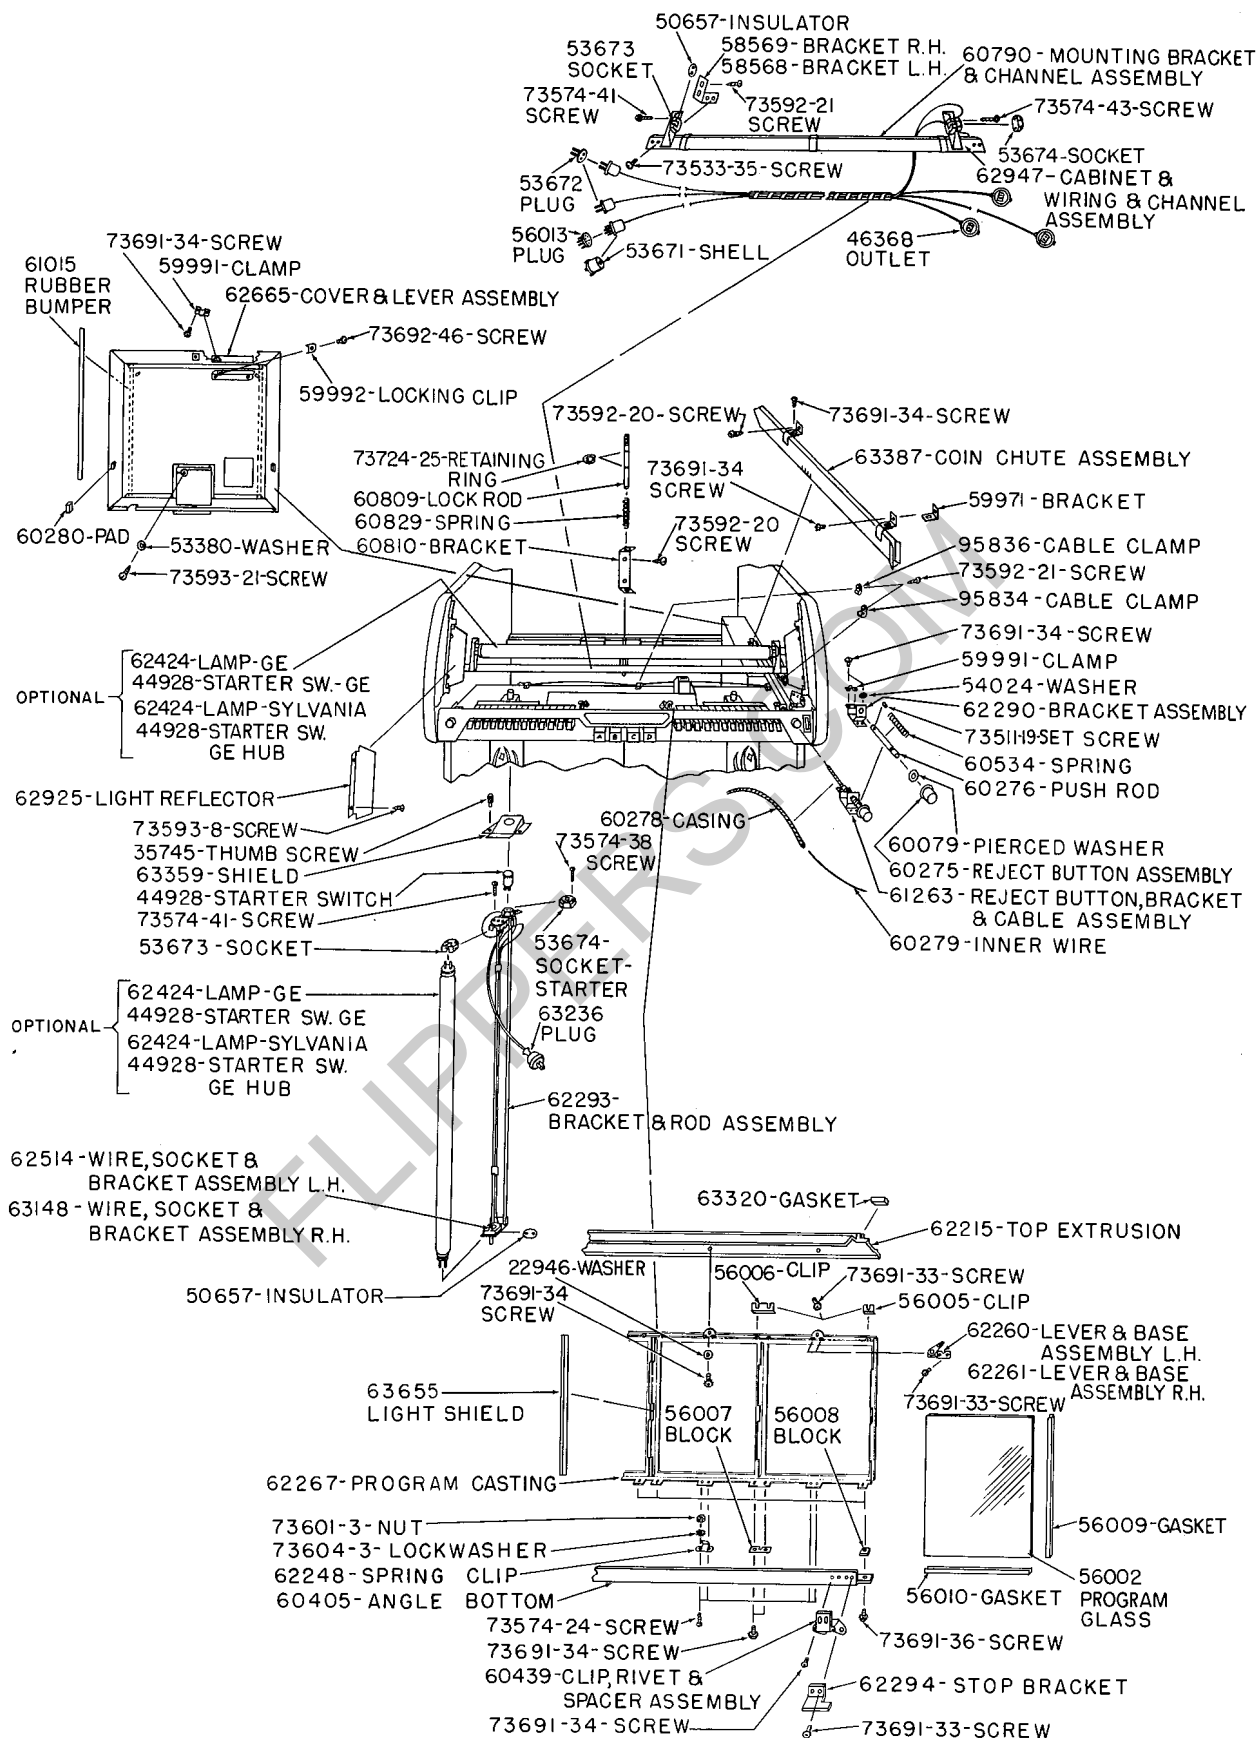



NOTE
FOR PARTS NOT SHOWN SEE PAGES
81 & 82 OF THIS SECTION.

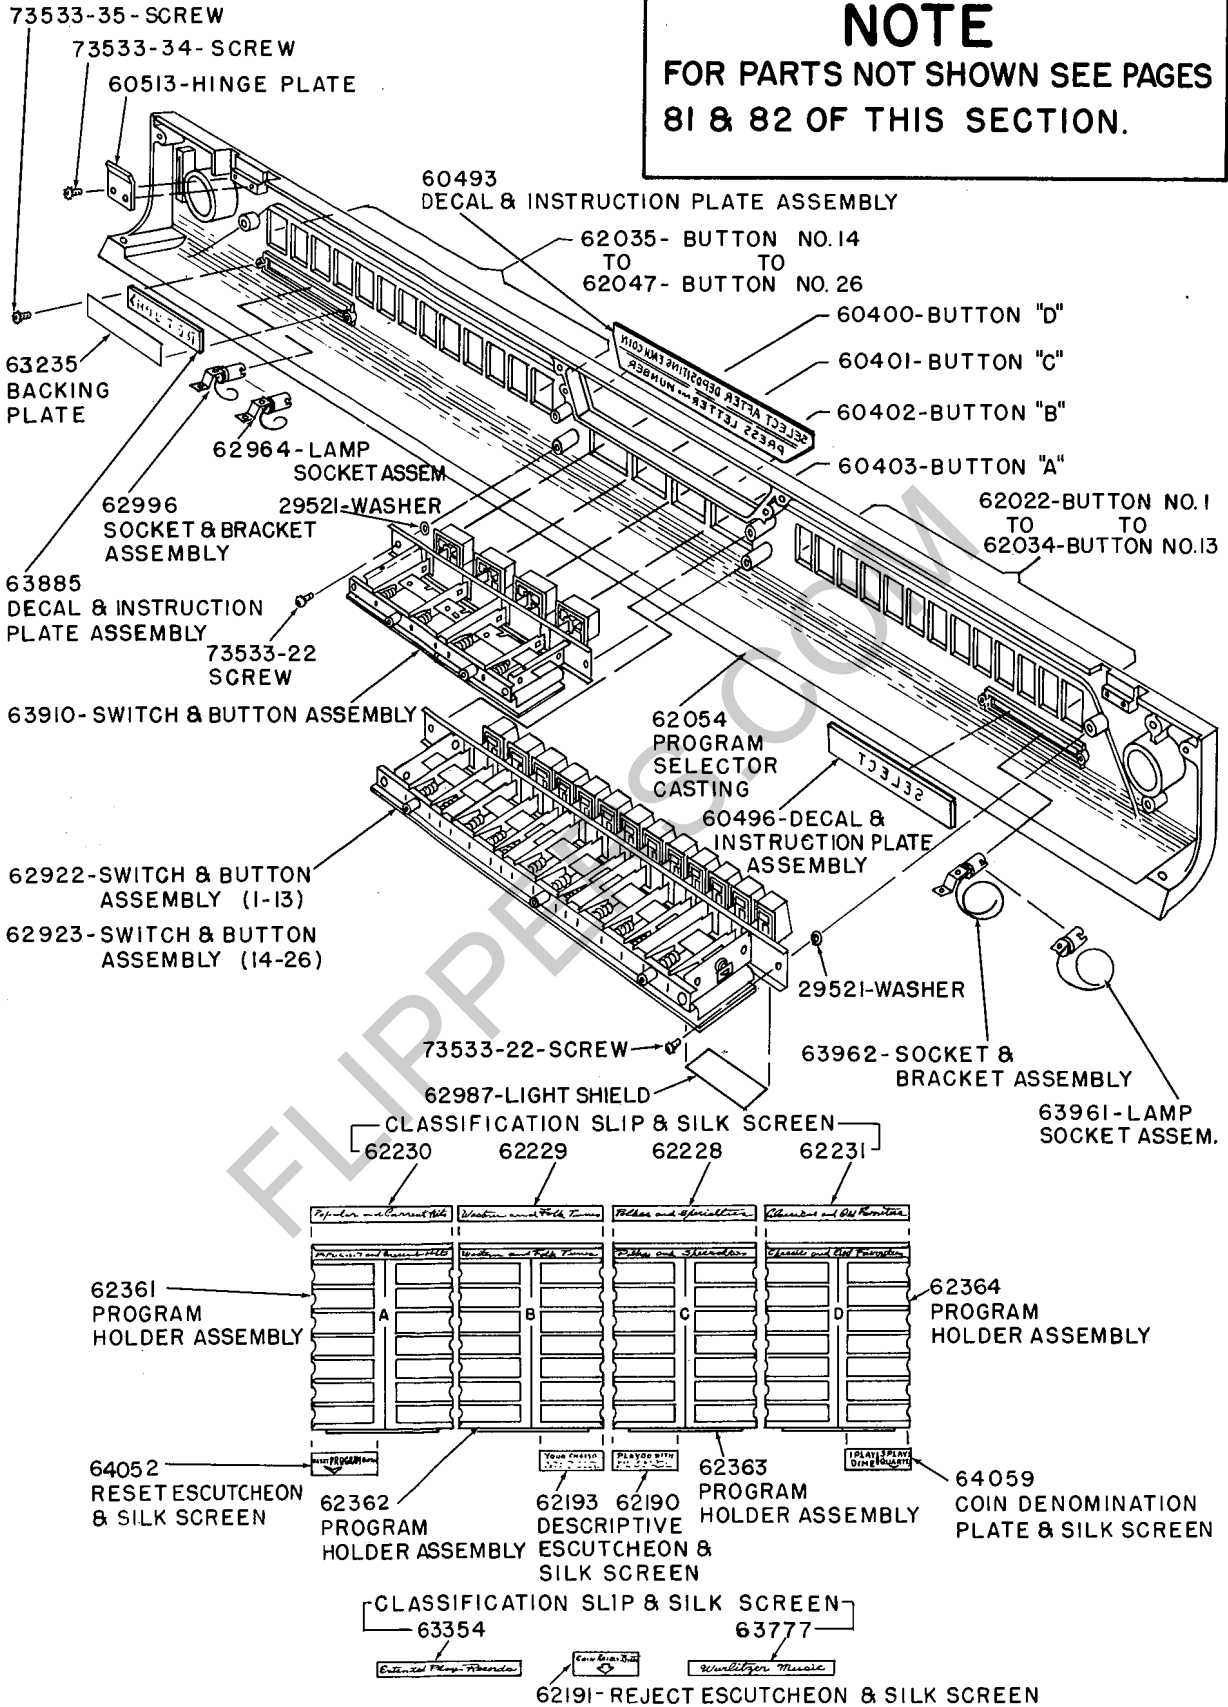

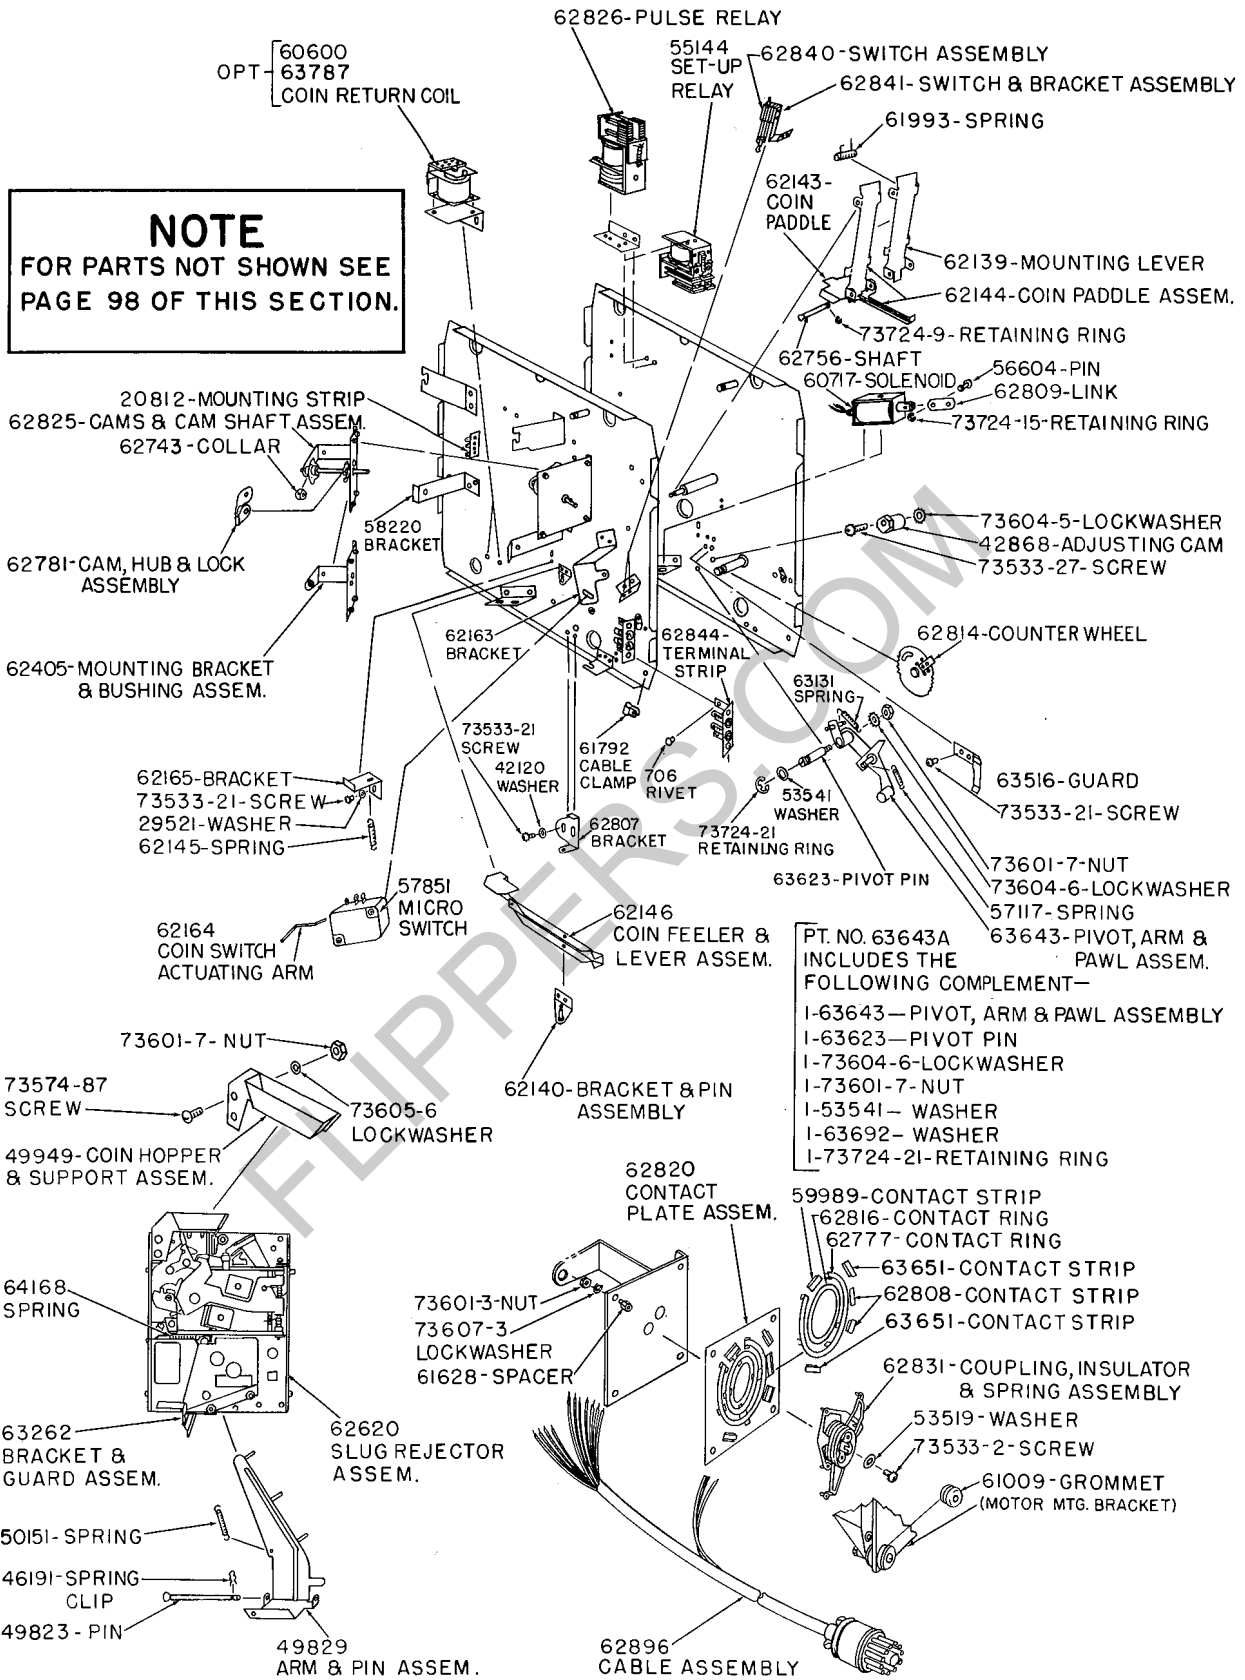

NOTE
 FOR COMPONENTS NOT SHOWN SEE
 "ITEM LIST" ON SCHEMATIC WIRING
 DIAGRAM, SECTION 12, PAGE 68.

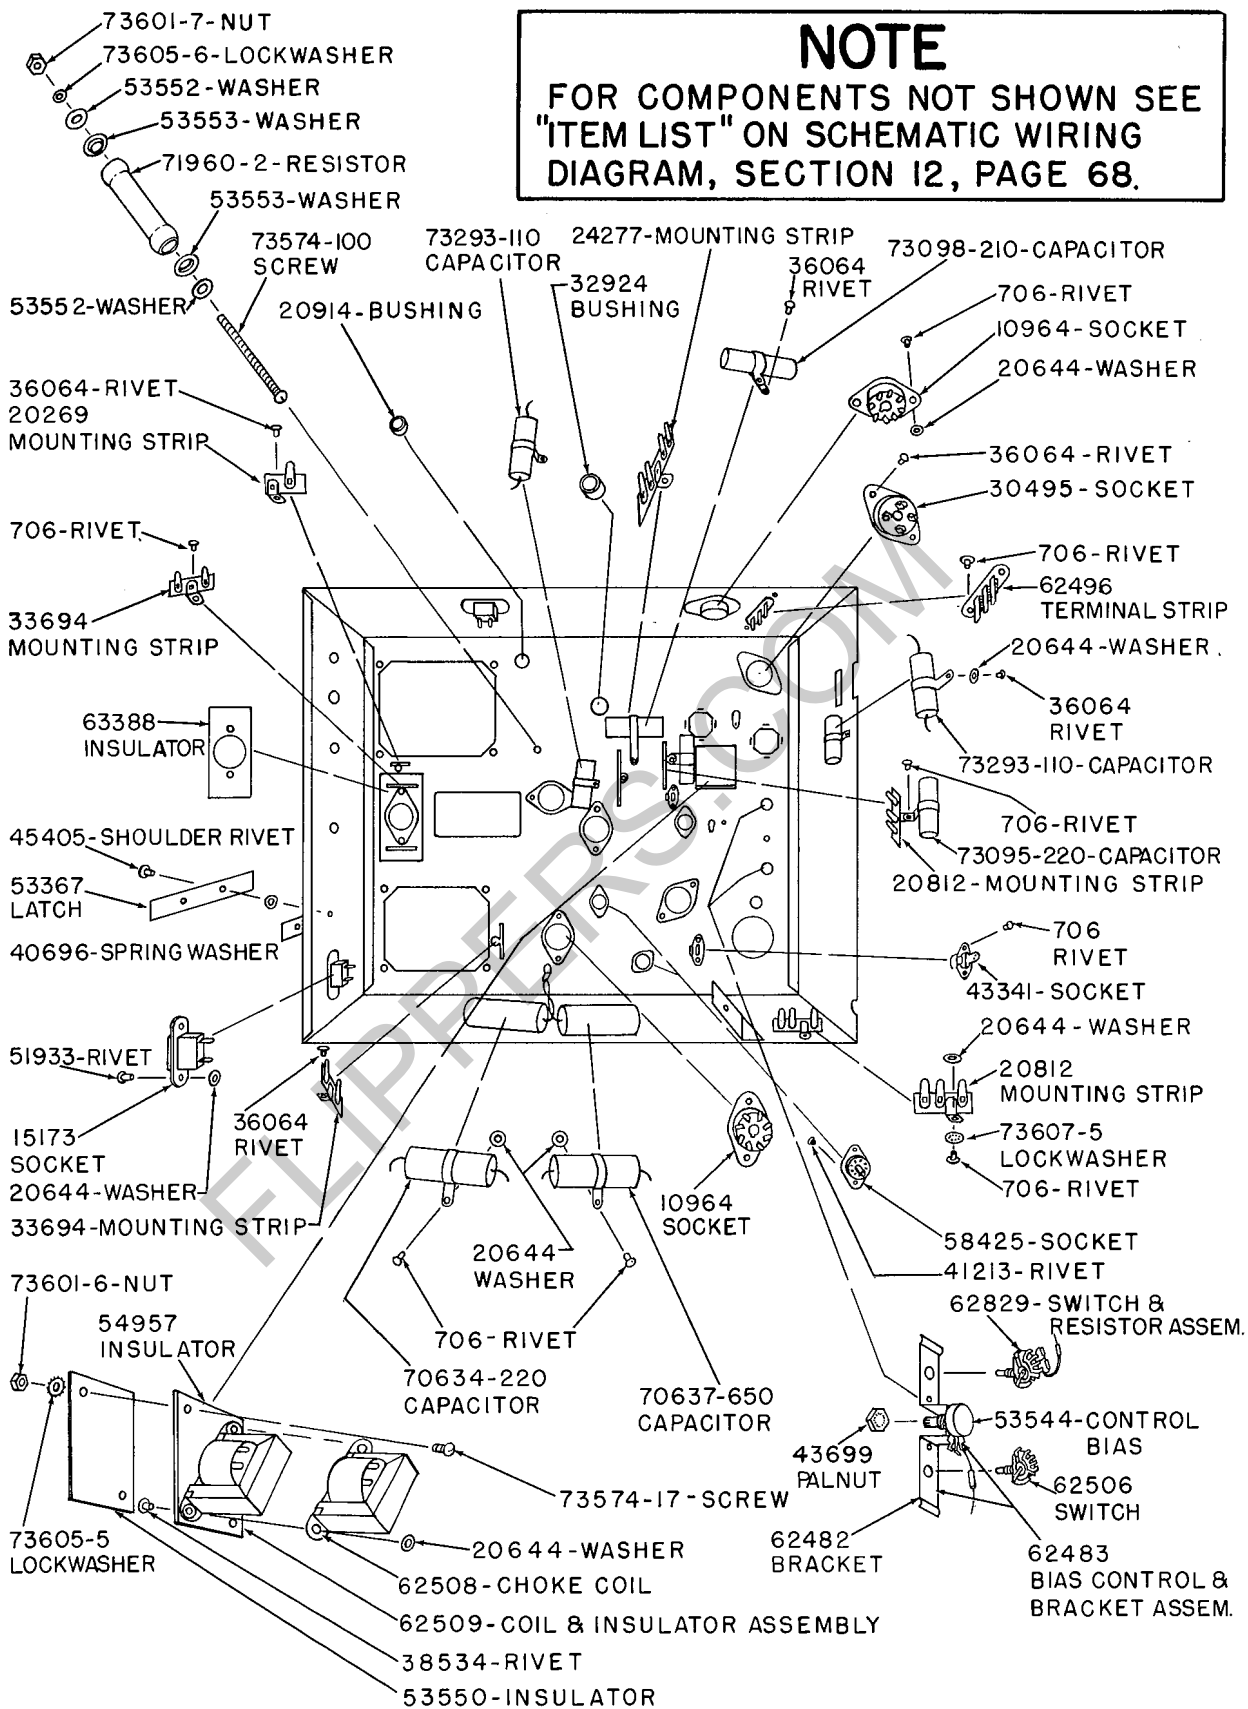

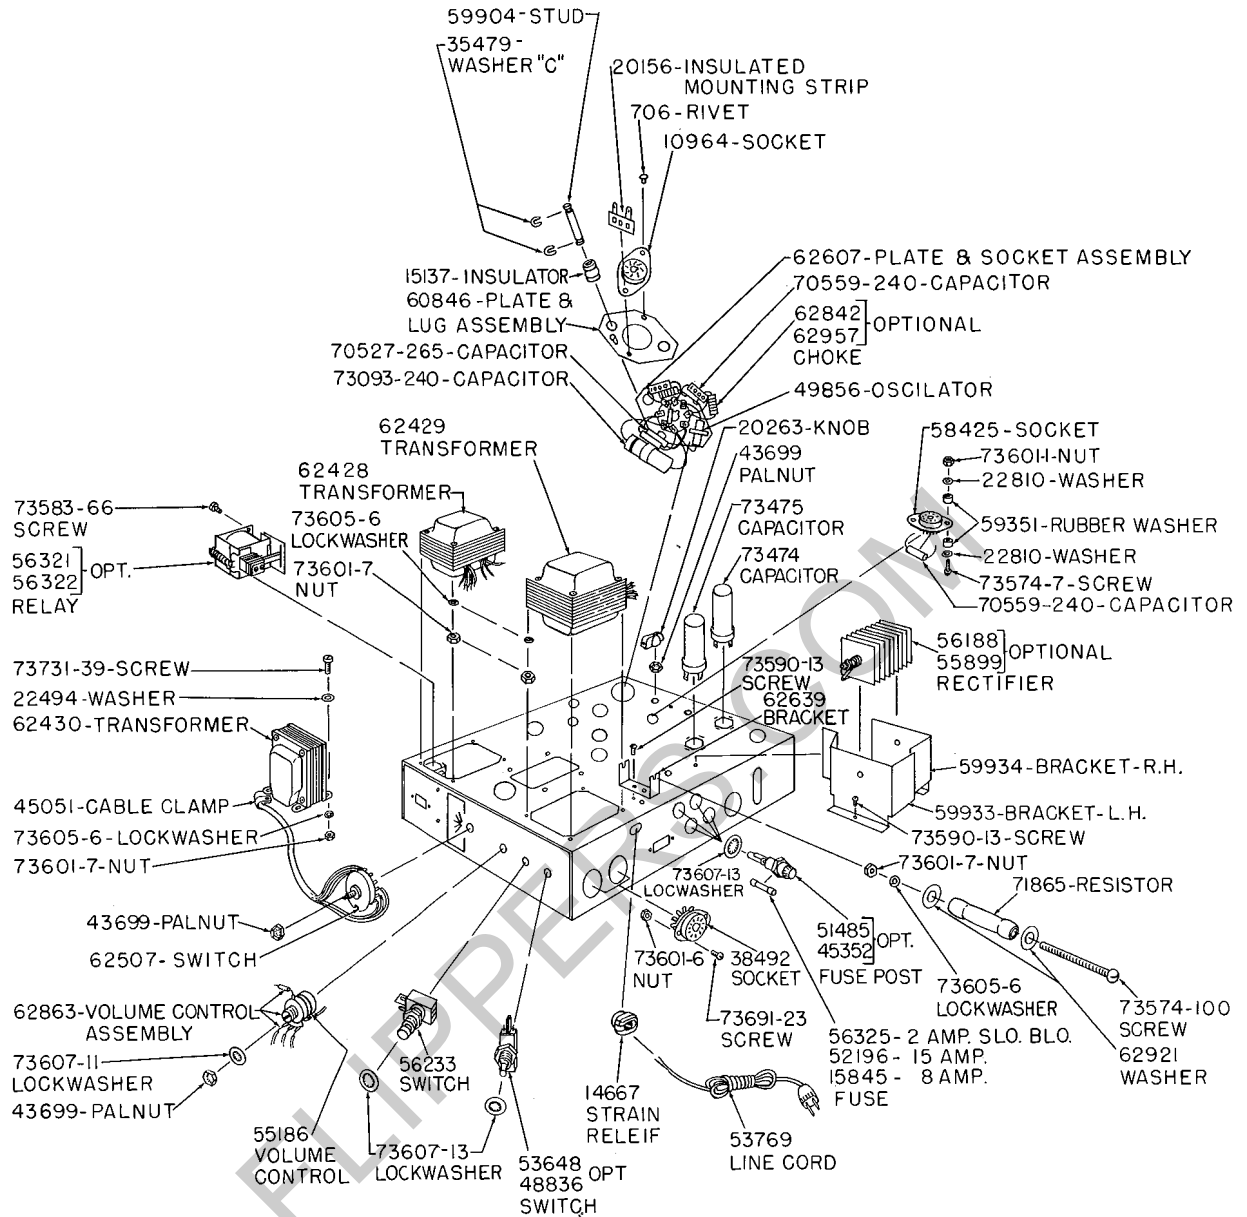


TUBE COMPLEMENT


28157-6L6G-TUBE	58427-12AX7-TUBE
62741-5U4GA-TUBE	45985-NO. 47-LAMP
62456-12BH7-TUBE	24689-NO. 44-LAMP
49360-6SJ7-TUBE	59956-COVER ASSEMBLY
36332-6J5-TUBE	AMPLIFIER

NOTE


LIGHT BALLAST ASSEMBLY PT. NO. 59838
FOR DETAILS SEE PAGE 97 OF THIS SECTION.

FOR COMPONENTS NOT SHOWN SEE "ITEM LIST"
ON SCHEMATIC WIRING DIAGRAM, SECTION 12,
PAGE 68.

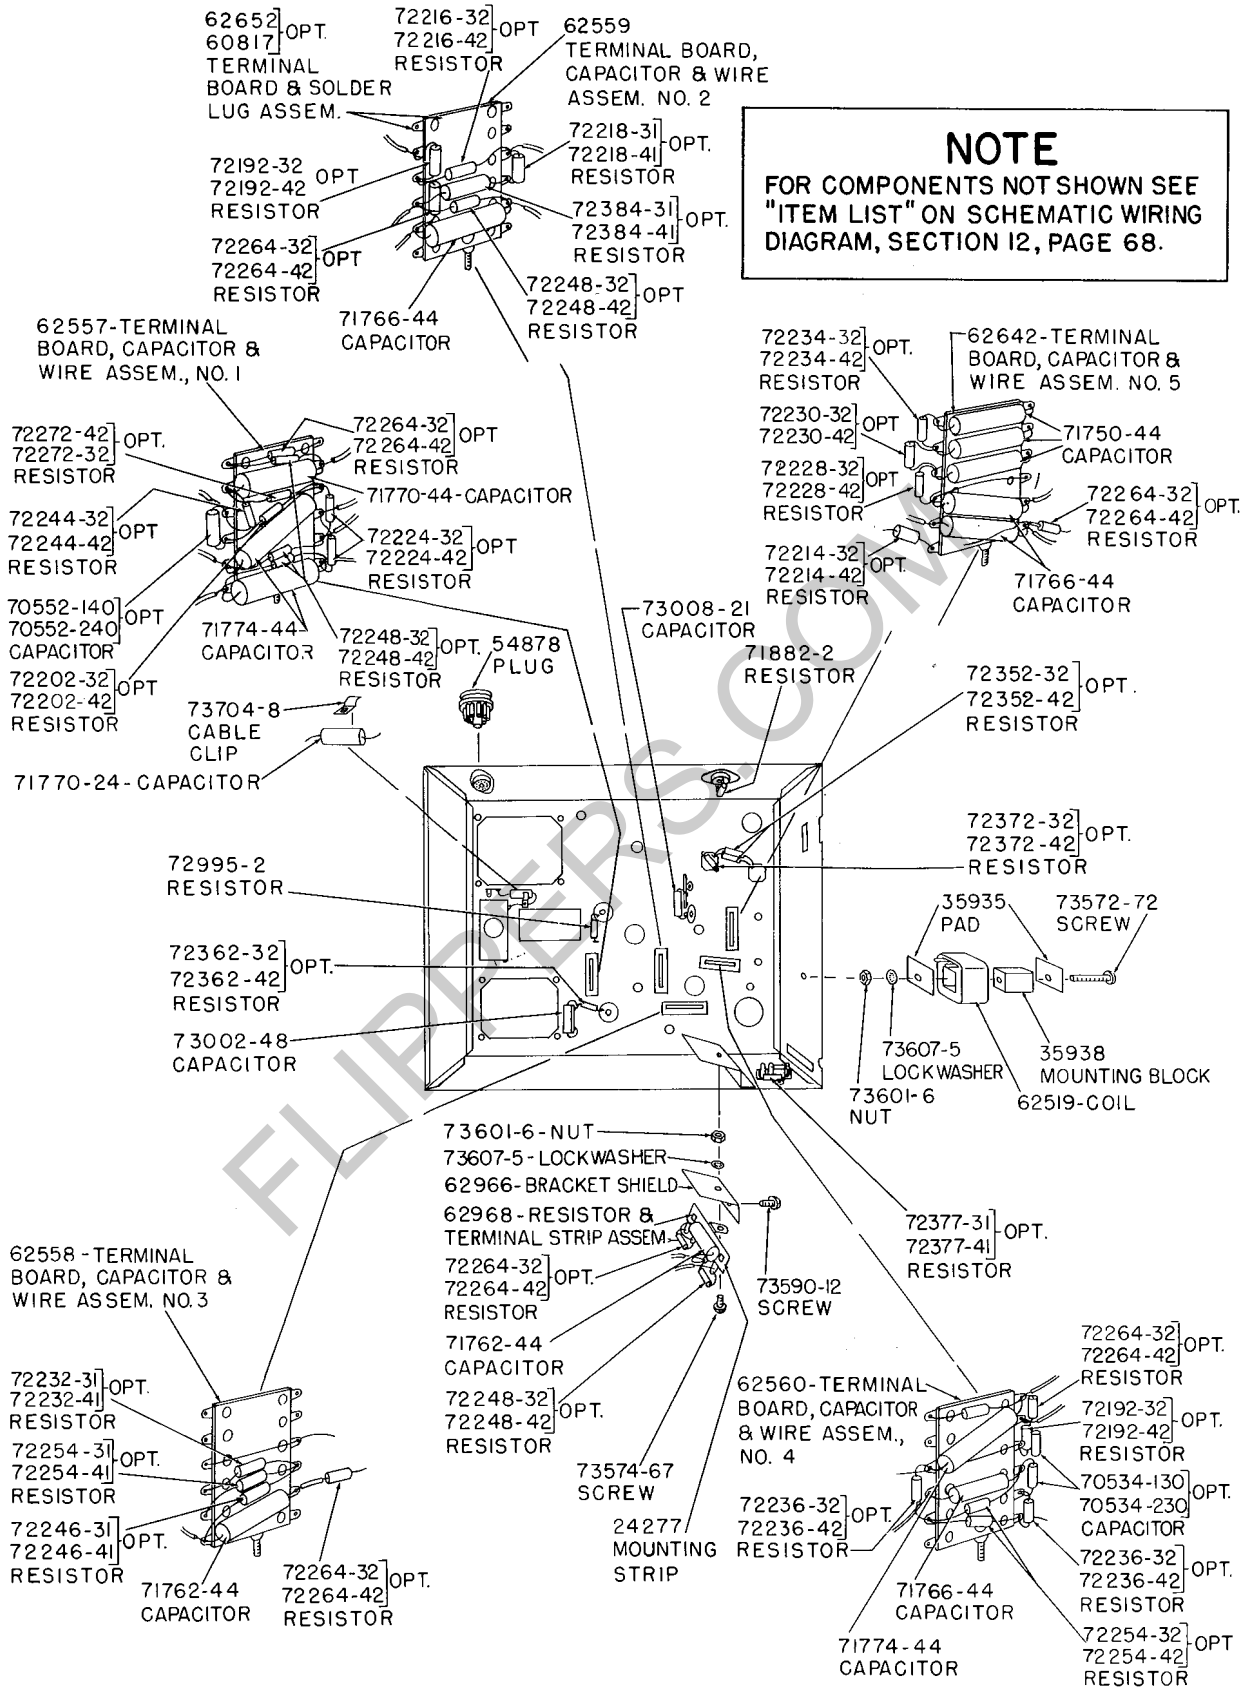

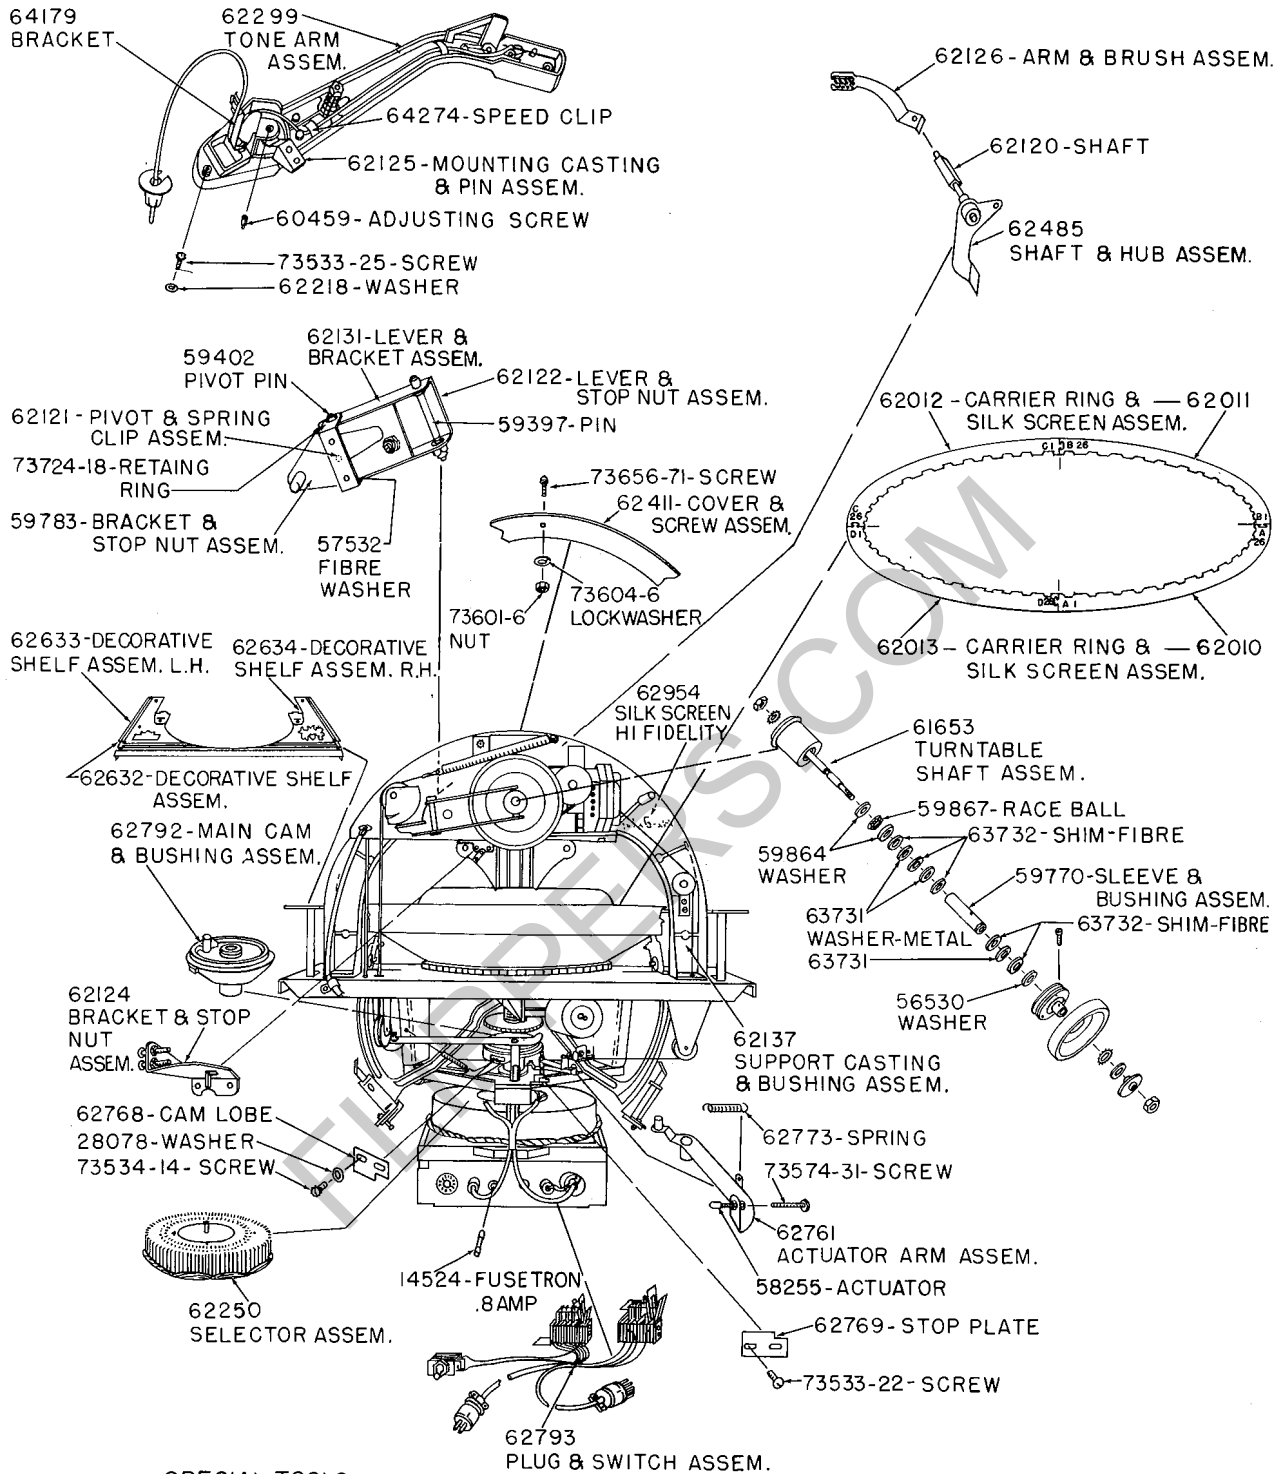

SPECIAL TOOLS

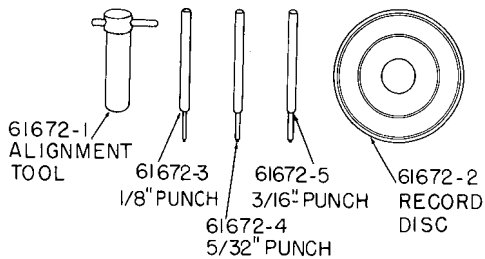

NOTE
 FOR PARTS NOT SHOWN
 SEE PAGES 81 THRU 97
 OF THIS SECTION.

NUMERICAL PARTS LIST

Part No.	Description	Page No.	Part No.	Description	Page No.
R. W. 90	Key, Back Door Lock	131	45352	Opt. 51485 Fuse Post Bussman	
706	Rivet, Tubular, Brass .121" x 5/32"			Type H. K. P.	139
		137, 138, 139	45372	Tee Nut 8-32	133
984	Key, Volume Control	133	45405	Shoulder, Rivet for Latch	138
10964	Socket, 8 Prong	138, 139	46005	Cable Clamp, H.P. 2N, 1/16"	133
13148	Cement	132	46251	Rubber Stopper, for Power Cable	133
13978	Washer, for Rivet Special .136" x 1/2"	133	46368	Outlet, Convenience	135
14524	Fuse 8/10 Amp. Fusetron or		46725	Rivet, Tubular, .088" x 11/64"	134
	Bussmann MDL	131, 141	48601	Escutcheon Pin, Monel, 3/8"-#16	
14667	Strain Relief	139		Stub's Gage	131
15137	Insulator	139	48836	Opt. 53648 Switch, Single Pole,	
15173	Receptacle, 2 Prong	138		Single Throw	139
15845	Fuse 8 Amp. Little Fuse or		49660	Caster — Opt. 50323	133
	Bussmann MTH	131, 139	49856	Oscillator Coil, Q-2.5 M. C.	139
16614	Plug, 8 Prong	133	50323	Caster Opt. 49660	133
16625	Cap, 8 Prong Plug	133	50657	Insulator	134, 135
20156	Insulated Mounting Strip, 2 Lug	139	51485	Opt. 45352 Fuse Post	139
20263	Knob, Tone Control	139	51822	Washer, Special .177" x 5/16"	133
20269	Mounting Strip, Single Lug	138	51933	Rivet, Tubular .121" x 9/32"	133, 138
20519	Washer, Special .203" x 1/2"	133	52196	Fuse 15 Amp. Type A.B.C.	131, 139
20644	Washer, Special .128" I.D. x 5/16" O.D.	138	53367	Latch, Amplifier	138
20812	Mounting Strip, Cinch-3 lug,		53380	Washer, Special .177" x 9/16" x .0598"	135
	Insulated	137, 138	53519	Washer, .125" I.D., 5/16" O.D.	137
20899	Winged Neck Screw, 10-32 x 1-1/2"		53541	Washer, .253" I.D., 3/8" O.D.	137
	F.H. Machine	132	53544	Bias Control	138
20914	Bushing, Fibre .432" x 13/64"	138	53550	Insulator	138
22494	Washer, Special 3/16" I.D. 3/4" O.D.	139	53552	Washer, Mica	138
22810	Washer, Special .091" I.D. x .253" O.D.	139	53553	Washer, Special	138
22946	Washer, Special 11/64" x 3/8" x 1/32"	135	53648	Opt. 48836 Switch, Single Pole,	
24277	Mounting Strip, Insulated 4 Lug	138, 140		Single throw	139
27787	Washer, Special .196" x 3/8"	134	53671	Shell, Cinch Mfg. Co. No. 7002	135
28078	Washer, Special .125" x 1/4"	141	53672	Plug, 2 Prong	135
29521	Washer, Special .145" x 1/4" x .031"		53673	Socket, Fluorescent Lamp	134, 135
		136, 137	53674	Socket, Fluorescent Starter	134, 135
30495	Socket, 4 Prong	138	53769	Line Cord, 16 ft.	139
32629	Washer, Special .148" I.D. 7/16" O.D.		54024	Washer, Special, .193"-189"	
		132, 137			131, 132, 133, 135
32924	Bushing, Fibre, .535" x 13/64"	138	54692	Clamp, Coin Return Cup	132
33694	Mounting Strip, Insulated, 2 Lug	138	54878	Plug, 11 Prong	140
35479	"C" Washer	139	54957	Insulator, Choke Coil	138
35745	Thumb Screw, Special 8-32 x 1/4"	135	55144	Relay, Set up	137
35935	Pad	133, 140	55186	Volume Control, 50K, 7.5K	139
35938	Mounting Block, Choke Coil	140	55236	Turn Button	131
36064	Rivet, 1/8" x 1/8"	138	55899	Opt. 56188 Rectifier Selenium 28V	139
38348	Insulated Mounting Strip 2 Lug	133	56002	Program Glass, 9-1/16" x 7-1/16"	135
38492	Socket, 11 Prong Amph., #M1P11	139	56005	Clip, Program Window	135
38534	Rivet, Tubular .121" x 3/16"	138	56006	Clip, Program Window	135
39537	Rivet, Tubular .088" x 3/16" L	133	56007	Block, Program Window	135
40374	Staple, 3/8"	132	56008	Block, Program Window	135
40696	Spring Washer	138	56009	Gasket, Program Window	135
41213	Rivet, Tubular .088" x 1/8"	138	56010	Gasket	135
42120	Washer, Special .144" I.D. 5/16" O.D.	137	56013	Plug, 6 Prong, Cinch Type M-61	135
42868	Adjusting Cam, Eccentric Hex. Hd.	137	56188	Opt. 55899 Rectifier Selenium 28V	139
43341	Socket, Connector, Single Prong	138	56233	Switch, Push Button, Momentary	
43699	Pal-nut 3/8" -32	138, 139		Contact, S.P.D.T.	139
44928	Fluorescent Starting Switch	134, 135	56321	Relay (Opt. 56322) Override	139
45051	Cable Clamp, 7/16" I.D. Mod. HP 7N ...	139	56322	Relay (Opt. 56321) Override	139
45253	Cable Clamp H. P. 3N., 3/16"	133	56325	Fuse, 2 Amp. Type 3AG Slo. Blo.	131, 139

Part No.	Description	Page No.	Part No.	Description	Page No.
56351	Caster Socket, 9/16" Bore	133	60767	Thumb Screw, 10-32" x 3/4"	133
56530	Washer, Thrust Bearing	141	60790	Mounting Bracket and Channel Assem.	
56604	Pin, Solenoid Shaft	137		Program Light	135
57117	Spring, .187" O.D. x 29/32" long	137	60809	Lock Rod, Lower Back Door	135
57167	Escutcheon Pin, 1/2"-18 Brass	132	60810	Bracket, Lower Back Door Lock	135
57413	Cement, Koppers Polystrene	134	60812	Lock Bracket	131
57532	Fibre Washer, .191" x 11/32" x .015"	141	60817	Opt. 62652 Terminal Board and	
57851	Micro Switch, Coin	137		Solder Lug Assem.	140
57888	Shipping Bracket Assem.	133	60826	Screen, Lower Back	131
58127	Lock and Key Assem.	132	60829	Spring, Back Door Lock	135
58220	Bracket, Lower, Slug Rejector	137	60846	Plate and Lug Assem.	139
58255	Actuator, Nylon	141	61009	Grommet, Motor Mtg., Bracket	137
58425	Socket, Miniature 9 Prong	138, 139	61015	Rubber Bumper Pad 3/32" x 1/4" x	
58568	Bracket, LH Program Channel Support	135		10-5/8"	135
58569	Bracket R.H., Program		61059	Spring, Conical, Chassis Mount	133
	Channel Support	135	61070	Bonding Strip, Brass 1/2" x 17"	133
59351	Rubber Washer, .092" x .218" x 1/16"	139	61263	Reject Button, Bracket, and	
59397	Pin, Tone Arm Feed-in Stop	141		Cable Assem.	135
59402	Pivot Pin, Tone Arm Release	141	61501	Coin Return Cup	132
59770	Sleeve & Bushing Assem. Turntable	141	61628	Spacer, Contact Plate Bracket	137
59783	Bracket & Stop Nut Assem. Tone		61653	Turntable and Shaft Assem.	141
	Arm Release	141	61672-1	Alignment Tool	141
59864	Washer, Turntable Shaft	141	61672-2	Record Disc	141
59867	Ball Race, Turntable Shaft	141	61672-3	Punch, 1/8" Spring Pin	141
59904	Stud, Shock Mount	139	61672-4	Punch, 5/32" Spring Pin	141
59933	Bracket, L. H. Rectifier	139	61672-5	Punch, 3/16" Spring Pin	141
59934	Bracket, R. H. Rectifier	139	61770	Staple, 9/16 Duo-Fast, 5018 C X R	131
59989	Contact Strip	137	61792	Clamp, Cable	137
59832	Wing Head Bolt	133	61993	Spring, Coin Release Lever	137
59893	Washer, Fibre, Chassis Mounting	133	62003	Glass, Door Dome	134
59971	Bracket, Coin Chute	135	62004	Color Shield, L. H. Pilaster	132
59991	Clamp, Reject Flexible Cable	135	62005	Color Shield, R. H. Pilaster	132
59992	Locking Clip, Reject Lever	135	62006	Pilaster, R. H. and L. H.	132
60054	Bracket, Fall Support	134	62010	Carrier Ring and Silk Screen Assem.	
60077	Deflector, Coin Return Cup	132		A-1 thru 26	141
60079	Pierced Washer, Reject Button	135	62011	Carrier Ring and Silk Screen Assem.	
60275	Reject Button Assem.	135		B-1 thru 26	141
60276	Push Rod, Coin Reject	135	62012	Carrier Ring and Silk Screen Assem.	
60278	Casing, Flexible Cable, Coin Return			C-1 thru 26	141
	14-1/16"	135	62013	Carrier Ring and Silk Screen Assem.	
60279	Inner Wire, Flexible Cable, Coin			D-1 thru 26	141
	Return 16-5/16"	135	62014	Trim Extrusion, R.H. Upper	132
60280	Rubber Bumper, Coin Mechanism		62015	Trim Extrusion, L.H. Upper	132
	Cover	135	62018	Glass, L.H. Side Dome	134
60400	Selector Button, Letter "D"	136	62019	Glass, R.H. Side Dome	134
60401	Selector Button, Letter "C"	136	62021	Top Casting	134
60402	Selector Button, Letter "B"	136	62022	Selector Button, No. 1	136
60403	Selector Button, Letter "A"	136	62023	Selector Button, No. 2	136
60405	Angle, Bottom, Program Holder	135	62024	Selector Button, No. 3	136
60439	Clip, Rivet, and Spacer Assem.		62025	Selector Button, No. 4	136
	Program Holder	135	62026	Selector Button, No. 5	136
60459	Adjusting Screw, Tone Arm	141	62027	Selector Button, No. 6	136
60493	Instruction Plate Assem. (Select after		62028	Selector Button, No. 7	136
	Depositing each Coin, Press Letter and		62029	Selector Button, No. 8	136
	Number)	136	62030	Selector Button, No. 9	136
60496	Instruction Plate Assem. (Select)	136	62031	Selector Button, No. 10	136
60513	Hinge Plate, Program Casting	136	62032	Selector Button, No. 11	136
60534	Spring, Reject Button	135	62033	Selector Button, No. 12	136
60600	Coin Return Coil Opt.	137	62034	Selector Button, No. 13	136
60717	Solenoid, Cancel	137	62035	Selector Button, No. 14	136
60725	Tee Nut	133	62036	Selector Button, No. 15	136

Model 1800 - Parts Section

Part No.	Description	Page No.	Part No.	Description	Page No.
62037	Selector Button, No. 16	136	62225	Trim Strip, R.H. and L.H.	131
62038	Selector Button, No. 17	136	62226	Trim Strip, R.H. and L.H.	131
62039	Selector Button No. 18	136	62228	Classification Slip, Polkas and Specialties	136
62040	Selector Button No. 19	136	62229	Classification Slip, Western and Folk Tunes	136
62041	Selector Button No. 20	136	62230	Classification Slip, Popular and Current Hits	136
62042	Selector Button No. 21	136	62231	Classification Slip, Classical and Old Favorites	136
62043	Selector Button No. 22	136	62234	Bracket, Cheek Casting	132
62044	Selector Button No. 23	136	62235	Mounting Bracket, R.H. Program Selector Casting	132
62045	Selector Button No. 24	136	62236	Mounting Bracket, L.H. Program Selector Casting	132
62046	Selector Button No. 25	136	62237	Spring, Back Door	133
62047	Selector Button, No. 26	136	62238	Mounting Bracket, Cheek Casting	132
62048	Trim Extrusion, L.H. Lower	132	62241	Lock and Key Assem. (Upper Back)	131
62049	Trim Extrusion, R.H. Lower	132	62242	Spacer, Corner Plate, Door	134
62054	Program Selector Casting	136	62248	Spring Clip, Lower, Program Holder	135
62055	Support Casting, L.H. Top	134	62250	Selector Drum Assem.	141
62056	Support Casting, R.H. Top	134	62256	Mounting Bracket, Starter, Dome	134
62057	Cheek Casting, R.H.	132	62257	Mounting Bracket, L.H., Dome Light	134
62058	Cheek Casting, L.H.	132	62258	Mounting Bracket, R.H., Dome Light	134
62120	Shaft, Tone Arm Brush	141	62260	Lever and Base Assem. L.H. Program Holder	135
62121	Pivot and Spring Clip Assem. Tone Arm Release	141	62261	Lever and Base Assem. R.H. Program Holder	135
62122	Lever and Stop Nut Assem. Tone Arm Release	141	62267	Program Casting	135
62124	Bracket and Stop Nut Assem. Safety Switch	141	62275	Mounting Rail and Bracket Assem., Chassis Mounting Plate L.H.	133
62125	Mounting Casting and Pin Assem. Tone Arm	141	62276	Mounting Rail and Bracket Assem., Chassis Mounting, Plate, R.H.	133
62126	Arm and Brush Assem. Tone Arm	141	62290	Bracket Assem., Push Rod	135
62131	Lever and Bracket Assem. Tone Arm	141	62293	Bracket and Rod Assem., Fluorescent Lamp	135
62137	Support Casting and Bushing Assem.	141	62294	Stop Bracket, Program Holder	135
62139	Mounting Lever, Coin Paddle	137	62298	Lower Plate and Spacer Strip Assem.	132
62140	Bracket and Pin Assem., Coin Feeler	137	62299	Tone Arm Assem.	141
62143	Coin Paddle	137	62300	Upper Plate, Grille	132
62144	Coin Paddle Assem.	137	62301	Plate Assem., Grille	132
62145	Spring, Coin Selector	137	62311	Fluorescent Lamp, White 15", 14 watt	134
62146	Coin Feeler and Lever Assem.	137	62317	Bottom Channel, Door	134
62163	Bracket, Coin Switch	137	62319	Corner Plate Assem.	134
62164	Actuating Arm, Coin Switch	137	62321	Side Channel, Door, R.H.	134
62165	Bracket, Slug Rejector, Lower	137	62323	Hinge, Dome	134
62179	Base Trim Rail	132	62324	Hinge Channel, Door	134
62188	Background R.H. (Upper Back)	131	62325	Door Assem.	134
62189	Background L.H. (Upper Back)	131	62326	Hinge and Channel Assem. Dome	134
62190	Escutcheon and Silk Screen (Played With Tonal Brilliance of Wurlitzer Hi Fidelity)	136	62331	Trim Strip, L.H. Dome	132
62191	Escutcheon and Silk Screen (Coin Reject Button)	136	62332	Trim Strip, R.H. Dome	132
62193	Escutcheon and Silk Screen (Your Choice of 104 Favorite Tunes — Folk — Rhythm — Modern)	136	62343	Clamp, Top Casting	133
62194	Trim, Valance	134	62349	Lock Bracket, L.H. Dome	134
62215	Top Extrusion, Program Holder	135	62350	Lock Bracket, R.H. Dome	134
62216	Valance, R.H.	134	62352	Side Channel and Pivot Bracket Assem., Door, L.H.	134
62217	Valance, L.H.	134	62356	Lockstrike, L.H. Dome	133
62218	Washer, Lead, Tone Arm Weight	141	62357	Lockstrike, R.H. Dome	133
62219	Grille, Speaker	132	62358	Lock Lever, Dome	133
62220	Valance and Silk Screen Assem.	134	62361	Silk Screen and Program Holder Assem. (A1 thru A26)	136
62222	Lock and Key Assem. Dome RW-90	133			
62223	Trim Strip, R.H. and L. H.	131			
62224	Trim Strip, R.H. and L.H.	131			

Part No.	Description	Page No.	Part No.	Description	Page No.
62362	Silk Screen and Program Holder Assem. (B1 thru B26)	136	62588	Pad, Shield, Dome Rubber — 9-13/16" x 3/16" x 1/16"	134
62363	Silk Screen and Program Holder Assem. (C1 thru C26)	136	62589	Pad, Top Casting, Rubber 10-1/2" x 5/32" x 1/16"	134
62364	Silk Screen and Program Holder Assem. (D1 thru D26)	136	62596	Shield and Light Shield Assem. L.H.	134
62376	Screen Base, 4" x 4"	133	62597	Shield and Light Shield Assem. R.H.	134
62379	Grille, Bottom Trim Plate	132	62602	Coin Bag Housing Assem.	133
62382	Protective Liner, Color Shield, Pilaster	132	62604	Program Title Strips, Double	133
62394	Pivot Arm, Fall Support	134	62605	Gasket, Dome Glass 22-1/2"	134
62400	Retaining Strip, R.H.	131	62607	Plate and Socket Assem.	139
62402	Guard, Dome	133	62620	Slug Rejector Assem.	137
62405	Mounting Bracket and Bushing Assem., Cam Shaft	137	62632	Decorative Shelf Assem., Complete	141
62411	Cover and Screw Assem., Support Casting	141	62633	Decorative Shelf Assem., L.H.	141
62412	Trim Strip, R.H.	132	62634	Decorative Shelf Assem., R.H.	141
62413	Trim Strip, L.H.	132	62639	Bracket, Field Supply	139
62414	Trim Strip, R.H. Upper	132	62642	Terminal Board Assem., No. 5	140
62415	Trim Strip, L.H. Upper	132	62645	Felt Strip, 1/16" x 1/2" x 29-1/2"	132
62416	Trim Strip, Center, Upper	132	62646	Felt Strip, 1/16" x 1/2" x 24"	132
62417	Trim Strip, Bottom Grille Rail	132	62652	Opt. 60817 Terminal Board and Solder Lug Assem.	140
62419	Lower Back Assem.	131	62653	Shield, Cash Box Door	133
62420	Upper Back Assem., (Back View)	131	62655	Retaining Strip, L.H.	131
62424	Lamp, Fluorescent 24", 20W. Daylight	135	62656	Retaining Strip, L.H.	131
62425	Bracket and Pin Assem., Lock Lever	133	62657	Retaining Strip, R.H.	131
62426	Bracket and Lever Assem., Lock Lever L.H.	133	62658	Plate, Upper Back Door	131
62427	Bracket and Lever Assem., Lock Lever R.H.	133	62659	Retaining Strip, L.H.	131
62428	Power Transformer Amp.	139	62660	Retaining Bracket, Top	131
62429	Transformer, Low Voltage	139	62661	Gasket Door, 1/16" x 3/16" x 4"	133
62430	Transformer, Output Hi. Fi.	139	62665	Cover and Lever Assem., Coin Register Mechanism	135
62432	Arm and Fall Support Assem., Dome	134	62666	Bracket, Front Door, R.H.	134
62454	Frame, Cash Box Door	132	62667	Bracket, Front Door, L.H.	134
62465	Bracket, Cash Box Door	132	62668	Spacer, Fall Support Bracket	134
62482	Bracket, Tone and Bias Controls	138	62670	Coin Bag Assem.	133
62483	Bias Control and Bracket Assem.	138	62703	Wire, Socket and Bracket Assem.	134
62485	Shaft and Hub Assem., Tone Arm Brush	141	62731	Cover Assem., Hand Hold 4 Used	131
62490	Trim Bead, Upper Pilaster	132	62740	Coin Box Door and Lock Assem.	132
62492	Speaker 12" P.M., Low Range Red Dot	133	62743	Collar, Cam Shaft, Coin Register	137
62493	Speaker 12" P.M., Mid. Range Blue Dot	133	62746	Spring and Pin Assem., Door Frame	134
62496	Terminal Strip, 3 Posts	138	62756	Shaft, Coin Paddle	137
62506	Switch, 4 Pole Tone Control	138	62761	Actuator Arm Assem., Mute and Play Switch	141
62507	Switch, Fader Control	139	62768	Cam Lobe, Mute and Play Switch	141
62508	Choke Coil, 26 Hy	138	62769	Stop Plate, Actuator Arm Mute and Play Switch	141
62509	Coil and Insulator Assem., Choke	138	62773	Spring, Actuator Arm, Mute and Play Switch	141
62514	Wire, Socket, and Bracket Assem., L.H.	135	62777	Contact Ring, Rotary Contactor	137
62519	Coil, Air Core 290 M. H.	140	62786	Wire Clip for Dome	134
62525	Rail and Trim Strip Assem., R.H.	132	62792	Main Cam and Bushing Assem.	141
62526	Rail and Trim Strip Assem., L.H.	132	62781	Cam, Hub and Lock Assem., Coin Register	137
62540	Grille Rail and Trim Strip Assem.	132	62785	Retaining Strip, R.H.	131
62557	Terminal Board Assem. No. 1	140	62793	Plug and Switch Assem.	141
62558	Terminal Board Assem., No. 3	140	62807	Stop Bracket, Cancel Pawl	137
62559	Terminal Board Assem., No. 2	140	62808	Contact Strip, Rotary Contactor	137
62560	Terminal Board Assem., No. 4	140	62809	Link, Solenoid Connection	137
			62814	Counter Wheel and Plate Assem.	137
			62816	Contact Ring, Rotary Contactor	137
			62820	Contact Plate Assem., Coin Register	137
			62825	Cam and Shaft Assem.	137

Model 1800 - Parts Section

Part No.	Description	Page No.	Part No.	Description	Page No.
62826	Pulse Relay	137	63236	Plug, Standard 2 Prong	134, 135
62829	Switch and Resistor Assem., Tone Control	138	63271	Rivnut, 6-32 x 1/2"	132
62831	Coupling, Insulator, and Spring Assem.	137	63272	Extrusion and Rivnut Assem.	132
62833	Screen (Upper Back)	131	63275	Locating Spacer, Pilaster	132
62834	Felt Strip, 8-3/8" x 1/2" x 1/4"	131	63320	Gasket	135
62835	Staple 1/4" x 7/16"	132	63333	Insulator, Selector Switch	132
62840	Key Switch Assem.	137	63354	Classification Slip and Silk Screen (Extended Play Records)	136
62841	Key Switch and Bracket Assem.	137	63359	Shield, Pilaster	135
62842	Choke (Opt.) 62957	139	63360	Felt Strip, 1/16" x 1/4" x 1-1/2"	132
62843	Coil, Speaker Cross Over	133	63362	Mounting Cup and Pad Assem., Pilaster Washer, Special .765" x 1-1/16"	132
62844	Terminal Strip	137	63365	Door Lock	133
62853	Felt Strip 6" x 1/2" x 1/4"	131	63373	Socket and Wire Assem., Speaker	133
62863	Volume Control Assem.	139	63374	Socket and Wire Assem., Speaker	133
62886	Slide Switch D.P.D.T., Speaker Cross Over	133	63376	Shield, Grille Plate	132
62893	Mounting Bracket Assem., L.H. Lock Lever	133	63387	Coin Chute Assem.	135
62894	Mounting Bracket Assem., R.H. Lock Lever	133	63388	Insulator, 1-1/2" x 3"	138
62896	Cable and Plug Assem.	137	63516	Guard, Cancel Pawl	137
62898	Pad, Rubber, 18" x 5/16" x 3/32"	134	63575	Caution Label	131
62899	Pad, Rubber, 17" x 1/4" x 3/32"	134	63623	Pivot Pin, Cancel Pawl	137
62909	Spacer, Wood, for Coil	133	63625	Holder, Operators Card	131
62921	Washer, Mica, 3/16" x 3/4"	139	63643	Pivot, Arm and Pawl Assem., Cancel....	137
62922	Switch and Button Assem., (1 thru 13)	136	63643A	Cancel Pawl Group	137
62923	Switch and Button Assem., (14 thru 26)	136	63650	Speaker, P.M. 4" (Tweeter)	133
62925	Light Reflector, Program Holder	135	63651	Contact Strip, Rotary Contactor	137
62947	Cabinet Wiring and Channel Assem., Fluorescent Lights	135	63652	Bracket, Speaker 4"	133
62953	Bracket, Solenoid, Switch Interlock	137	63653	Panel, Speaker Cross Over	133
62954	Silk Screen (Hi Fidelity)	141	63654	Mounting Board and Bracket Assem., Speaker Cross Over	133
62955	Color Shield and Liner Assem., R.H. ...	132	63655	Light Shield, Program Holder	135
62956	Color Shield and Liner Assem., L.H. ...	132	63657	Cone and Voice Coil, 4" Speaker. Service only	133
62957	Choke (Opt.) 62842	139	63692	Washer, Brass .253 I.D. 3/8" O.D.	137
62962	Gasket and Fibre Strip Assem., Door Glass	134	63731	Shim, Metal .005" Turntable Shaft	141
62964	Lamp Socket Assem.	136	63732	Shim, Fibre, Turntable Shaft, .015"	141
62965	Bonding Strip, Brass, 1/2" x 8-7/16" ...	133	63760	Speaker Mounting Assem., 4"	133
62966	Bracket Shield	140	63777	Classification Slip and Silk Screen (Wurlitzer Music)	136
62968	Resistor and Terminal Strip Assem.	140	63787	Coin Return Coil — Opt.	137
62980	Light Shield, Dome	134	63883	Wire Clip, Dome	134
62987	Light Shield	136	63885	Decal and Instruction Plate Assem. (Return)	136
62993	Heat Shield, Over Amp.	133	63886	Clip and Sleeving Assem.	134
62994	Installation Instructions and Wiring Diagrams Assembly	131	63910	Switch and Button Assem., (Letters) ..	136
62996	Socket and Bracket Assem.	136	63961	Lamp Socket Assem.	136
63131	Spring, .140" I.D. x 1-1/8" Long	137	63962	Socket and Bracket Assem.	136
63138	Spring, Fall Support	134	64052	Reset Escutcheon and Silk Screen. (Reset Program Button)	136
63146	Light Shield	134	64059	Coin Denomination Plate (1 Play Dime — 3 Plays Quarter)	136
63148	Wire Socket, and Bracket Assem., Pilaster, R.H.	135	64179	Bracket, Tone Arm	141
63181	Bracket, Upper Plate	132	64274	Speed Clip	141
63225	Sponge Rubber, Grille Plate	132	70527-265	Capacitor, 51 Mmfd. ±2-1/2% 150V ...	139
63227	Angle Bracket R.H. Cabinet	133	70534-230	Opt. 70534-130 Capacitor 100 Mmfd. ± 5%	140
63228	Angle Bracket L.H. Cabinet	133	70534-130	Opt. 70534-230 Capacitor 100 Mmfd. ± 5%	140
63229	Tie Brace Assem., Cabinet	133	70552-240	Opt. 70552-140 Capacitor 510 Mmfd. ± 10%	140
63235	Backing Plate	136			

Part No.	Description	Page No.	Part No.	Description	Page No.
70552-140	Opt. 70552-240 Capacitor 510 Mmf. ± 10%	140	72244-32	Opt. 72244-42 Resistor 150K, ± 10%, Ins. 1/2 W.	140
70559-240	Capacitor, 1000 Mmf., ± 10% General	139	72244-42	Opt. 72244-32 Resistor 150 K, ± 10%, Ins. 1/2 W.	140
70634-65	Capacitor, 1 Mfd., 50V with Strap	133	72246-31	Opt. 72246-41 Resistor 180K, ± 5%, Ins. 1/2 W.	140
70634-220	Capacitor, 1 Mfd., 200V with Strap	138	72246-41	Opt. 72246-31 Resistor 180K, ± 5%, Ins. 1/2 W.	140
70637-650	Capacitor, 2 Mfd., 50V, with Strap.....	133, 138	72248-32	Opt. 72248-42 Resistor 220K, ± 10%, Ins. 1/2 W.	140
71750-44	Capacitor, .001 Mfd. ± 20% 400 WV ...	140	72248-42	Opt. 72248-32 Resistor 220K, ± 10%, Ins. 1/2 W.	140
71762-44	Capacitor, .01 Mfd., ± 20% 400 WV ...	140	72254-31	Opt. 72254-41 Resistor 390K, ± 5%, Ins. 1/2 W.	140
71766-44	Capacitor, .022 Mfd., ± 20%, 400 WV ...	140	72254-41	Opt. 72254-31 Resistor 390K, ± 5%, Ins. 1/2 W.	140
71770-24	Capacitor, .047 Mfd., ± 20%, 400 WV ...	140	72254-32	Opt. 72254-42 Resistor 390K, ± 10%, Ins. 1/2 W.	140
71770-44	Capacitor .047 Mfd., ± 20%, 400 WV ...	140	72254-42	Opt. 72254-32 Resistor 390K, ± 10%, Ins. 1/2 W.	140
71774-44	Capacitor, .1 Mfd., ± 20%, 400 WV	140	72264-32	Opt. 72264-42 Resistor 1M, ± 10%, Ins. 1/2 W.	140
71865	Resistor, Wire Wound, 5200 Ohms ± 10%, 20 watts	139	72264-42	Opt. 72264-32 Resistor 1M, ± 10%, Ins. 1/2 W.	140
71882-2	Resistor, 15 Ohms, ± 10% 5W	140	72272-32	Opt. 72272-42 Resistor 2.2M, ± 10%, Ins. 1/2 W.	140
71960-2	Resistor, 1250 Ohms, W.W., 20 Watt ...	138	72272-42	Opt. 72272-32 Resistor 2.2M, ± 10%, Ins. 1/2 W.	140
72192-32	Opt. 72192-42 Resistor 1K, ± 10%, Ins. 1/2 W.	140	72352-32	Opt. 72352-42 Resistor 4.7K, ± 10%, Ins. 1 W.	140
72192-42	Opt. 72192-32 Resistor 1K, ± 10%, 1/2 W. Ins.	140	72352-42	Opt. 72352-32 Resistor 4.7K, ± 10%, Ins. 1 W.	140
72202-32	Opt. 72202-42 Resistor 2.7K ± 10%, Ins. 1/2 W.	140	72362-32	Opt. 72362-42 Resistor 12K, ± 10%, Ins. 1 W.	140
72202-42	Opt. 72202-32 Resistor 2.7K ± 10%, Ins. 1/2 W.	140	72362-42	Opt. 72362-32 Resistor 12K, ± 10%, Ins. 1 W.	140
72214-32	Opt. 72214-42 Resistor 8.2K, ± 10%, Ins. 1/2 W.	140	72372-32	Opt. 72372-42 Resistor 33K, ± 10%, Ins. 1 W.	140
72214-42	Opt. 72214-32 Resistor 8.2K, ± 10%, Ins. 1/2 W.	140	72372-42	Opt. 72372-32 Resistor 33K, ± 10%, Ins. 1 W.	140
72216-32	Opt. 72216-42 Resistor 10K, ± 10%, Ins. 1/2 W.	140	72377-31	Opt. 72377-41 Resistor 51K, ± 5%, Ins. 1 W.	140
72216-42	Opt. 72216-32 Resistor 10K, ± 10%, Ins. 1/2 W.	140	72377-41	Opt. 72377-31 Resistor 51K, ± 5%, Ins. 1 W.	140
72218-31	Opt. 72218-41 Resistor 12K, ± 5%, Ins. 1/2 W.	140	72384-31	Opt. 72384-41 Resistor 1M, ± 5%, Ins. 1 W.	140
72218-41	Opt. 72218-31 Resistor 12K, ± 5%, Ins. 1/2 W.	140	72384-41	Opt. 72384-31 Resistor 1M, ± 5%, Ins. 1 W.	140
72224-32	Opt. 72224-42 Resistor 22K, ± 10%, Ins. 1/2 W.	140	72995-2	Resistor, 250 Ohms, ± 10%, W.W. 5W	140
72224-42	Opt. 72224-32 Resistor 22K, ± 10%, Ins. 1/2 W.	140	73002-48	Capacitor .0005 Mfd. ± 20%, 1600 W.V.	140
72228-32	Opt. 72228-42 Resistor 33K, ± 10%, Ins. 1/2 W.	140	73008-21	Capacitor, .003 ± 10%, Tub. 100 W.V.	140
72228-42	Opt. 72228-32 Resistor 33K, ± 10%, Ins. 1/2 W.	140	73093-240	Capacitor, .1 Mfd. ± 10%, 400 W.V.	139
72230-32	Opt. 72230-42 Resistor 39K, ± 10%, Ins. 1/2 W.	140	73095-220	Capacitor with strap .2 Mfd., 200 W.V.	138
72230-42	Opt. 72230-32 Resistor 39K, ± 10%, Ins. 1/2 W.	140	73098-210	Capacitor with strap .4 Mfd., 100V	138
72232-31	Opt. 72232-41 Resistor 47K, ± 5%, Ins. 1/2 W.	140	73293-110	Capacitor 20 Mfd., 25 W.V.	138
72232-41	Opt. 72232-31 Resistor 47K, ± 5%, Ins. 1/2 W.	140	73474	Capacitor, Electrolytic 20, 20, 10, 20 Mfd., 275, 275, 338, 35 W.V.	139
72234-32	Opt. 72234-42 Resistor 56K, ± 10%, Ins. 1/2 W.	140	73475	Capacitor, Electrolytic 30, 20, 20, 25 Mfd., 500, 400, 400, 50 W.V.	139
72234-42	Opt. 72234-32 Resistor 56K, ± 10%, Ins. 1/2 W.	140	73503-21	Screw, 4-40 x 1/8" R.H. Mach.	134
72236-32	Opt. 72236-42 Resistor 68K, ± 10%, Ins. 1/2 W.	140			
72236-42	Opt. 72236-32 Resistor 68K, ± 10%, Ins. 1/2 W.	140			

Part No.	Description	Page No.	Part No.	Description	Page No.
73503-130	Screw 1/4-20 x 1-1/8" R.H. Phillips ...	133	73593-30	Screw, 3/4"-10 R.H., Type "A"	133
73511-19	Set Screw, Socket Head 6-32 x 3/16"...	135	73597-20	Screw, 1/2"-8 F.H., P.K., Type "A"	132
73533-2	Screw, 4-40 x 1/4", R.H. Sems	137	73601-1	Nut, 2-56 Hex.	139
73533-21	Screw, 6-32 x 3/16", R.H. Sems	137	73601-3	Nut, 4-36 Hex.	135, 137
73533-22	Screw, 6-32 x 1/4" R.H. Sems	136, 137, 141	73601-6	Nut, 6-32 Hex.	133, 138, 139, 140, 141
73533-25	Screw, 6-32 x 7/16" R.H. Sems	141	73601-7	Nut, 8-32 Hex.	134, 137, 138, 139
73533-27	Screw, 6-32 x 5/8" R.H. Sems	137	73603-8	Nut, 10-32 Hex.	133
73533-31	Screw, 6-32 x 1-1/8" R.H. Sems	132	73604-3	Lock Washer, #4 Ext.	135
73533-34	Screw, 8-32 x 1/4", R.H. Sems	134, 136	73604-5	Lock Washer, #6 Ext.	133, 137
73533-35	Screw, 8-32 x 5/16", R.H. Sems	134, 135, 136	73604-6	Lock Washer, #8 Ext. Type 11	134, 137, 141
73533-36	Screw, 8-32 x 3/8", R.H. Sems	132, 134	73605-5	Lockwasher, #6 Kant	138
73534-14	Screw, 5-40 x 3/8", Bind Hd. Sems	141	73605-6	Lockwasher, #8 Kant	138, 139
73534-34	Screw 8-32 x 1/4", Bind Hd. Sems	137	73605-7	Lockwasher, #10 Kant	133
73535-89	Screw, 8-32 x 3/8", O.H. Machine	132	73605-9	Lockwasher, 1/4" Kant	133
73540-39	Screw, Wood No. 6 Oval Hd.	134	73607-3	Lockwasher, #4, Int. Type 12	134, 137
73545-59	Screw	132	73607-5	Lockwasher, No. 6 Int.	133, 138, 140
73545-79	Screw, 1-1/2"-9 F.H. Wood	132	73607-11	Lockwasher, 3/8" Int.	139
73549-65	Screw, 1-1/4"-8 R.H. Wood	132, 134	73607-13	Lockwasher, 1/2" Int.	139
73549-67	Screw, 1-3/4" — 8, Wood R.H.	134	73632-11	Spring Washer, 13/64" x 3/8" Shakeproof 3535-10-1	134
73568-22	Screw, 6-32 x 1/4" R.H. T.C.	134	73634-5	Nail, Cement Coated, 5d x 1-5/8"	132
73568-35	Screw, 8-32 x 5/16" R.H. T.C.	132	73656-71	Screw, 6-32 x 5/8" R.H. Phillips	141
73572-72	Screw, 6-32 x 3/4", R.H. Phillips	140	73677-11	Lockwasher, 1/4" Black Int. — Ext.	133
73574-7	Screw, 3/8"-2 R.H. Wood	139	73691-22	Screw, 6-32 x 1/4" R.H. Sems	133
73574-17	Screw, 3-48 x 1/2" R.H.	138	73691-23	Screw, 6-32 x 5/16" R.H. Sems	139
73574-24	Screw, R.H. Mach. 4-40 x 5/16"	135	73691-33	Screw, 8-32 x 3/16" R.H. Sems	133, 135
73574-31	Screw, 5-40 x 1" R.H.	141	73691-34	Screw, 8-32 x 1/4" R.H. Sems	135
73574-38	Screw, 4-36 x 5/16" R.H. Mach.	134, 135	73691-36	Screw, 8-32 x 3/8" R.H. Sems	135
73574-41	Screw, 4-36 x 1/2" R.H. Mach.	134, 135	73692-46	Screw, 10-32 x 1/4" R.H. Sems	135
73574-43	Screw, R.H. Mach., 4-36 x 3/4"	135	73704-8	Cable Clip, Tinnerman 8-32-4	140
73574-66	Screw, 6-32 x 1/4" R.H.	133	73723-29	Brad, 1/2" #18 Wire	132
73574-67	Screw, 6-32 x 5/16", R.H.	140	73724-9	Retaining Ring, Truarc No. 9	137
73574-70	Screw, 6-32 x 1/2" R.H.	133	73724-15	Retaining Ring, Truarc No. 15	137
73574-90	Screw, 8-32 x 5/8" R.H.	131	73724-18	Retaining Ring, .187" - .145", Truarc "E"	134, 141
73574-96	Screw, 8-32 x 1-1/2" R. H.	133	73724-21	Retaining Ring, Truarc No. 21	137
73574-100	Screw, 8-32 x 2-1/2" R.H.	138, 139	73724-25	Retaining Ring, Ext. Truarc Type "E" .210"	135
73575-91	Screw, 10-32 x 1/2" R.H.	132	73731-39	Screw, 8-32 x 5/8" Bind Hd. Sems	139
73577-77	Screw, 6-32 x 1-1/2" R.H. Brass	133	73739-30	Nail 1/2"-#17 F.H. Wire	132
73583-65	Screw, 6-32 x 3/16" Bind Hd.	134	73739-40	Nail, Steel 5/8" x #18	131
73583-66	Screw, 6-32 x 1/4" Bind Hd.	139	73787-85	Screw, 8-32 x 1/4" Truss Hd.	134
73586-23	Screw, 4-40 x 1/4", F.H.	134	73789-2	Nut, 8-32 Flexloc, Thin	131
73586-52	Screw, 5-40 x 5/16" F.H.	134	73797-2	Pal Nut, 4-40, Hex.	134
73590-12	Screw, 1/4"-6 P.K. Type, "Z"	140	95834	Cable, Clamp, H.P. 6N 3/8" I.D.	135
73590-13	Screw, 5/16"-6, R.H. P.K. Type "Z" ..	139	95836	Cable Clamp, H.P. 6N	133, 135
73592-20	Screw, 1/2"-8 R.H., P.K. Type "A"	131, 132, 133, 135	99202	Nut, 6-32 Hex. Std. Brass	133
73592-21	Screw, 5/8"-8 R.H., P.K. Type "A"	132, 133, 135	1051197	Rail, Grille, R.H. and L.H.	132
73592-22	Screw, 3/4"-8 R.H., P.K., Type "A"	132	1051208	Grille Rail and Trim Plate Assem.	132
73593-8	Screw, 1/2"-6 R.H., P.K., Type "A"	135	1051242	Retainer	134
73593-21	Screw, 5/8"-8 R.H., P.K., Type "A"	135	1051250	Wood Strip	134
73593-22	Screw, 3/4"-8 R.H., P.K. Type "A"	133	1051321	Coin Box Door (Wood Only)	132
73593-29	Screw, 5/8"-10 R.H., Type "A"	133			