

SERVICE SLANTS

YOUR QUESTIONS OR COMMENTS ON "SERVICE SLANTS"
ARE WELCOME AT ANY TIME

ISSUED BY WURLITZER SERVICE DEPT. NORTH TONAWANDA, N. Y.

THIS SLANT IS DESCRIPTIVE OF HOW THE NEW MODEL 3031 MULTI-WIRE WALL BOX MAY BE USED IN CONNECTION WITH THE OLD STYLE MODEL 130 ADAPTER.

The Model 130A Adapter is the type used in Model 750E phonograph. Where either the 130 or 130A is being used in any phonograph such as 500, 600, etc., it will be necessary to make a change in Model 3031 Wall Boxes.


When connecting a Model 3031 Wall Box it will be found that the coin switch magnet remains energized after coin passes through coin switch.

Correct by removing Brown wire from coil of coin switch magnet. (tape end of wire) See sketch below.


Also place jumper wire from No. 25 to No. 28 of terminal board in wall box. See sketch below.

Be certain these two changes are made in all Model 3031 Wall Boxes on such location,

Cable connections are made from terminals No. 1 through No. 25 of terminal board on Model 130 Adapter to No. 1 through No. 25 respectively on board in wall box and Terminal No. 27 to No. 27. Do Not make cable connections on No. 26 or No. 28.

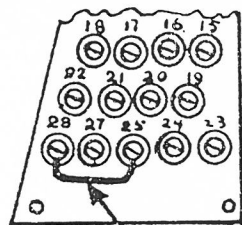

Install jumper wire.

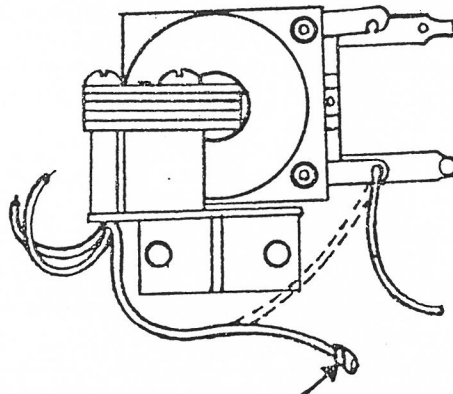

Unsolder wire and tape end.

W 177