


INSTRUCTIONS

For Connecting Auxiliary Speakers To Main Amplifier (Model 506) (Model 1080-A and 1100 Phonographs)


SPEAKERS WITH MATCHING TRANSFORMERS

Speaker Models: 4004-A, 4005-A
4006-A, 4007 & 4008


One speaker (having single terminal board):

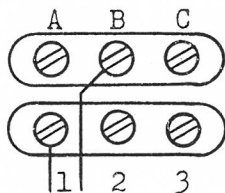


One speaker (having double terminal board):

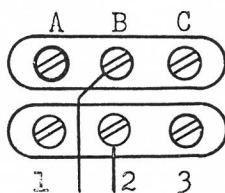

Two speakers (either type):

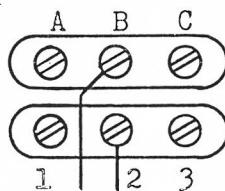

Three speakers (either type):

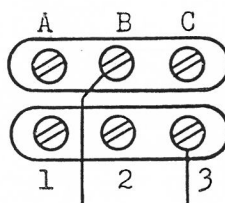


SPEAKERS WITHOUT MATCHING TRANSFORMERS


$3\frac{1}{2}$ ohm speakers, Models 160, 210,
220, 4000*, 4002*, 4003, 4004,
4005, 4006.

(*Star Models With 8 Inch Speakers)

One Speaker:

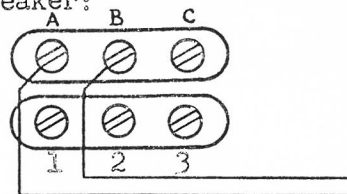

Two speakers:

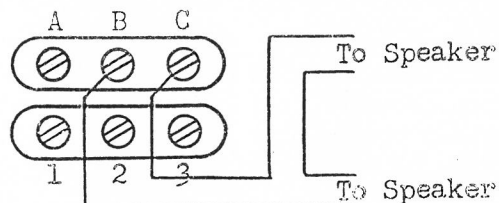


SPEAKERS WITHOUT MATCHING TRANSFORMERS


8 ohm speakers, Models 36, 37, 38,
39, 240, 580, 250, 420, 425, 430,
4000*, 4002*, 4009, 29577

(*Star Models With 12 Inch Speaker)

One Speaker:

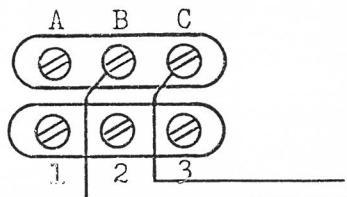

Two speakers:

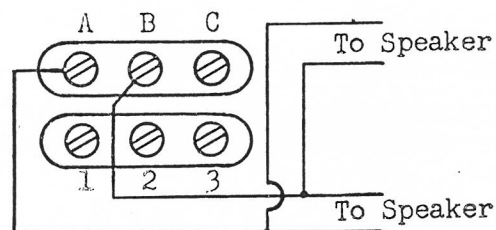

FADER SWITCH OPERATION

Switch is accessible from rear of phonograph. **IMPORTANT**
When no auxiliary speakers are connected **BE SURE** switch
is in PHONO ONLY position.

When using auxiliary speakers:

- Pos. "A" most power in phono
- Pos. "B" equal power in phono & aux.
- Pos. "C" most power in aux.

