

REWIRING FOR MODEL 1250

RECORD SELECTION IN NUMERICAL SEQUENCE

27 Prong Plug

1	2	3
4	5	6
7	8	9
10	11	12
13	14	15
16	17	18
19	20	21
22	23	24
25	26	27

Fig. 1

24 Prong Plug

25	26	27
28	29	30
31	32	33
34	35	36
37	38	39
40	41	42
43	44	45
46	47	48

Fig. 2

By rewiring the two male Jones plugs of the Electric Selector Assembly in accordance with Fig. 1 and 2, this will permit arranging records to play top and underside in a #1 - 2 - 3 - 4 sequence.

This enables customer to select in the same manner from Wall Boxes at remote stations or at the Phonograph without any other changes.

Black numbers in Fig. 1 and 2 represent present wiring, red would be rewiring for front and back, top to bottom of stack.

Numbers 25, 26 and 27 on the 27 prong plug are NOT to be moved.

The numbers may be removed from the tray tabs or the tabs may be renumbered. One set of the tray tab numbers are made up on a decal covered by our part number 53510.