

WURLITZER

YOUR QUESTIONS OR COMMENTS ON "SERVICE SLANTS" ARE WELCOME AT ANY TIME

SUBJECT: Transfer Switch, Part No. 128344, on Model 3500 Series Phonographs.

COMPLAINT: Intermittent operation of Transfer Switch.

CAUSE: Excessive Silicone grease used to lubricate the Track Cam of the Cam and Gear Assembly building up on Transfer Switch and seeping into switch body.

CORRECTION: If the above complaint is occurring, perform the following:

- 1. Remove Transfer Switch.
- 2. Wipe Silicone grease from Track Cam.
- 3. Install new Transfer Switch.

4. Adjust Transfer Switch in accordance with TRANSFER SWITCH ADJUSTMENT, Page 12 C, 3500 Series Service Manual.