



**1**


1. Place the gripper arm over the CD-player (play position). Set the gear motor switch to "OFF"..
2. Remove this screw of the K8 support.
3. Loose the other screw of the support and move it a little to the side.
4. Loose the 10 mm nut of the lever.

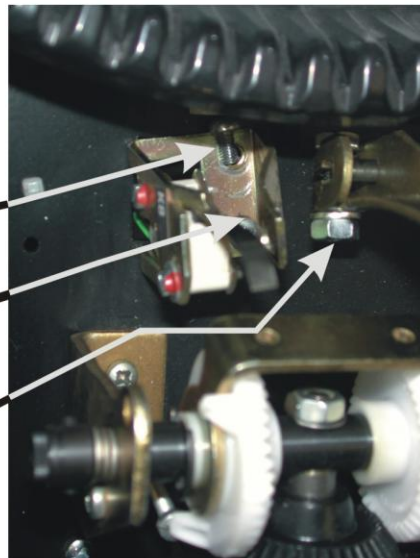

**3**

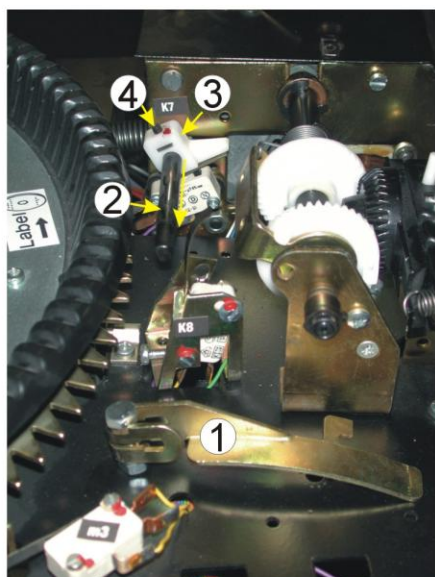


**2**

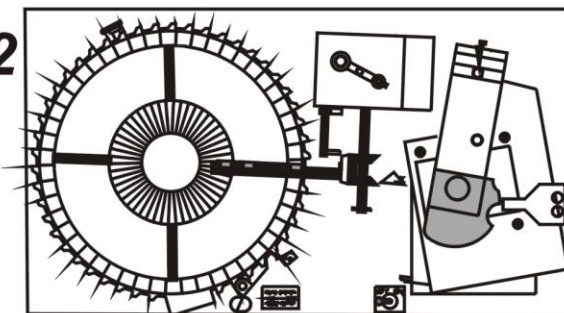


Gear motor switch

**4**

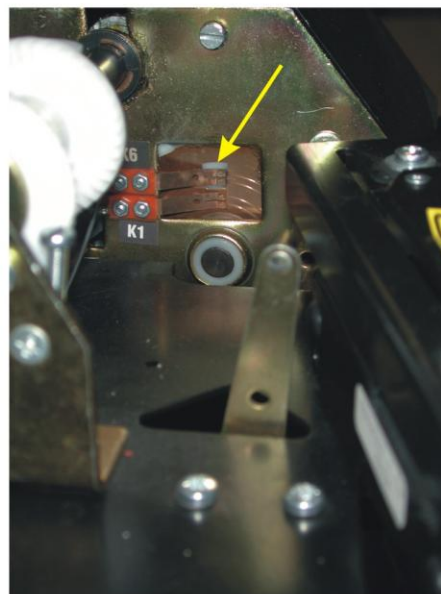

Remove the lever (1) from the axis (2)  
Remove also the white lever (3) by loosening the worm screw (4) with the allen wrench key.  
Mount and fix the parts in

**5**

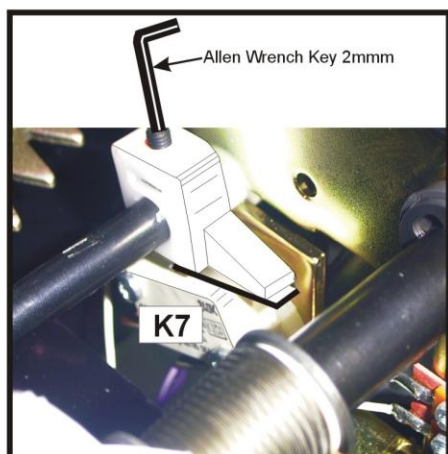

1. Set the gear motor switch to ON again.  
(If the gear motor doesn't move, just make a short circuit with a screw driver from K6 (wipper contact) against the gear box metal.)
2. Stop the gear motor when you see that the end of the K6 is over the white interrupting gap.
3. Push down the white lever on the micro switch K7 and tighten it with the allen wrench key.